



**INSTRUCTIONS:**

**TO ATTACH THE CASTERS TO THE TABLE**

- 1.- INSERT THE POST OF THE CASTER INTO THE NUT INSERT AND PUSH FIRMLY

HARDWARE	
DESCRIPTION	# PCS
CASTER	4

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT



**ASSEMBLY INSTRUCTIONS**

I-CKT-C001