



#### INSTRUCTIONS:

- 1.- PLACE THE CENTRAL BOX LATERALLY ON A CLEAN AND FLAT SURFACE TO FIX THE LEGS AS SHOWN IN FIG. 1.
- 2.- ONCE THE LEGS ARE ON ITS PLACE, USE THE LONGER HEX BOLTS AND WASHERS TO FIX THE LEGS FROM THE BOTTOM AS SHOWN IN FIG. 2.
- 3.- WITH SOMEONE ELSE'S HELP, PLACE THE BASE UPRIGHT ON THE FLOOR AND PUT THE TOP IN ITS PLACE, AS SHOWN IN FIG. 3.
- 4.- FINALLY FIX THE TOP WITH THE SHORTER HEX BOLTS AND WASHERS AS SHOWN IN FIG. 4

HARDWARE	
DESCRIPTION	# PCS
SOCKET BUTTON HEAD BOLT 5/16 X 2-1/2"	4
WASHER 5/16"	12
HEX BOLT 5/16 X 2-1/2"	4
HEX BOLT 5/16 X 2"	8
ALLEN KEY 3/16"	1

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT



## ASSEMBLY INSTRUCTIONS

I-CNT-C003-BK