


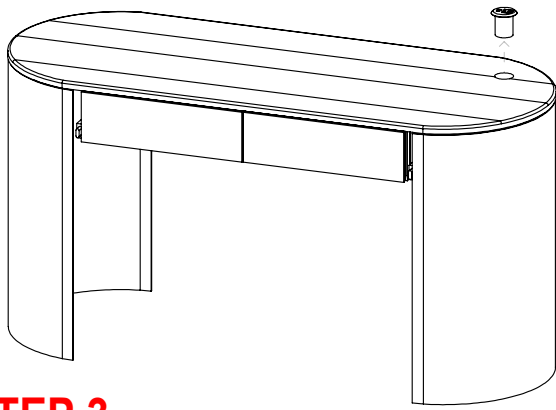

STEP 1



1. REMOVE THE CONTACT FROM THE COVER

STEP 2

2. WITH SOMEONE ELSE'S HELP, PLACE THE TOP UPSIDE DOWN ON A CLEAN SURFACE



STEP 3

3. ALIGN THE LEGS WITH THE HOLES IN THE BOTTOM OF THE COVER AND FIX IT USING THE DOWEL 1/2 X 1-1/2"

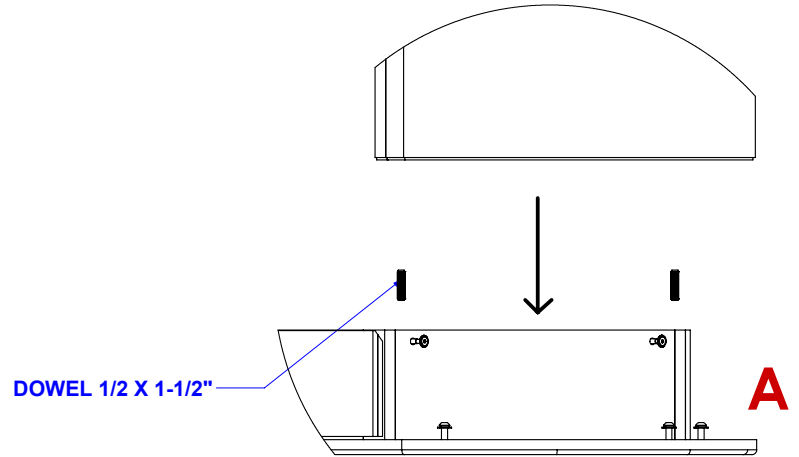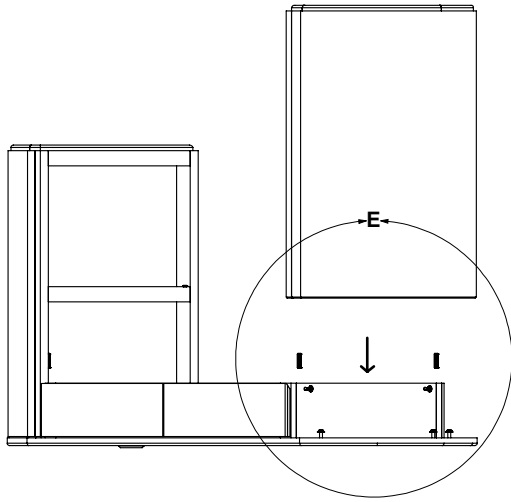

STEP 4

4. ONCE'S THE LEGS ARE IN PLACE, INSERT THE SOCKET ALLEN BUTTON HEAD 5/16 x 1-1/4" AS SHOWN IN PICTURE B.

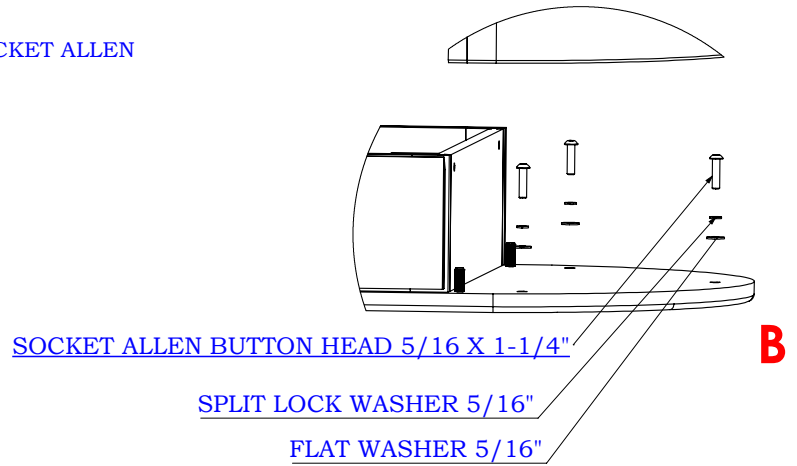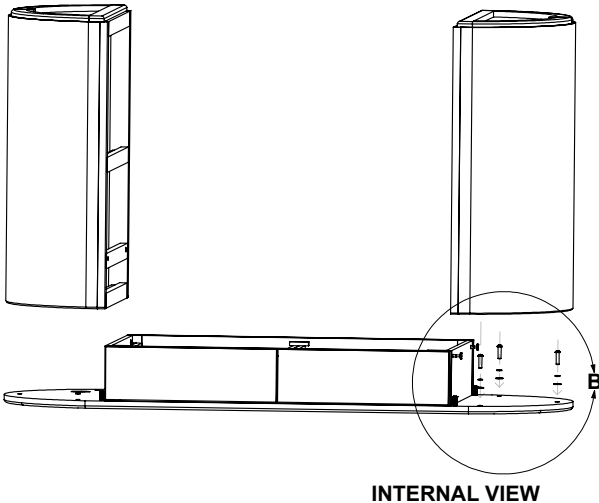

DESCRIPCION	#
FLAT WASHER 5/16"	6
SPLIT LOCK WASHER 5/16"	6
SOCKET ALLEN BUTTON HEAD 5/16 X 1-1/4"	6
DOWEL 1/2 X 1-1/2"	4
JOIN CONNECTOR BOLT 1/4 X 1-1/2"	4
ALLEN KEY 3/16"	1




ASSEMBLING
INSTRUCTIONS

I-DSK-E018


STEP 5

POSITION YOURSELF ON THE INNER SIDE OF THE PANEL.
INSERT THE 1/4 X 1-1/2" CONNECTOR BOLT,
ALIGNING IT WITH THE HOLES. REPEAT THE
SAME ACTION ON THE OTHER SIDE.

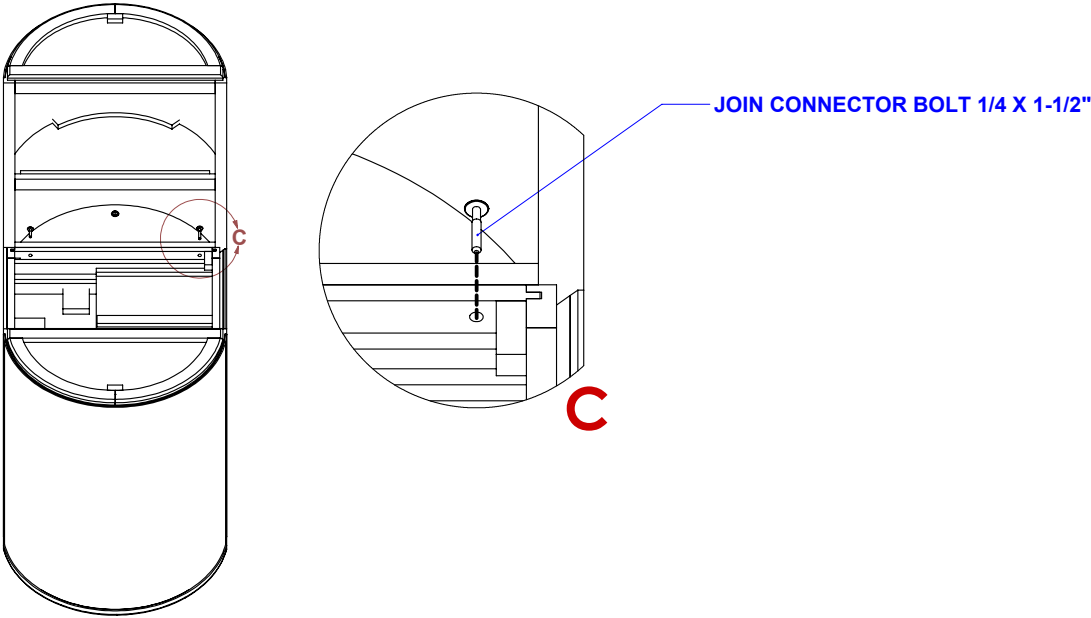

STEP 6

6. FINALLY, PUT THE CONTACT TOOTH
BACK IN PLACE

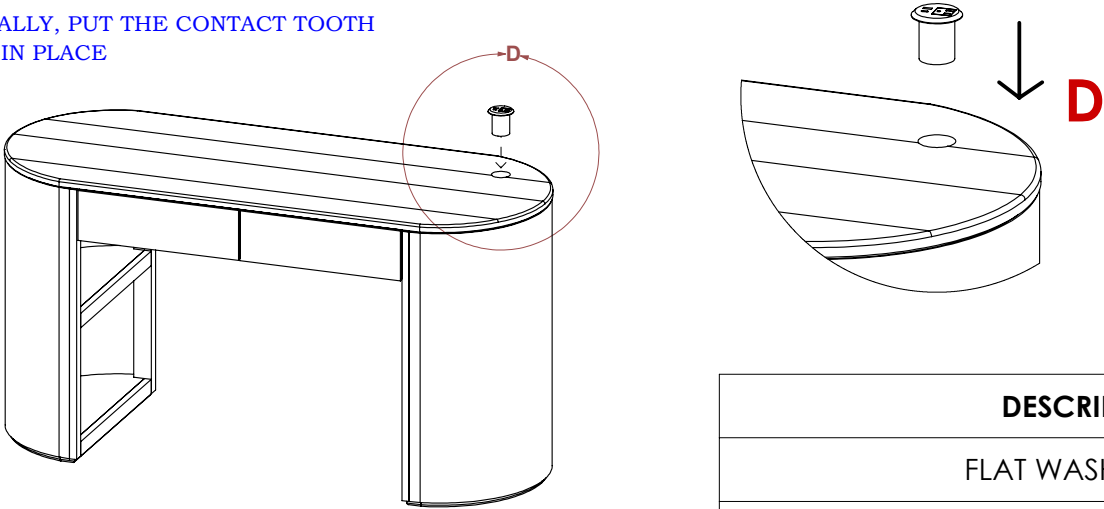

ASSEMBLING INSTRUCTIONS		DESCRIPCION	#
	I-DSK-E018	FLAT WASHER 5/16"	6
		SPLIT LOCK WASHER 5/16"	6
		SOCKET ALLEN BUTTON HEAD 5/16 X 1-1/4"	6
		DOWEL 1/2 X 1-1/2"	4
		JOIN CONNECTOR BOLT 1/4 X 1-1/2"	4
		ALLEN KEY 3/16"	1

DESCRIPCION	#
RONDANA PLANA 5/16"	6
RONDANA DE PRECION 5/16"	6
TORNILLO ALLEN CABEZA BOLA 5/16 X 1-1/4"	6
PERNO DE MADERA 10 X 40 mm	4
TORNILLO PERNO UNION DE 1/4" X 40MM	4
LLAVE ALLEN 3/16"	1
EL TORNILLO PERNO UNION NO ES NECESARIO PINTARLO VA POR LA PARTA INTERNA	



ASSEMBLING
INSTRUCTIONS

I-DSK-E018