


REMEMBER: THE IMAGES ARE FOR ILLUSTRATIVE PURPOSES ONLY.



STEP 1

REMOVE THE SCREWS FROM THE BACK OF THE ELECTRIC FIREPLACE, THEN USE THE SAME HOLES TO INSTALL THE BRACKETS

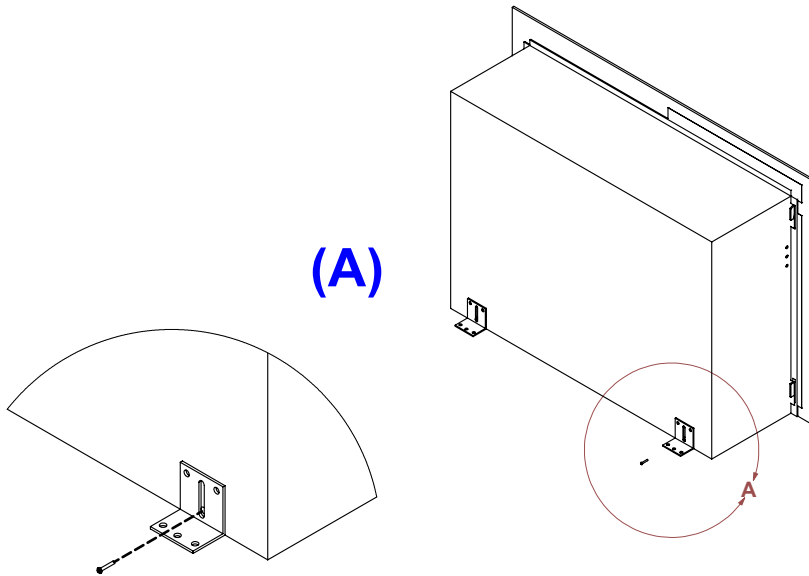

STEP 2

AS SHOWN IN FIGURES (B) AND (C), PLACE THE ELECTRIC FIREPLACE WITHOUT THE SCREEN INTO THE FURNITURE, USE THE TEMPLATE PROVIDED IN THE ENVELOPE TO ALIGNING THE SIDE (DETAIL B), THEN ADJUST IT 1/8" INSIDE OF THE FURNITURE (DETAIL C)

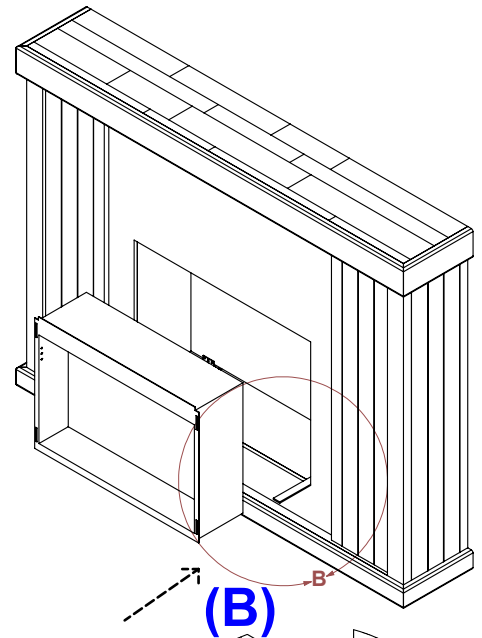
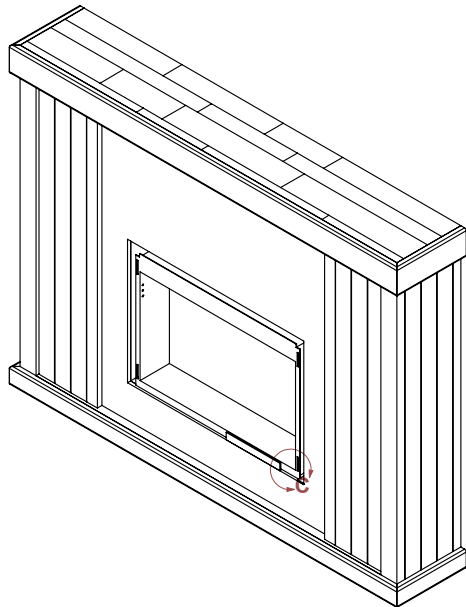


(C)

TRUCK
IN 1/8"

GUIDE

(B)

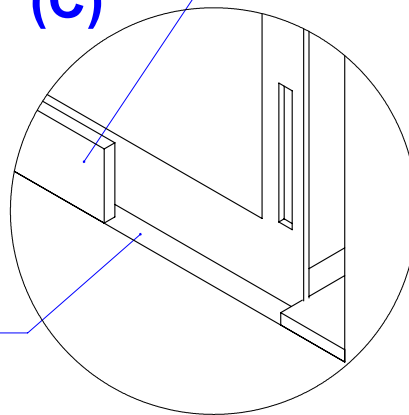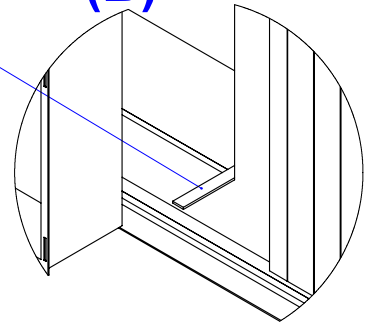

ifd


INTERNATIONAL
FURNITURE DIRECT, LLC

ASSEMBLING
INSTRUCTION



I-EFP-A02

STEP 3

NOW, AT THE BACK, FIX THE BRACKETS TO THE CABINET USING SCREWS AS SHOWN IN FIG. (D).

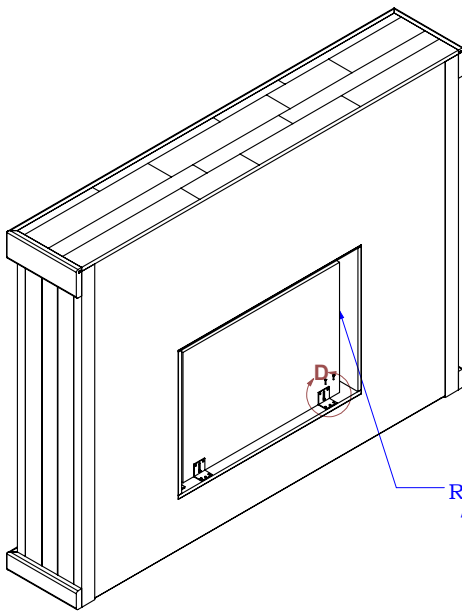


 
REMEMBER TO HAVE CENTERED THE CHIMNEY BEFORE FIXING IT WITH THE CABINET.

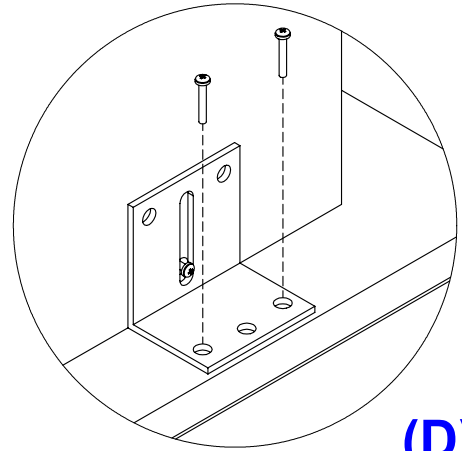

(D)

STEP 4

THE HOOKS LOCATED AT THE BACK OF THE SCREEN SHOULD BE ATTACHED BY ALIGNING THE THE HOOKS LOCATED AT THE BACK OF THE SCREEN WITH THE OPENINGS OF THE ELECTRICAL FIREPLACE AND PALCE IT.

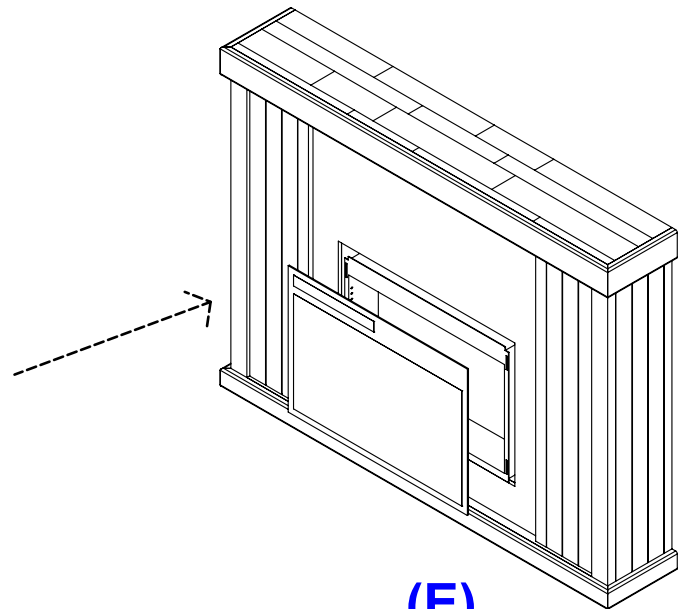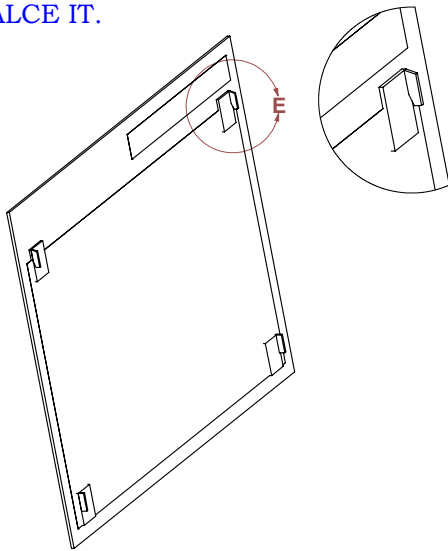

(E)