



ASSEMBLY INSTRUCTIONS

I-KSL-C002

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

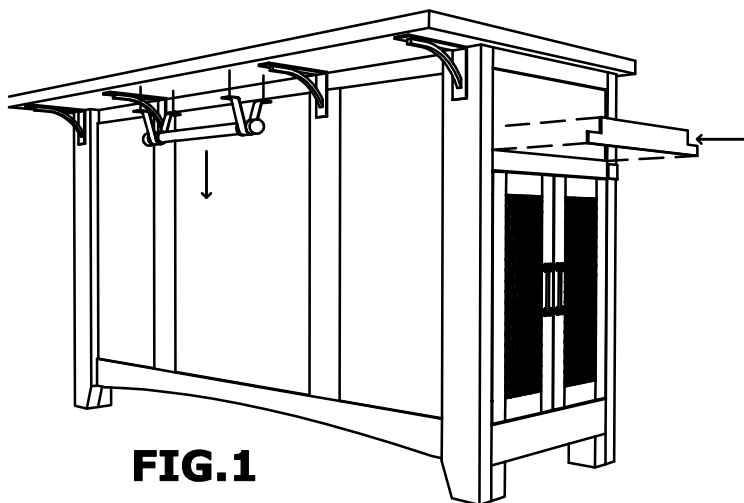


FIG.1

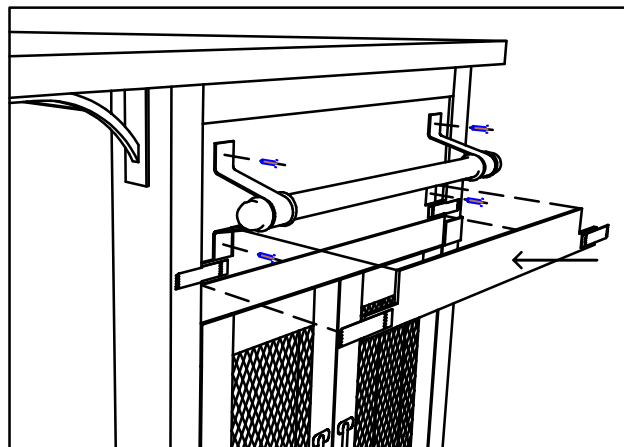


FIG.2

NOTE: THE "FIXED CASTERS"
ARE INCLUDED INSIDE
LATERAL DOORS


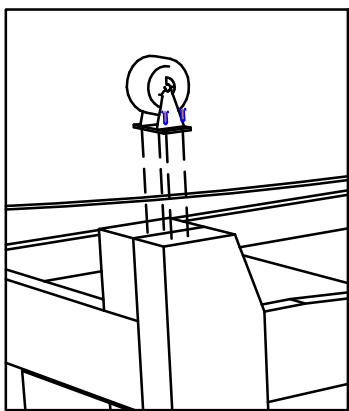


FIG.3

ATTACH THE "FIXED
CASTERS"

ATTACH THE "ROTATE
CASTERS"

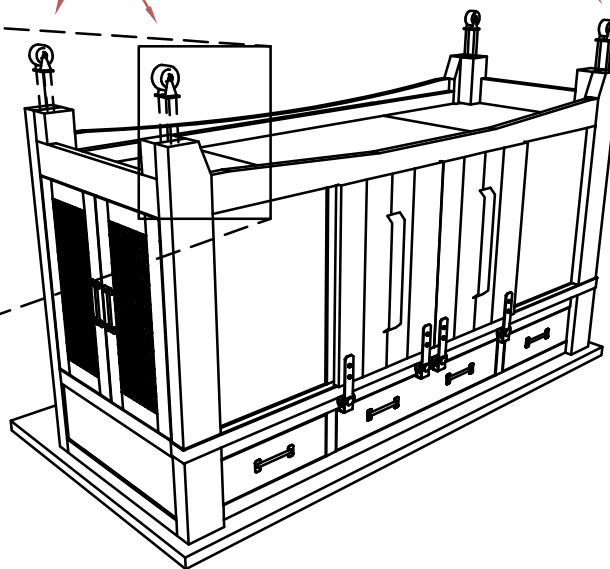

INSTRUCTIONS

TO ATTACH THE TOWEL RAIL TO THE ISLAND

- 1.- UNSCREW FROM DOWN OF THE TOP, AS SHOWN FIG.1 THEN PLACE THE MDF GUIDE TO THE DESIRED SIDE OF ISLAND AND STICK ON THEM WITH MASKING TAPE AS SHOWN IN FIG.2
- 2.- CENTER THE TOWEL RAIL USING THE MDF GUIDE, SCREW IT AND REMOVE THE MDF GUIDE.

TO ATTACH THE CASTERS

- 1.- WITH SOME ONE ELSE'S HELP, PLACE THE TOP OF THE KITCHEN-ISLAND UPSIDE DOWN OVER A CLEAN AREA.
- 2.- ATTACH THE TWO "ROTATE CASTERS" ON THE SAME SIDE OF THE KITCHEN-ISLAND THEN PLACE THE "FIXED CASTERS" ON THE OPPOSITE SIDE AND SCREW AS SHOWN IN FIG.3
- 3.- TURN BACK THE TOP FROM THE ISLAND CAREFULLY.

HARDWARE

DESCRIPTION	# PCS
ROTATE CASTERS	2
FIXED CASTERS	2
PAN HEAD SCREW 8 X 1"	16