
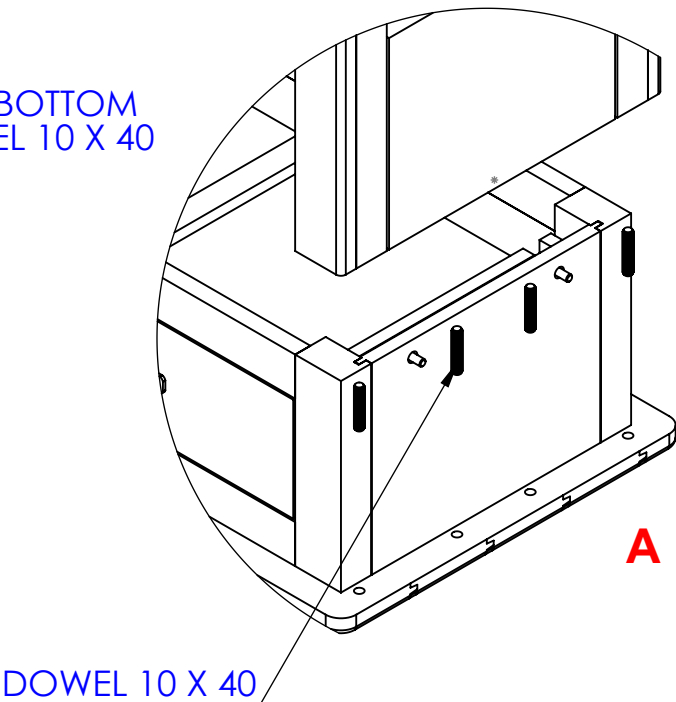


STEP 1

1. WITH SOMEONE ELSE'S HELP, PLACE THE TOP UPSIDE DOWN ON A CLEAN AND FLAT



STEP 2

2. ALIGN THE LEGS WITH THE HOLES IN THE BOTTOM OF THE COVER AND FIX IT USING THE DOWEL 10 X 40

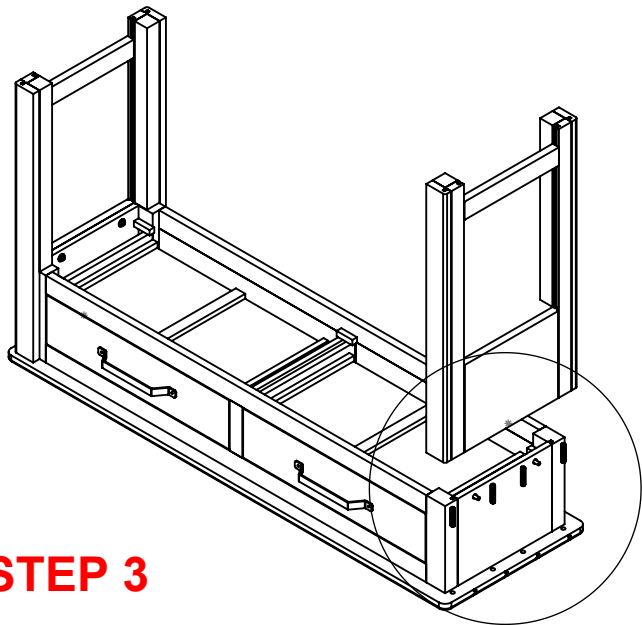

STEP 3

3. ONCE'S THE LEGS ARE IN PLACE, INSERT THE SOCKET ALLEN BUTTON HEAD 5/16 x 1-1/4" AS SHOWN IN PICTURE.

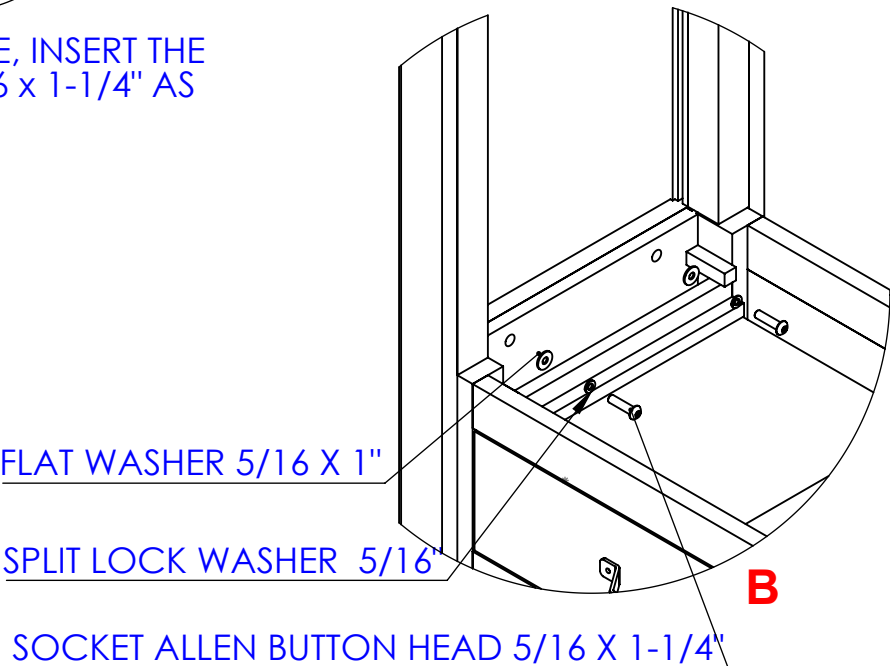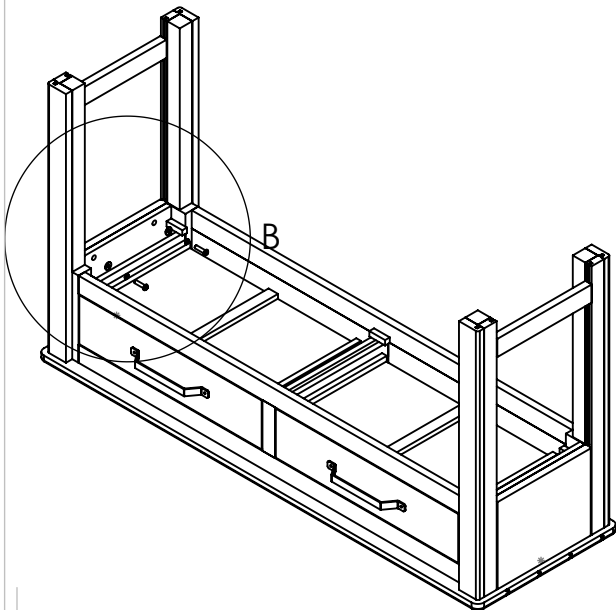

DESCRIPTION	#
FLAT WASHER 5/16 X 1"	4
SPLIT LOCK WASHER 5/16"	4
SOCKET ALLEN BUTTON HEAD 5/16 X 1-1/4"	4
DOWEL 10 X 40	8
ALLEN KEY 3/16	1

DESCRIPCION	#
RONDANA PLANA 5/16 X 1	4
RONDANA DE PRECION 5/16	4
TORNILLO ALLEN 5/16 X 1-1/4"	4
PERNO 10 X 40	8
LLAVE ALLEN 3/16	1



INTERNATIONAL
FURNITURE DIRECT, LLC

CODIGO:

COLECCION: