


1

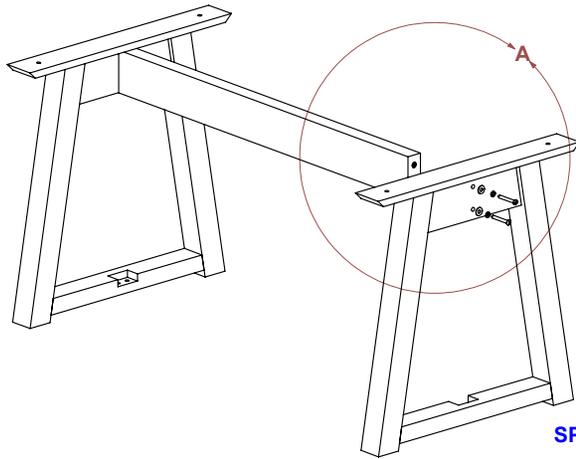

A

SOCKET BUTTON HEAD 5/16 X 1-1/2"


SPLIT LOCK WASHER 5/16"

FLAT WASHER 5/16"

FLAT WASHER 5/16"


SPLIT LOCK WASHER 5/16"

SOCKET BUTTON HEAD 5/16 X 2-1/2"

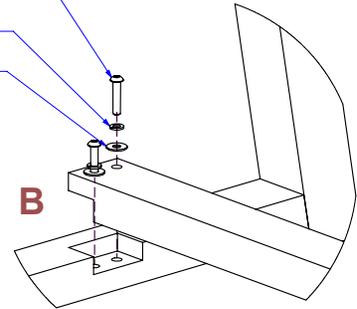

B

2

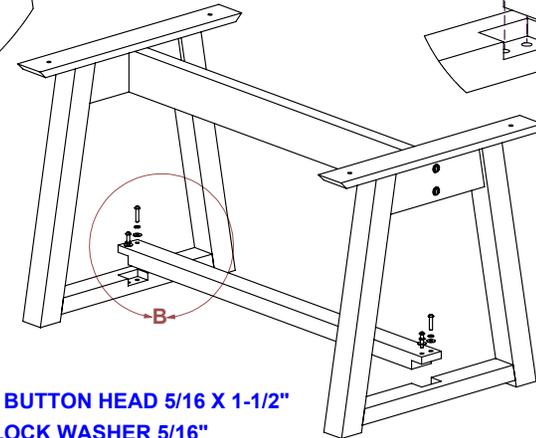

B


SOCKET BUTTON HEAD 5/16 X 1-1/2"

SPLIT LOCK WASHER 5/16"

FLAT WASHER 5/16"

C

3

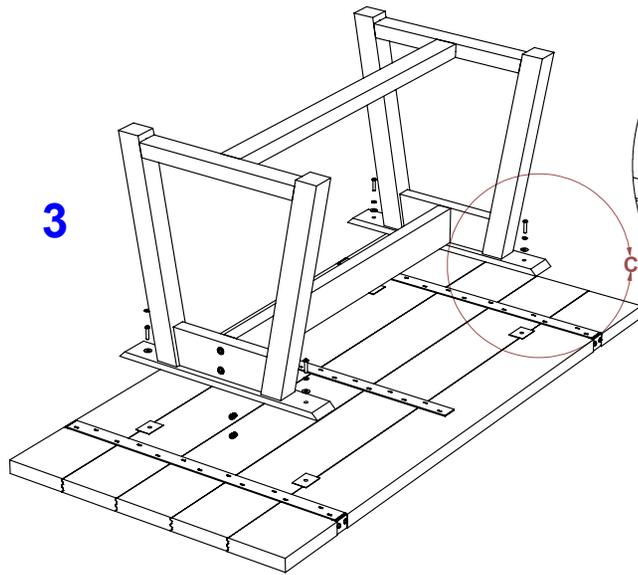

1. - WITH THE HELP OF SOMEONE ELSE, ALIGN THE LEGS WITH THE TOP CROSSBAR AND INSERT THE SOCKET BUTTON HEAD AS SHOWN IN FIG.A.
2. - THEN PLACE THE SECOND CROSSBAR IN THE BOTTOM LEGS AND INSERT THE SOCKET AS SHOWN IN FIG.B.
3. - BY LAST WITH CAREFULLY PLACE THE TOP IN CLEAN AND FLAT SURFACE, TURN THE LEGS AND ALIGN THE LEGS HOLES WITH THE TOP HOLES AND INSERT THE SOCKETS AS SHOWN IN FIG. C.
4. - WHEN ALL THE SCREWS ARE IN THE TABLE TURN UP AN LEAN THE TOP.



INTERNATIONAL
FURNITURE DIRECT, LLC

ASSEMBLING INSTRUCTIONS

I-TBL-E007

DESCRIPTION	#
SOCKET BUTTON HEAD 5/16 x 1-1/2"	8
SOCKET BUTTON HEAD 5/16 x 2-1/2"	4
SPLIT LOCK WASHER 5/16"	12
FLAT WASHER 5/16"	12
ALLEN KEY 3/16"	1