


## **INSTRUCTIONS**

NOTE: ASSEMBLE THE BAR WITH SOMEONE ELSE'S HELP.

- 1.- START BY PLACING THE TOP OVER THE BASE AND USE THE DRYWALL SCREWS TO FIX IT AS SHOWN IN FIG.1.
- 2.- NEXT, ALIGN THE HOLES OF THE FOOTREST WITH THE DRILLED HOLES ON THE BOTTOM OF THE BASE AND INSERT THE BOLTS, FROM INSIDE THE BASE, PLACE THE SUPPORT PLATES AND THE REST OF THE HARDWARE AS SHOWN IN FIG.2 SCREWING THEM IN LOOSELY.
- 3.- FINALLY, AFTER ALL THE PARTS ARE IN PLACE, YOU CAN START TIGHTENING THEM.



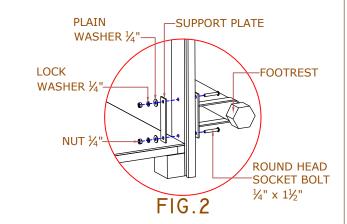

## ASSEMBLING INTRUCTIONS

I-BAR-T-E001

BY: IFD