



# ASSEMBLY INSTRUCTIONS

I-BEN-C004-BK

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

## HARDWARE

DESCRIPTION	PCS
FLAT HEAD SCREW 8 X $\frac{3}{4}$ "	8
FLAT HEAD SCREW 8 X 1"	8
WASHER 5/16"	4
ROUND HEAD BOLT 5/16" X 1-1/4"	4
JOINT CONECTOR ALLEN BOLT $\frac{1}{4}$ " X 50	2
JOINT CONECTOR NUT $\frac{1}{4}$ "	2
IRON SUPPORT	4
ALLEN KEY $\frac{5}{32}$ "	2

ROUND HEAD BOLT  
5/16" X 1-1/4"

WASHER 5/16"

F. A

IRON SUPPORT

F. B

FLAT HEAD SCREW  $\frac{3}{4}$ "

LEGS

F. C

FLAT HEAD SCREW 1"

LEGS


ALLEN KEYS  
5/32"

JOINT CONECTOR  
NUT  $\frac{1}{4}$ "

BOLT CONECTOR  
1/4" X 50

ALLEN KEYS  
5/32"

F. D

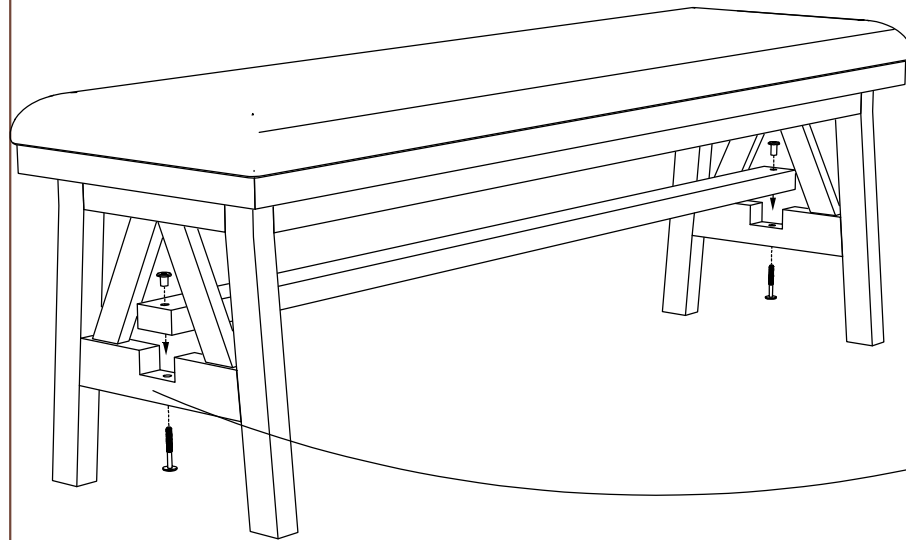

## INSTRUCTIONS:

- 1.- USE A FLAT AND CLEAN SURFACE FOR ASSEMBLY.
- 2.- ALIGN THE HOLES OF THE LEGS WITH THE SEAT'S PRE-DRILLED HOLES AS SHOWN IN FIG A.
- 3.- PLACE THE METAL SUPPORT AND SCREW THEM AS SHOWN IN FIG B AND C.
- 4.- PUT THE CROSSBAR BETWEEN THE LEGS AND INSERT THE BOLTS AS SHOW IN FIG D.
- 5.- TIGHTEN THE CORRESPONDING SCREWS. TURN OVER TO PLACE IT IN THE DESIRED LOCATION