



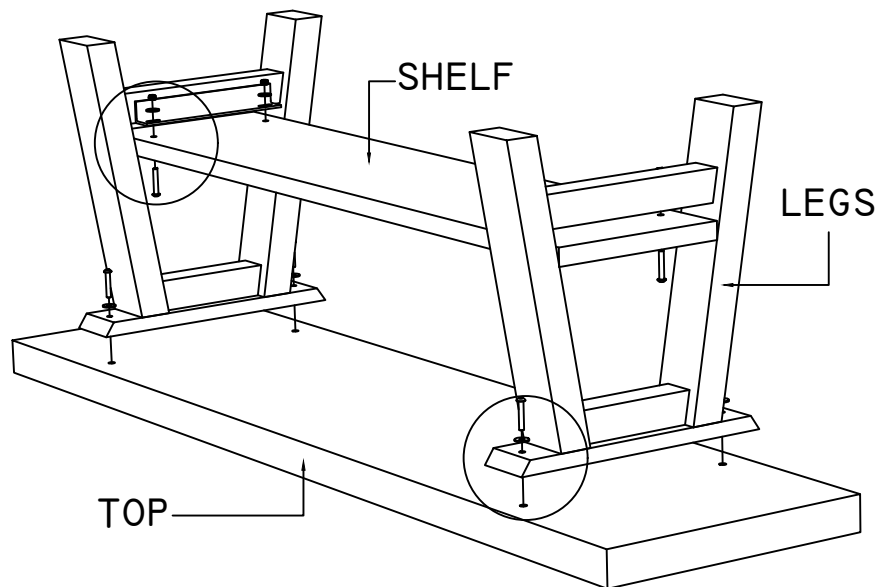

| DESCRIPTION                                                 | #PZ |
|-------------------------------------------------------------|-----|
| Socket Button Head Bolt $\frac{5}{16}$ " x $1\frac{1}{2}$ " | 4   |
| Socket Button Head Bolt $\frac{1}{4}$ " x $1\frac{1}{4}$ "  | 4   |
| Washer $\frac{5}{16}$ " x $\frac{5}{8}$                     | 4   |
| Washer $\frac{1}{4}$ " x $1$ "                              | 4   |
| Locknut $\frac{1}{4}$ "                                     | 4   |
| Allen Wrench $\frac{3}{16}$ "                               | 1   |
| Allen Wrench $\frac{5}{32}$ "                               | 1   |

#### INSTRUCTIONS

- 1.- WITH SOME ONE ELSE'S HELP, PLACE THE TOP UPSIDE DOWN ON A FLAT AND CLEAN SURFACE.
- 2.- ALIGN THE HOLES IN THE LEGS WITH THE INSERT NUTS IN THE TOP, SCREW THE BOLTS WITHOUT TIGHTENING.
- 3.- PLACE THE SHELF THROUGH THE LEGS AND PUT THE BOLTS WITH THE PLAIN WASHERS AND LOCKNUTS AS SHOWN IN THE DIAGRAM.
- 4.- IF ALL THE PARTS ARE ALIGNED IN THEIR CORRECT POSITION, START TIGHTENING ALL THE COMPONENTS.

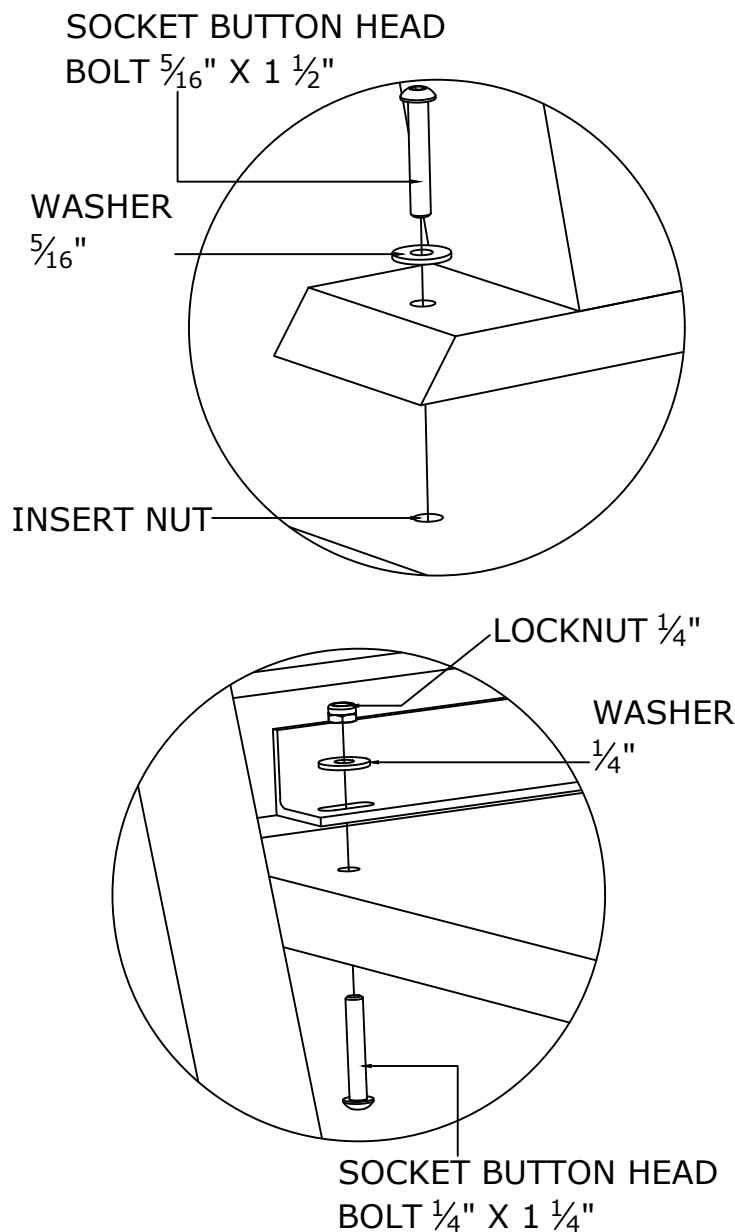

INTERNATIONAL  
FURNITURE DIRECT, LLC

## ASSEMBLING DIRECTIONS

I-BEN-E001

BY: IFD

| ITEM     | DESCRIPTION                                                           | #PZ |
|----------|-----------------------------------------------------------------------|-----|
| 1TOR005  | Tornillo allen cab. Bola $\frac{5}{16}$ " x 1- $\frac{1}{2}$ " NEGRO  | 4   |
| 1TOR064  | Tornillo Allen Cabeza Bola $\frac{1}{4}$ " X 1- $\frac{1}{4}$ " NEGRO | 4   |
| 1RON005  | Rondana Plana $\frac{5}{16}$ " x $\frac{5}{8}$ " GALV                 | 4   |
| 1RON004  | Rondana Plana $\frac{1}{4}$ " x 1" GALV                               | 4   |
| 1TUER020 | Tuerca de Seguridad $\frac{1}{4}$ " GALV                              | 4   |
| 1HER251  | Llave Allen $\frac{3}{16}$ (mueble)                                   | 1   |
| 1HER250  | Llave Allen $\frac{5}{32}$ (mueble)                                   | 1   |