



1

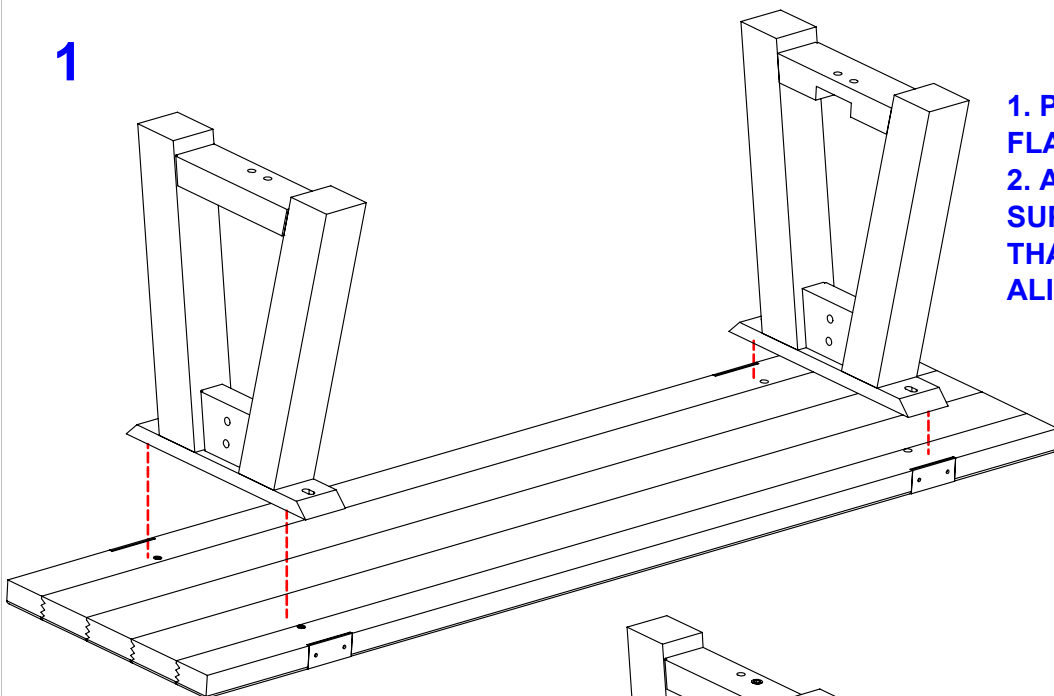


1. PLACE THE TOP UPSIDE DOWN ON FLAT AND CLEAN SURFACE.
2. ALIGN THE LEGS WITH THE INSIDE SUPPORT OF THE TOP, MAKE SURE THAN THE BOTH HOLES ARE ALIGNED.

2

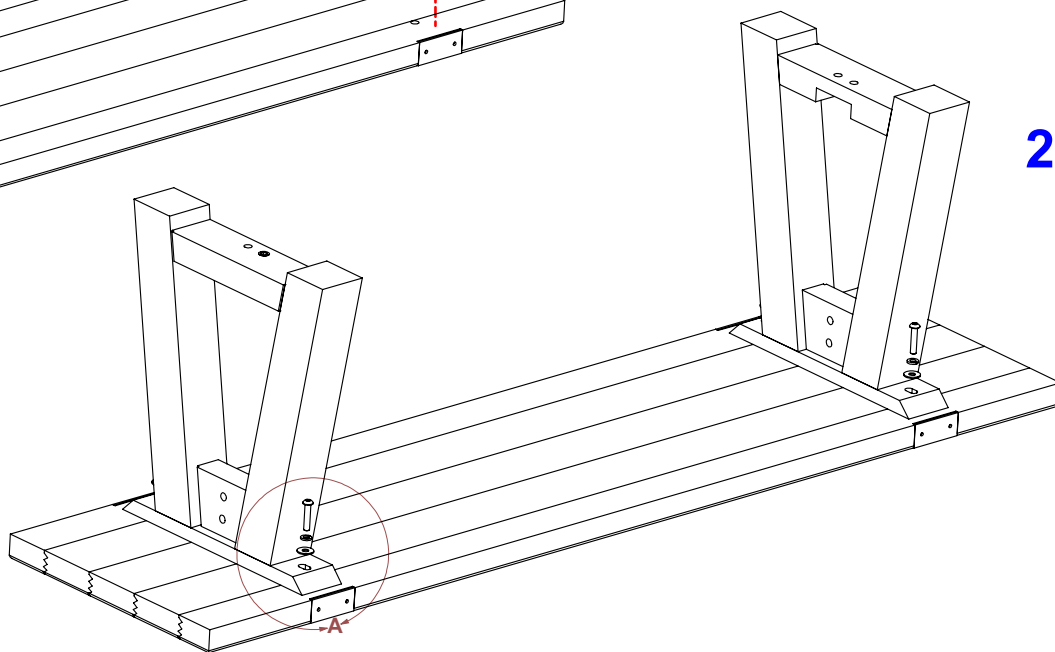

A

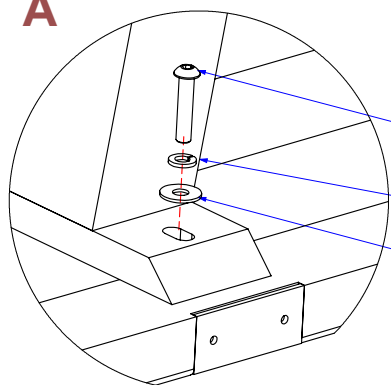


SOCKET BUTTON HEAD 5/16 X 1-1/2

SPLIT LOCK WASHER 5/16

FLAT WASHER 5/16

3. WHEN THE LEGS ARE ALIGNED, PLACE THE SCREWS IN THE ORDER AS SHOWN IN FG.A
4. PLACE THE TOP CROSSBAR IN THE MIDDLE OF THE LEGS AND CENTRAL. FIG.3

3

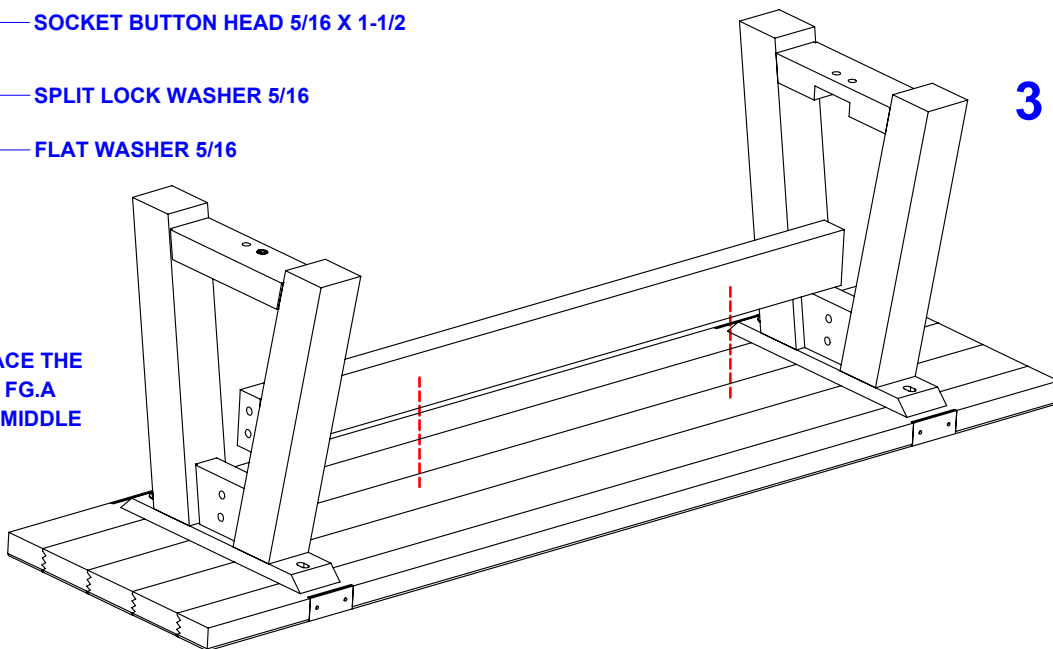

ASSEMBLING INSTRUCTIONS


I-BEN-E002

1/2

DESCRIPTION	#
FLAT WASHER 5/16	12
SPLIT LOCK WASHER 5/16	12
SOCKET BUTTON HEAD 5/16 X 1-1/2	8
SOCKET BUTTON HEAD 5/16 X 2-1/2	4





INTERNATIONAL
FURNITURE DIRECT, LLC

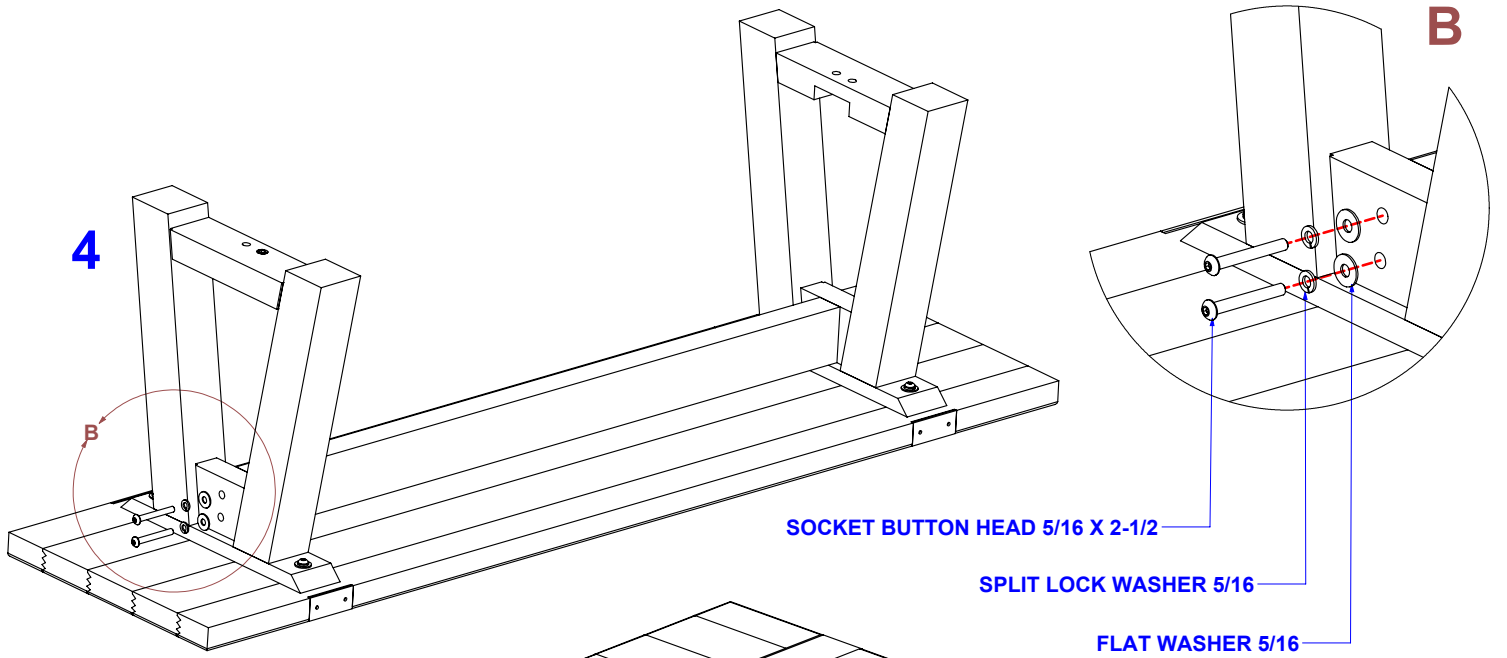

4. WHEN THE CROSSBAR IS IN ITS PLACE, IS TIME TO INSERT THE SCREWS AS SHOWN IN FIG.B

5. TURN THE BENCH CORRECT POSITION AND PLACE THE SECOND CROSSBAR ON THE BOTTOM LIKE IN IMAGE 5.

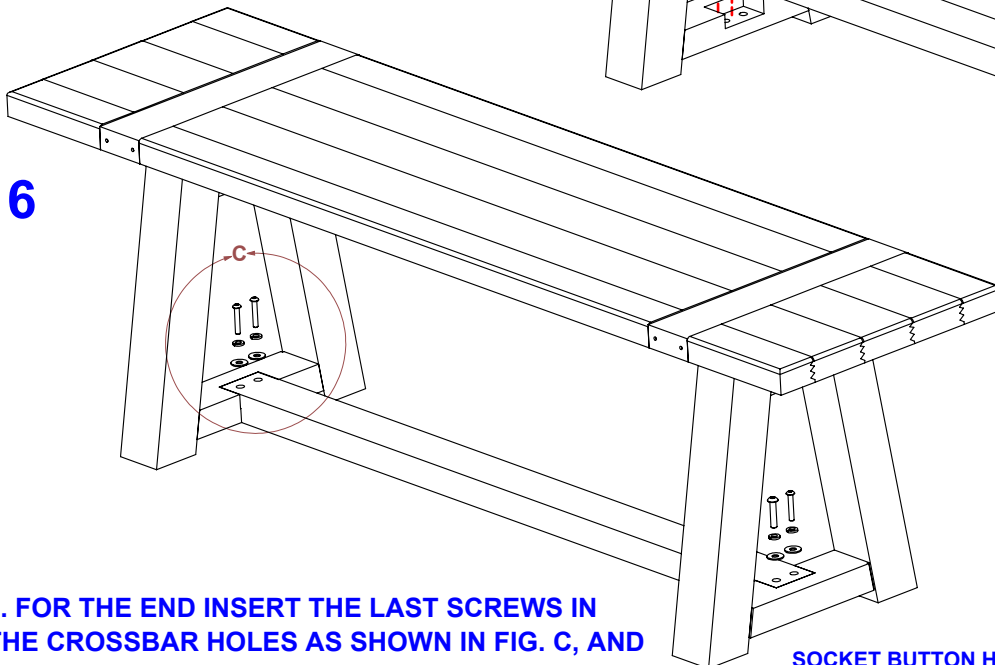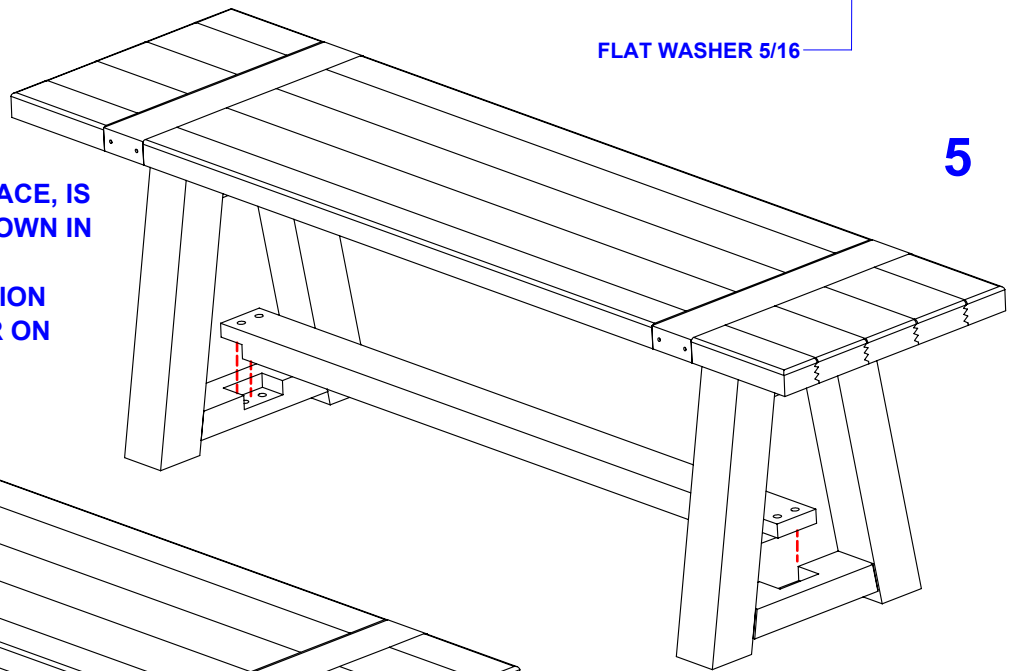


6. FOR THE END INSERT THE LAST SCREWS IN THE CROSSBAR HOLES AS SHOWN IN FIG. C, AND USE THE ALLEN KEY FOR TIGHTEN SCREWS.

SOCKET BUTTON HEAD
5/16 X 1-1/2"

SPLIT LOCK WASHER 5/16

FLAT WASHER 5/16

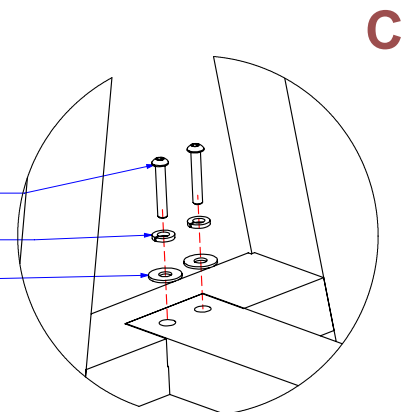

INTERNATIONAL
FURNITURE DIRECT, LLC

ASSEMBLING INSTRUCTIONS

I-BEN-E002

2/2