
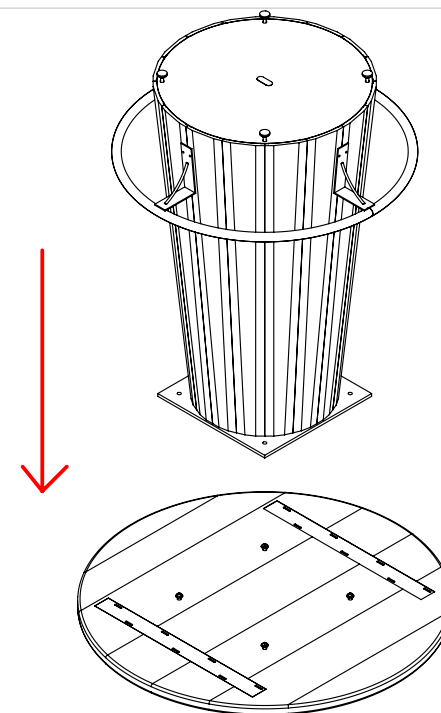
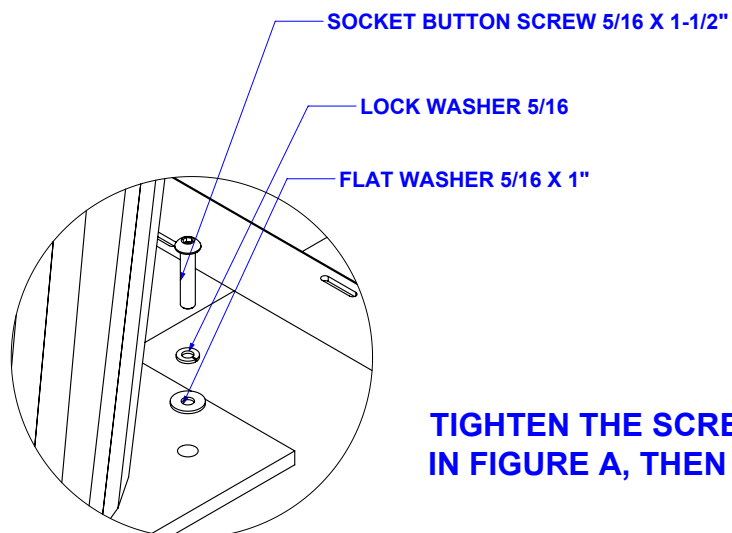


STEP 1

PLACE THE COVER ON A FLAT SURFACE,
MATCH THE BASE TO THE DECK,
MATCHING THE HOLES

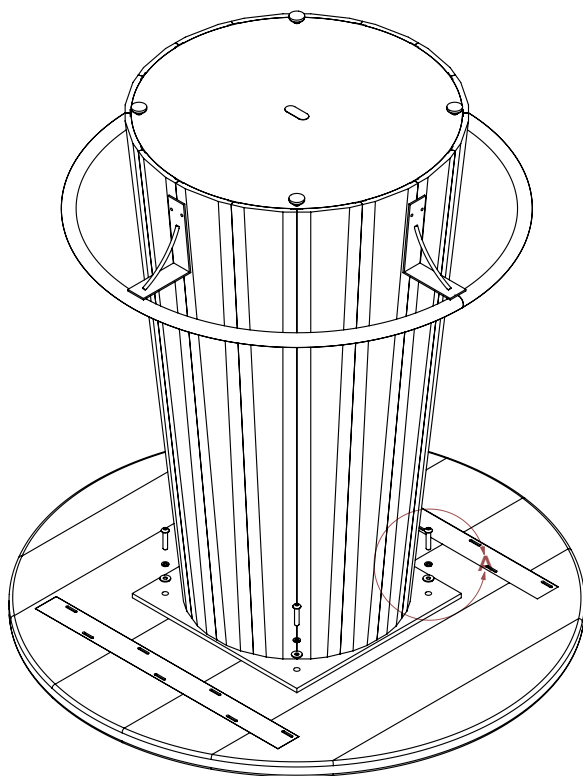

STEP 2

TIGHTEN THE SCREWS AS SHOWN IN FIGURE A, THEN
IN FIGURE A, THEN PLACE IN THE DESIRED LOCATION

DESCRIPTION	#
SOCKET BUTTON SCREW 5/16 X 1- 1/2"	4
LOCK WASHER 5/16	4
FLAT WASHER	4
ALLEN KEY 3/16	1

ITEM	DESCRIPTION	#PZ
1RON003	RONDANA PLANA 5/16 X 1"	4
1RON011	RONDANA DE PRESION 5/16	4
1TOR005	TORNILLO ALLEN CABEZA BOLA 5/16 X 1-1/2"	4
1HER251	LLAVE ALLEN 3/16	1



ITEM:

ASSEMBLING INSTRUCTIONS

I-BIS-E002