




# ASSEMBLY INSTRUCTIONS


## I-BST-C002

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT


1

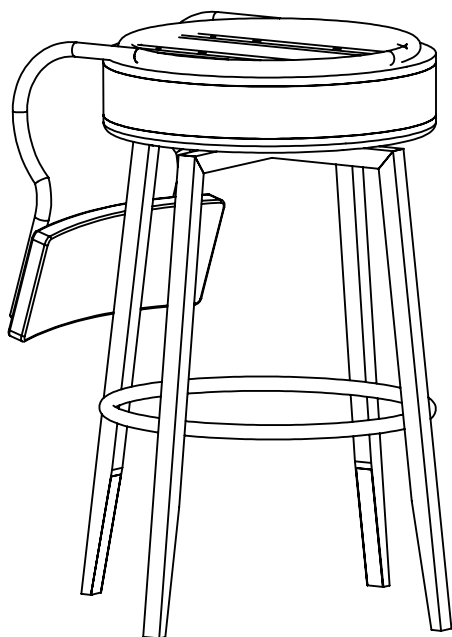


2

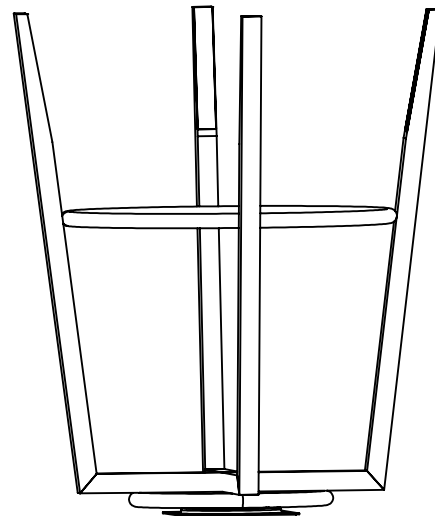

3

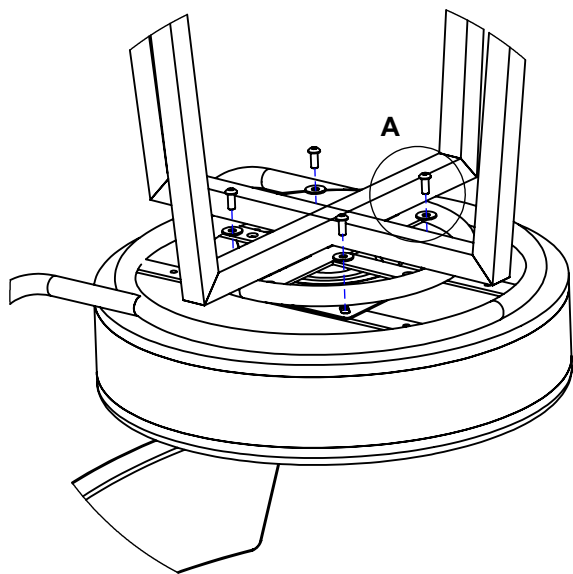


A

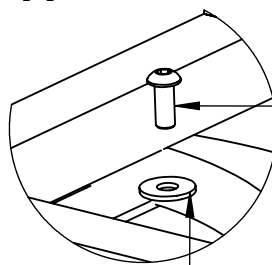

SOCKET BOTTOM HEAD 1/4 X 5/8"

FLAT WASHER 1/4"

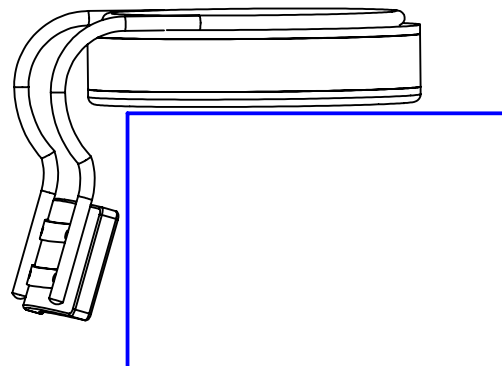

### INSTRUCTIONS:

1. PLACE THE SEAT UPSIDE DOWN ON A CLEAN AND FLAT SURFACE.
2. THEN, PLACE THE BASE/LEGS OVER THE SEAT AS SHOWN IN FIG. 2
3. ALIGN THE PLATE WITH THE SEAT HOLES AND INSERT THE WASHER AND SCREWS INTO THE CORRESPONDING HOLES AS SHOWN IN FIG. A
4. TIGHTEN THE SCREWS UNTIL THEY ARE SECURE.

### HARDWARE

DESCRIPTION	#PCS
SOCKET BOTTOM HEAD 1/4 X 5/8"	4
FLAT WASHER 1/4"	4
ALLEN KEY 5/32	1