


JOINT CONNECTOR  
BOLT 1/4" X 35mm

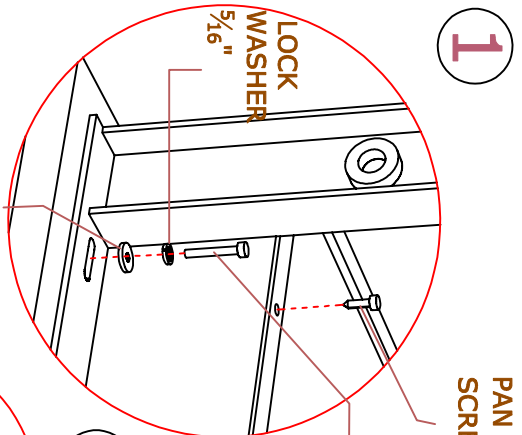


PAN HEAD  
SCREW 6 X 3/4"


BUTTON HEAD  
SOCKET BOLT  
5/16" X 1"

PLAIN  
WASHER  
5/16"


LOCK  
WASHER  
5/16"

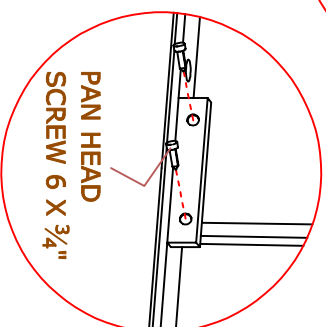

PAN HEAD  
SCREW 6 X 3/4"

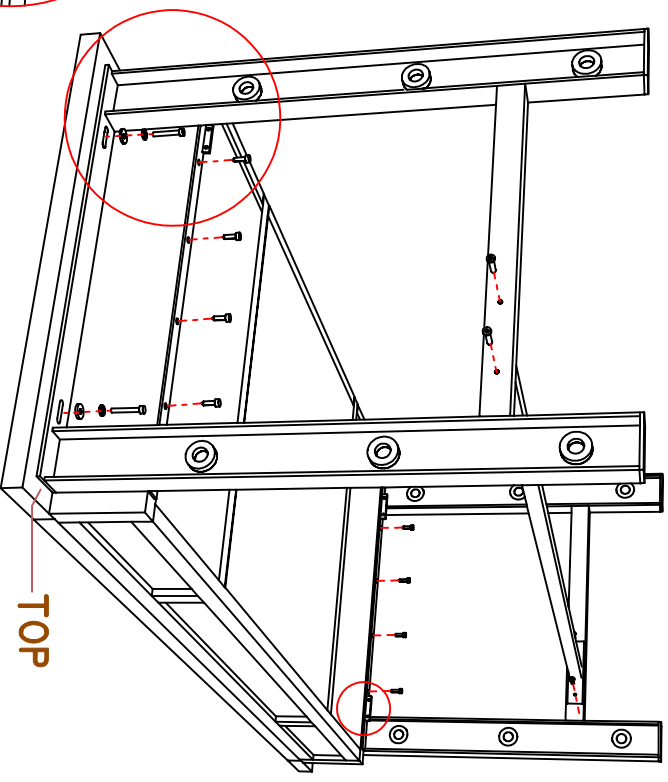

TOP

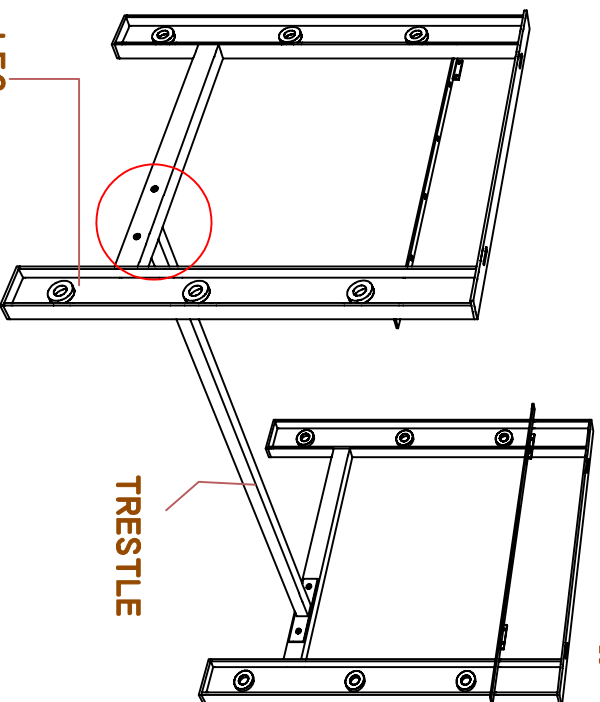

TRESTLE

LEG

## INSTRUCTIONS

- 1.- WITH SOME ONE ELSE'S HELP, PLACE THE DESK UPSIDE DOWN. ON A FLAT AND CLEAN SURFACE.
- 2.- HOLD THE LEGS ALIGNED WITH THE HOLES ON THE TOP AND ATTACH THEM LOOSELY TO IT AS SHOWN IN FIG.1.
- 3.- ATTACH THE CROSSBAR BETWEEN THE LEGS WITH THE JOINT CONNECTOR NUTS AND BOLTS. FIG.2.
- 4.- IF ALL THE PARTS ARE ALIGNED IN THEIR CORRECT POSITION, START TIGHTENING ALL THE BOLTS AND INSERT THE SCREWS AS SHOWN IN FIG. 2 AND 3.

DESCRIPTION	#PZ
Join Connector Nut 1/4" x 17mm	4
Join Connector Bolt 1/4" x 35mm	4
Lock Washer 3/16"	4
Plain Washer 3/16"	4
Pan Head Screw 6 x 3/4"	8
Button Head Socket Bolt 5/16" x 1"	4
Allen Key 3/32"	2
Allen Key 3/16"	1

# ASSEMBLING INSTRUCTIONS

I-DSK-E004

BY:IFD

ifd

INTERNATIONAL  
FURNITURE DIRECT, LLC