

STEP 1


WITH THE HELP OF SOMEONE ELSE TURN
THE DESK AND PLACE THE TOP ON A
FLAT SURFACE

STEP 2

TURN THE LATERALS AND
WITH THE HELP OF THE WOOD BOLTS ALING
THE LATERALS WITH THE TOP HOLES
AS SHOWN IN FIGURE "A"

STEP 3


ONCE THE LATERALS ARE IN
POSITION PLACE THE
SCREWS AS SHOWN
IN FIGURE "A" AND TIGHTEN THE
SCREWS INTO THE LATERALS

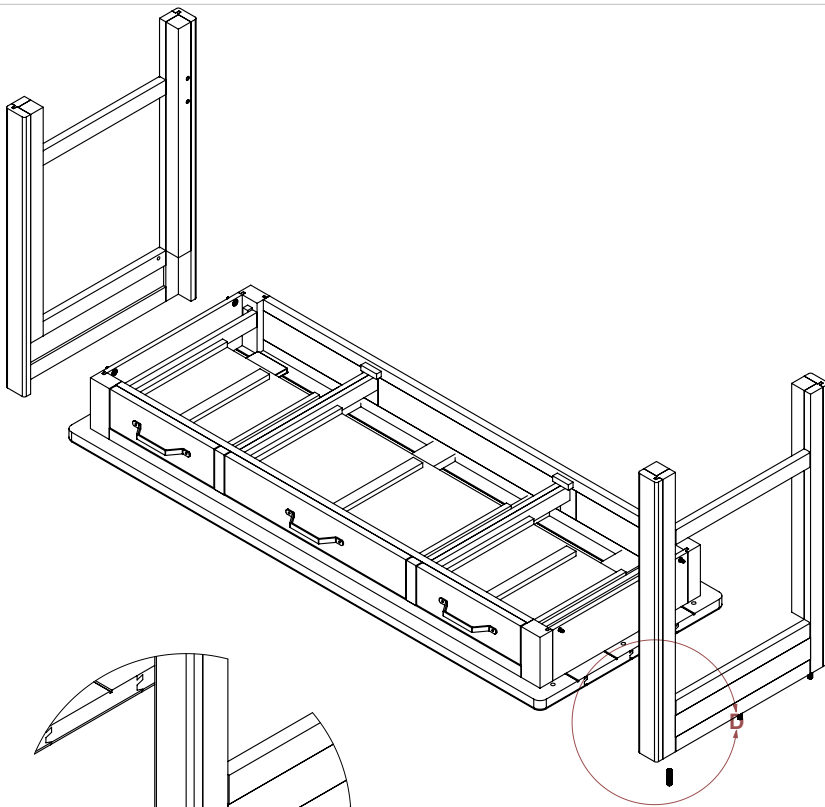

DETALLE D
ESCALA 2 : 17


A

DOWEL 10 X 40 MM

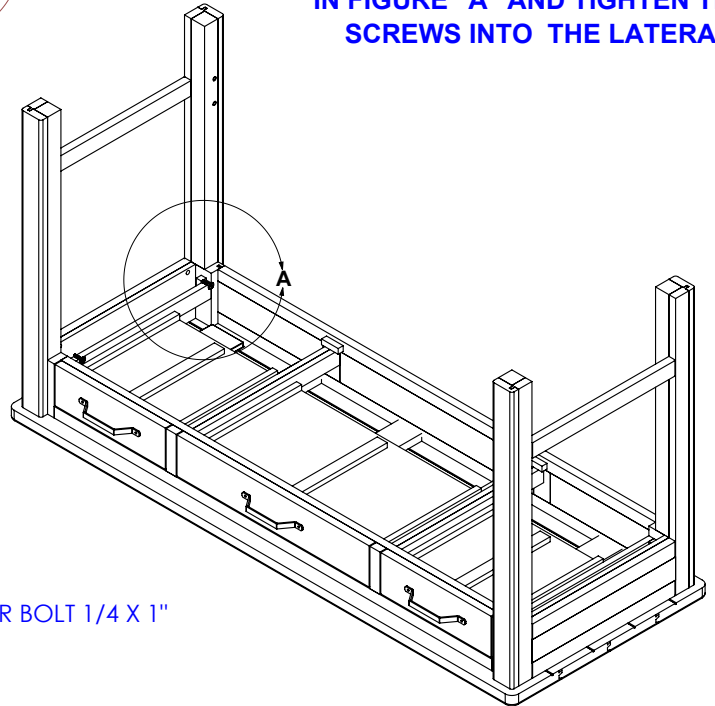

B


JOIN CONNECTOR BOLT 1/4 X 1"

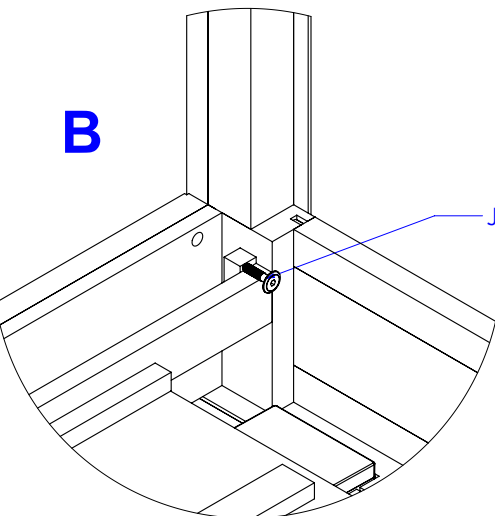

DESCRIPTION	#
JOIN CONNECTOR BOLT 1/4 X 1"	4
JOIN CONNECTOR BOLT 1/4 X 3/4"	4
DOWEL 10 X 40	6
ALLEN KEY 5/32	1


STEP 4

PLACE THE CROSSBAR ALING WITH THE BACK
LEGS HOLES AS SHOWN IN FIGURE "B"

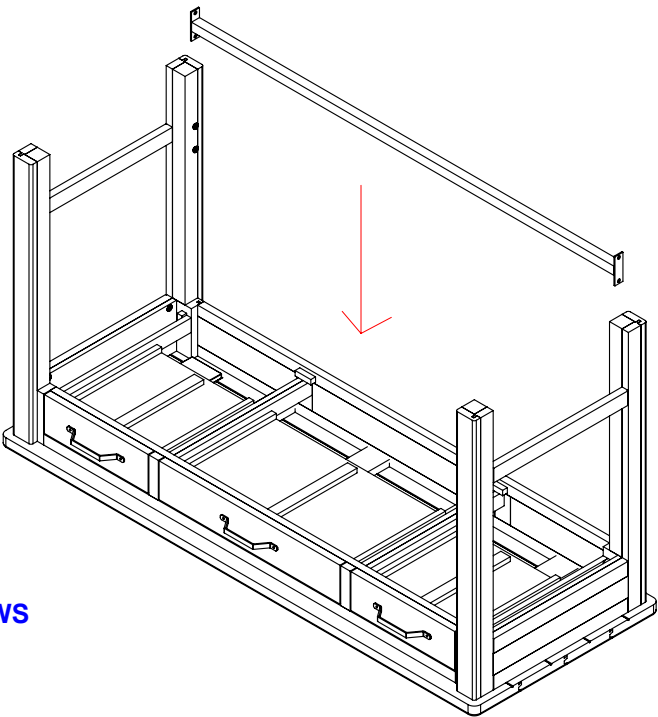


STEP 5

ONCE THE CROSSBAR IS IN POSITION PLACE THE SCREWS
AND TIGHTEN THE SCREWS INTO THE LEGS

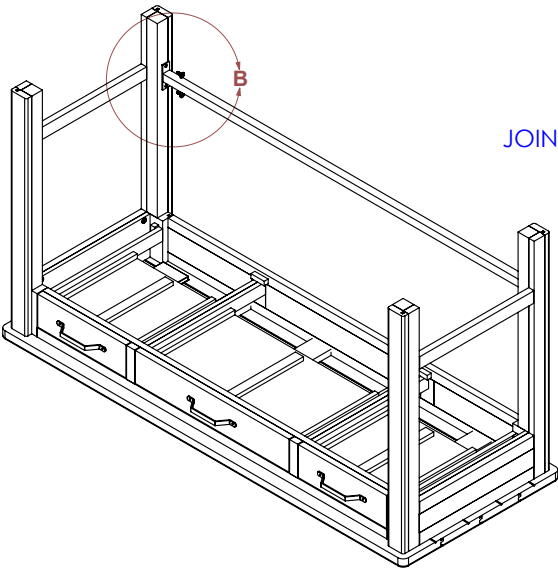

JOIN CONNECTOR BOLT 1/4 X 3/4"

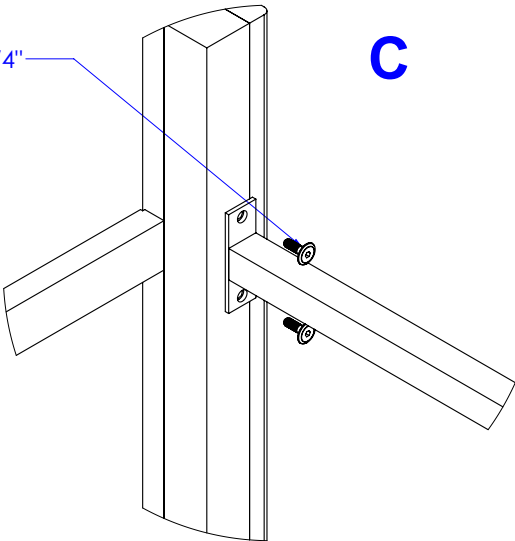

**NOTE: REMEMBER THAT ALL THE SCREWS ARE
AND AT THE END THAT ALL THE SCREWS HAVE BEEN
IN THEIR POSITION WE ADJUST.**

DESCRIPTION	#
JOIN CONNECTOR BOLT 1/4 X 1"	4
JOIN CONNECTOR BOLT 1/4 X 3/4"	4
DOWEL 10 X 40	6
ALLEN KEY 5/32	1

ITEM	DESCRIPTION	#
1TOR035	PERNO UNION 1/4 X 19 MM	4
1TOR038	PERNO UNION 1/4 X 25 MM	4
1PER012	PERNO DE MADERA DE 10 X 40	6
1HER250	LLAVE ALLEN 5/32	1



INTERNATIONAL
FURNITURE DIRECT, LLC

ASSEMBLING INSTRUCTIONS

I-DSK-E016