


## STEP 1

WITH THE HELP OF SOMEONE, PLACE THE CHIMNEY, ALIGNING IT WITH THE HOLE IN THE FURNITURE



## STEP 2

FROM THE BACK OF THE FIREPLACE, LOOK FOR THE LAST SCREWS THAT COME INSTALLED IN IT.

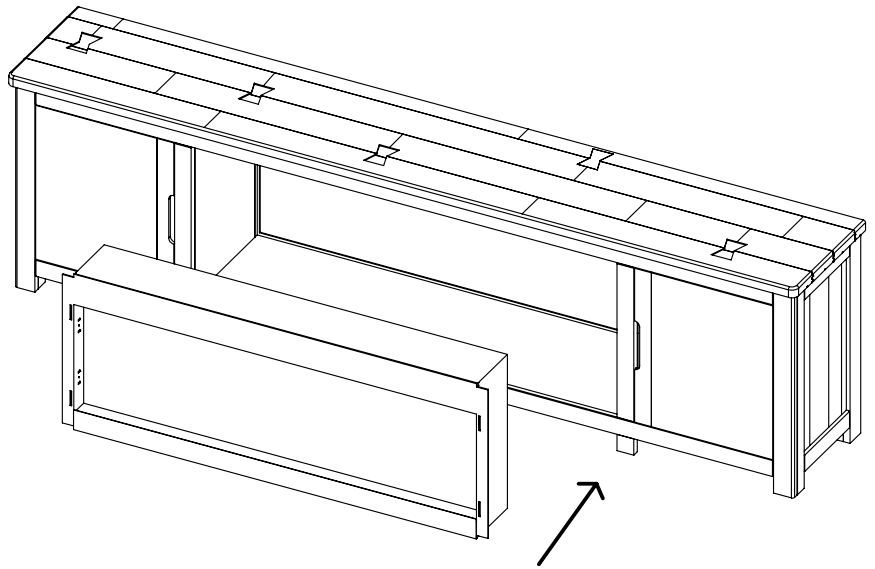

## STEP 3

REMOVE THE SCREWS, AS SHOWN IN DETAIL A1.

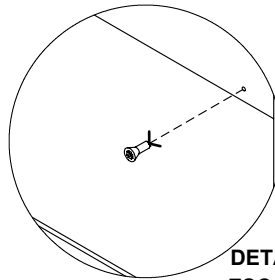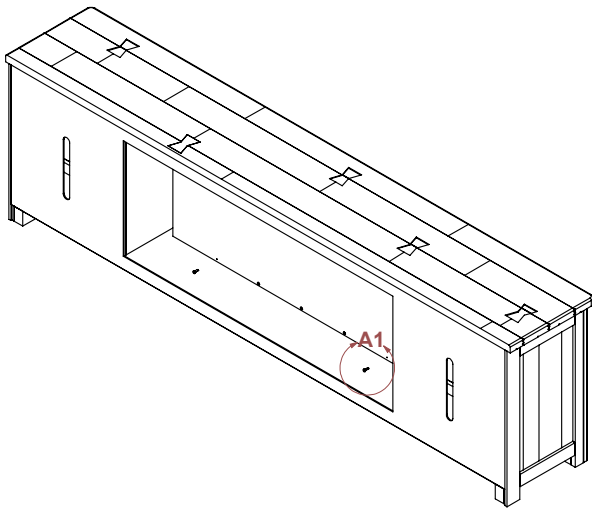


DETALLE A1  
ESCALA 1 : 5

NOTE: REMEMBER THAT  
BETWEEN STEP 4 AND 5,  
YOU NEED TO ADJUST THE FIREPLACE  
FROM THE FRONT BEFORE SCREWING.

## STEP 4


FIRST, PLACE THE SQUARE, AND THEN INSERT THE SCREW THAT YOU HAD PREVIOUSLY REMOVED, AS SHOWN IN DETAIL B1

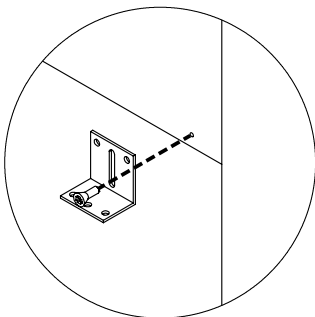

DETALLE B1  
ESCALA 1 : 5

## STEP 5

SCREW IN THE SCREW AND REPEAT THE SAME ACTION ON THE OTHER END.

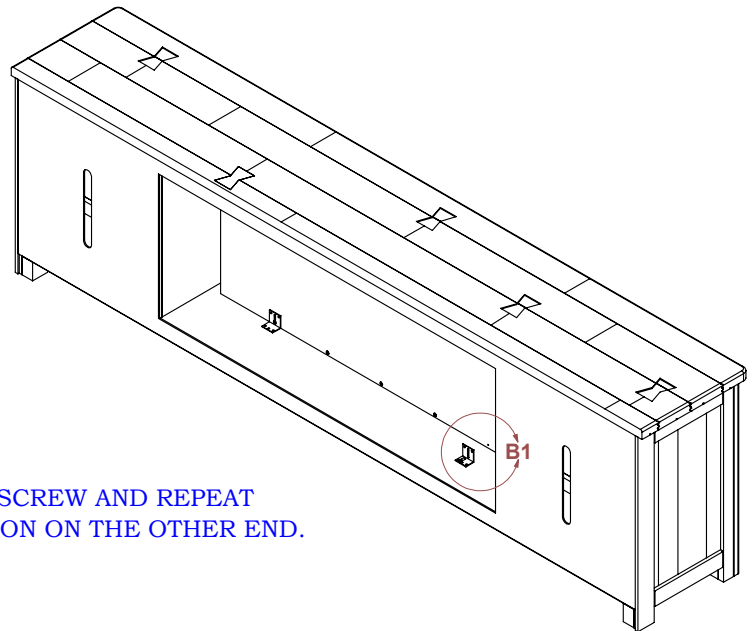


ASSEMBLING  
INSTRUCTIONS

I-EFP-A03


## STEP 6

THEN SCREW IT TO THE FURNITURE TO SECURE IT,  
AS SHOWN IN DETAIL C1.

\*REMEMBER TO HAVE CENTERED YOUR FIREPLACE\*

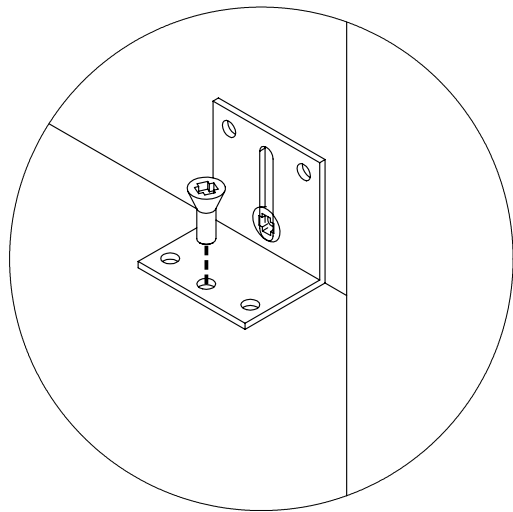

DETALLE C1  
ESCALA 1 : 2

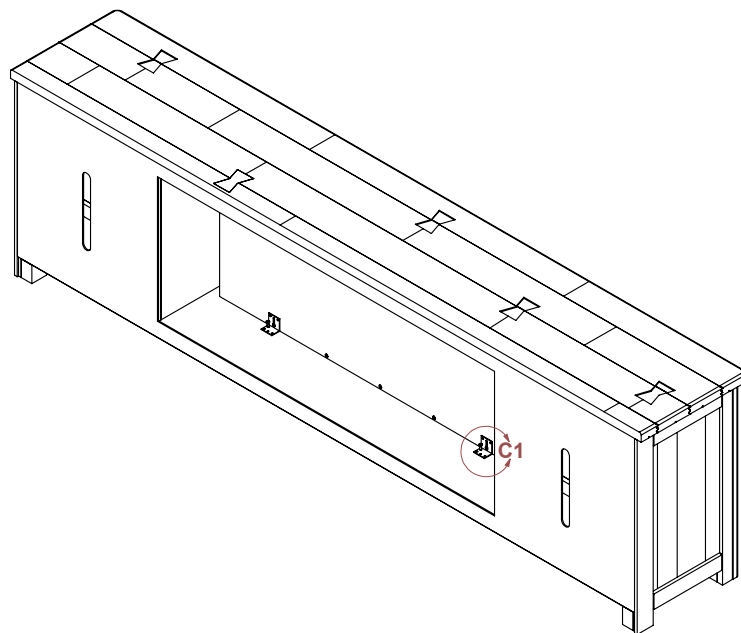


## STEP 7

FINALLY, PLACE THE GLASS OF THE FIREPLACE,  
ALIGNING IT WITH THE SLOTS.

## STEP 8

READY, PLACE THE FURNITURE  
IN THE DESIRED LOCATION.

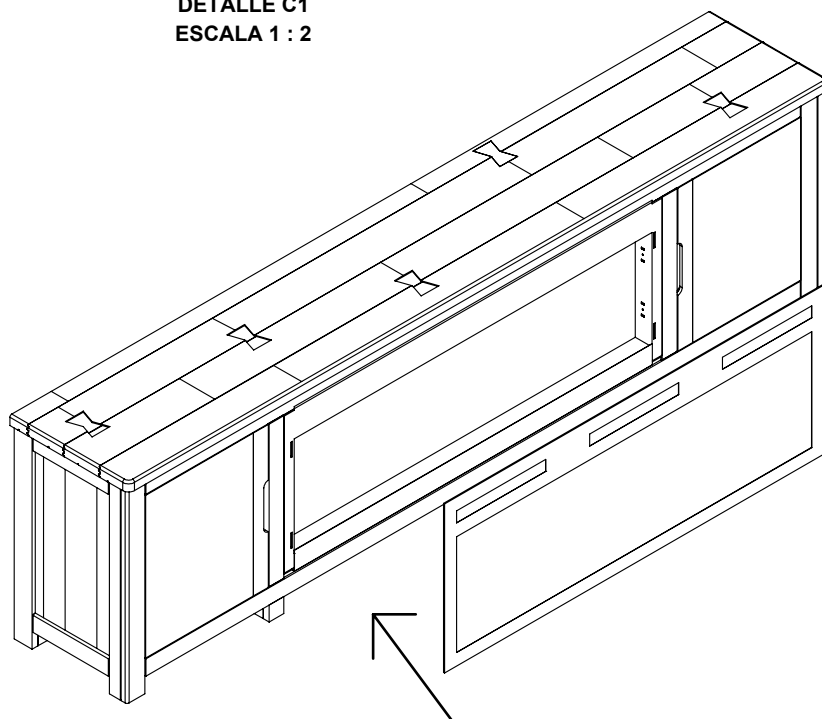

ASSEMBLING  
INSTRUCTIONS

I-EFP-A03