



STEP 1

PLACE THE HEADBOARD ON A FLAT SURFACE
OR UNDER A MAT, LOOK FOR THE 2 SIDES OF
THE HEADBOARD AS SHOWN IN FIGURE A AND B

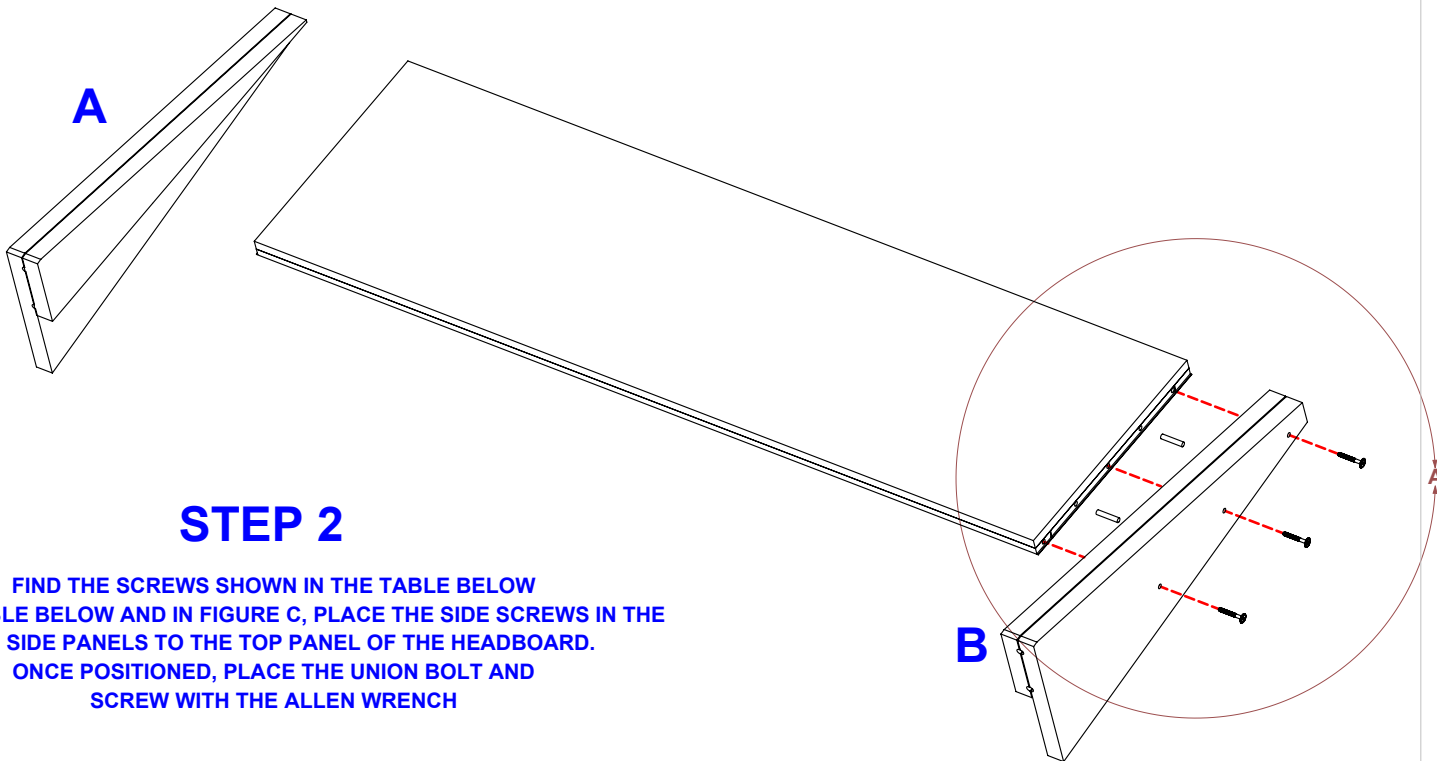

STEP 2

FIND THE SCREWS SHOWN IN THE TABLE BELOW
IN THE TABLE BELOW AND IN FIGURE C, PLACE THE SIDE SCREWS IN THE
THE SIDE PANELS TO THE TOP PANEL OF THE HEADBOARD.
ONCE POSITIONED, PLACE THE UNION BOLT AND
SCREW WITH THE ALLEN WRENCH

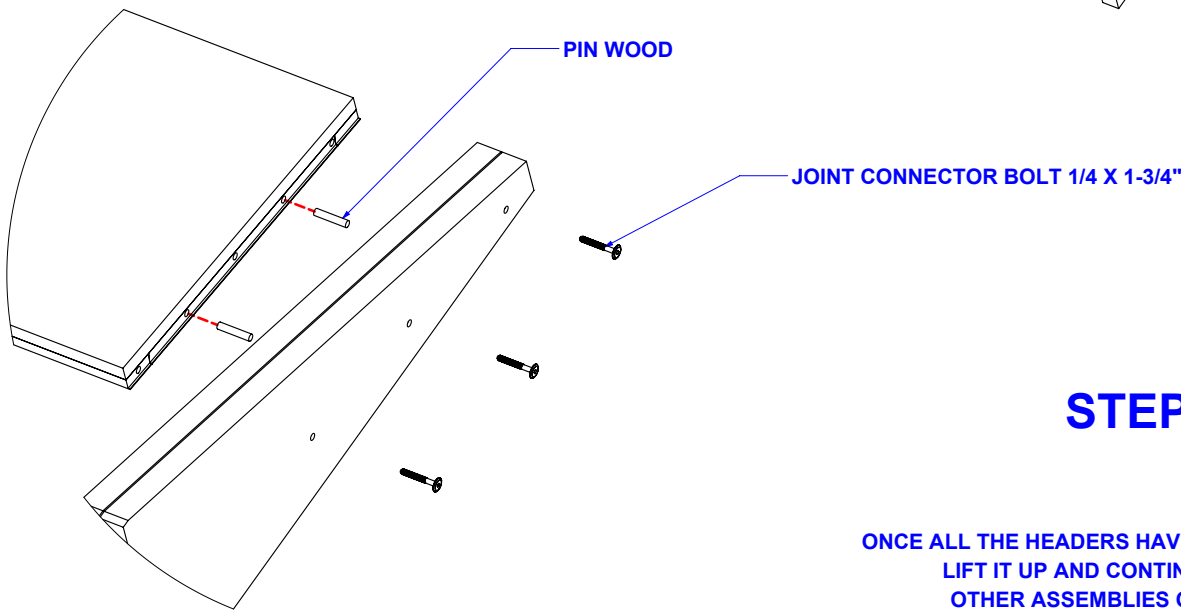

STEP 3

ONCE ALL THE HEADERS HAVE BEEN SCREWED ON
LIFT IT UP AND CONTINUE WITH THE
OTHER ASSEMBLIES OF THE PIECE

DESCRIPTION	#
JOINT CONNECTOR BOLT 1/4 X 1-3/4"	6
ALLEN KEY 5/32	1
PIN WOOD	4

ITEM	DESCRIPTION	#
1TOR003	TORNILLO PERNO UNION 1/4 X 45 MM	6
1HER250	ALLEN KEY 5/32	1
1PER002	PERNO DE MADERA 8 X 40	4

ifd

INTERNATIONAL
FURNITURE DIRECT, LLC

CODIGO:

COLECCION: