




**FIGURE A**

- 1.- TURN THE SOFA UPSIDE DOWN ON A CLEAN AND FLAT SURFACE.
- 2.- PLACE THE LEGS AS SHOWN IN FIGURE A.
- 3.- ALIGN THE LEGS WITH THE BOLT HOLES.
- 4.- INSERT TWO BOTTOM SOCKET SCREWS WITH LOCK WASHERS & FLAT WASHERS, AS SHOWN IN DETAIL B.
- 5.- WITH THE ALLEN KEY 3/16", TIGHTEN THE SCREWS UNTIL THE LEGS FEELS FIRM.
- 6.- ONCE THE LEGS ARE INSTALLED, MOVE THE SOFA BACK TO ITS ORIGINAL POSITION.

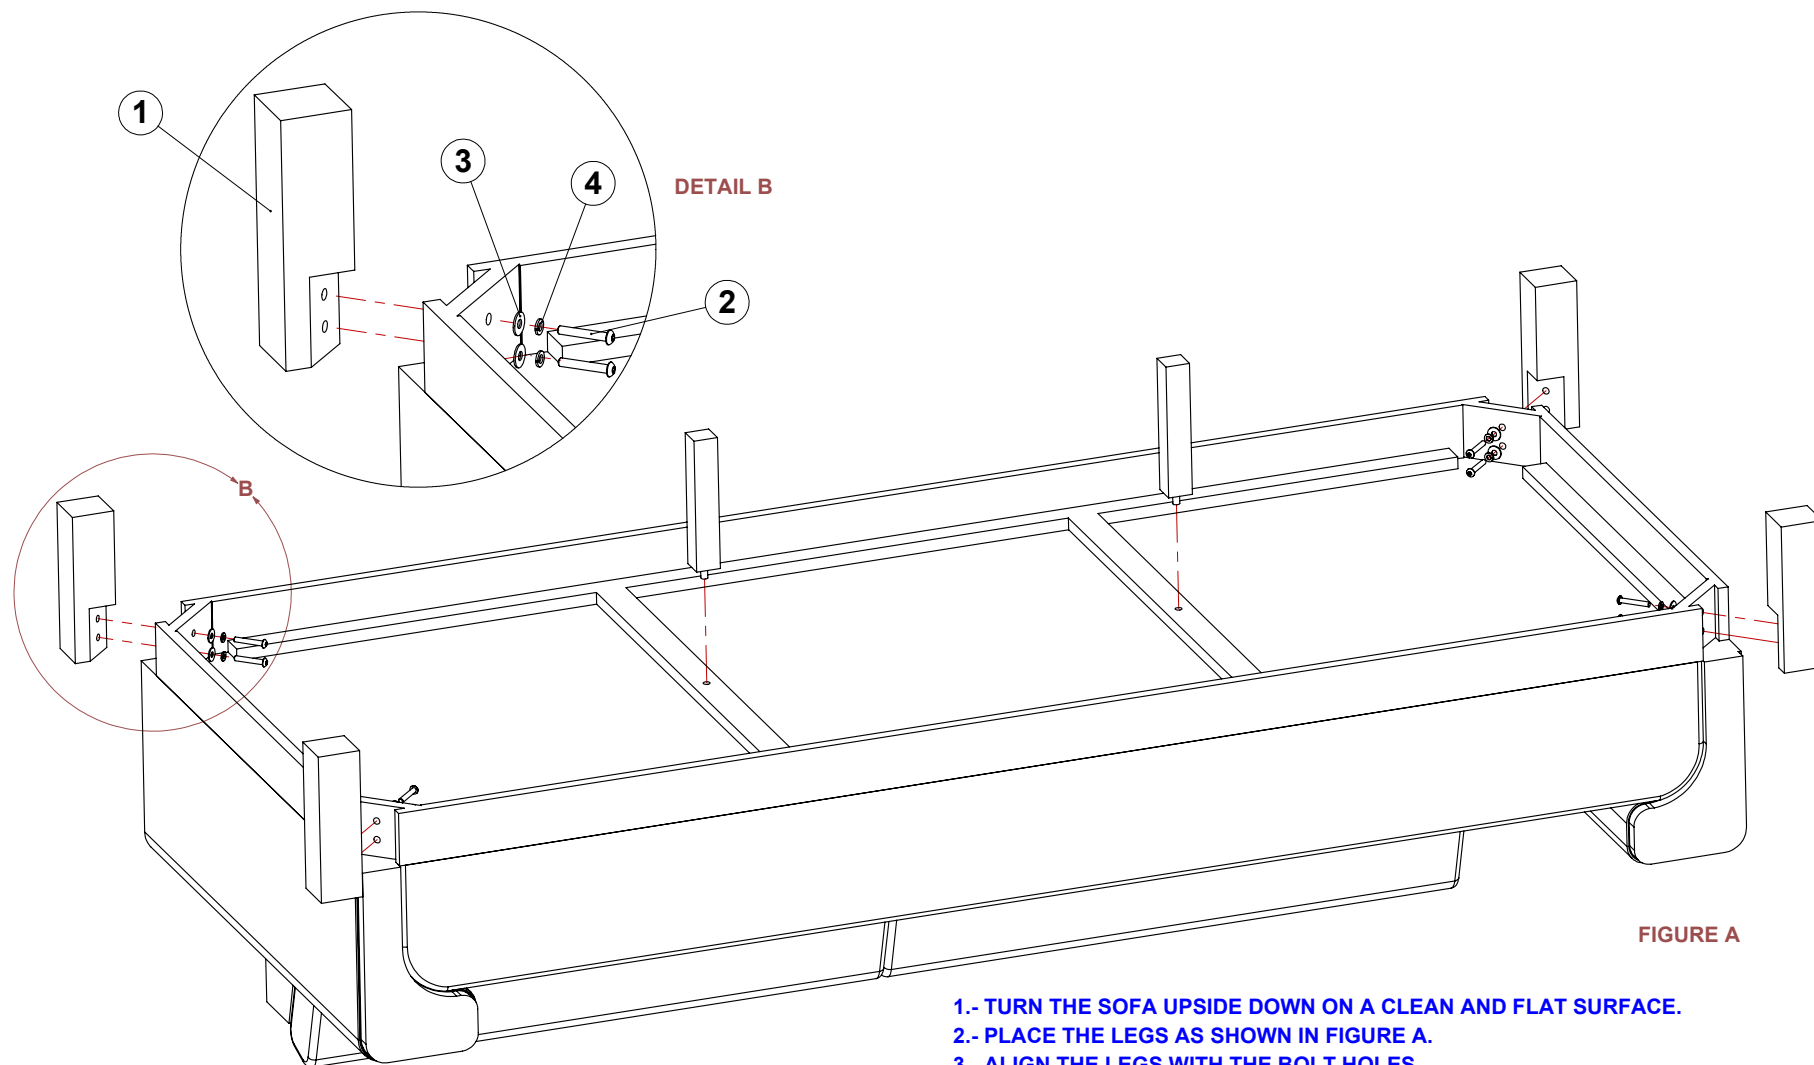

## ASSEMBLING INSTRUCTIONS

**I-IUP-966**

| ITEM # | DESCRIPTION                   | # |
|--------|-------------------------------|---|
| 1      | LEGS                          | 4 |
| 2      | BUTOM SOCKET SCREW 5/16" x 2" | 8 |
| 3      | FLAT WASHER 5/16"             | 8 |
| 4      | LOCK WASHER                   | 8 |
| 5      | ALLEN KEY 3/16"               | 1 |

## IUP966-ACH

| ITEM    | DESCRIPTION                               | # |
|---------|-------------------------------------------|---|
| 1TOR004 | TORNILLO ALLEN CAB. BOLA 5/16" x 2" NEGRO | 8 |
| 1RON003 | RONDANA PLANA 5/16" x 1" GALV             | 8 |
| 1RON011 | RONDANA DE PRESION 5/16" NEGRA            | 8 |
| 1HER251 | LLAVE ALLEN 3/16 (MUEBLE)                 | 1 |

## IUP966-LOV

| ITEM    | DESCRIPTION                               | # |
|---------|-------------------------------------------|---|
| 1TOR004 | TORNILLO ALLEN CAB. BOLA 5/16" x 2" NEGRO | 8 |
| 1RON003 | RONDANA PLANA 5/16" x 1" GALV             | 8 |
| 1RON011 | RONDANA DE PRESION 5/16" NEGRA            | 8 |
| 1HER251 | LLAVE ALLEN 3/16 (MUEBLE)                 | 1 |

## IUP966-SOF

| ITEM    | DESCRIPTION                               | # |
|---------|-------------------------------------------|---|
| 1TOR004 | TORNILLO ALLEN CAB. BOLA 5/16" x 2" NEGRO | 8 |
| 1RON003 | RONDANA PLANA 5/16" x 1" GALV             | 8 |
| 1RON011 | RONDANA DE PRESION 5/16" NEGRA            | 8 |
| 1HER251 | LLAVE ALLEN 3/16 (MUEBLE)                 | 1 |



## ASSEMBLING INSTRUCTIONS

**I-IUP-966**

IUP966-ACH  
IUP966-LOV  
IUP966-SOF