


**NOTE: MIRROR
HOLDERS INCLUDED**

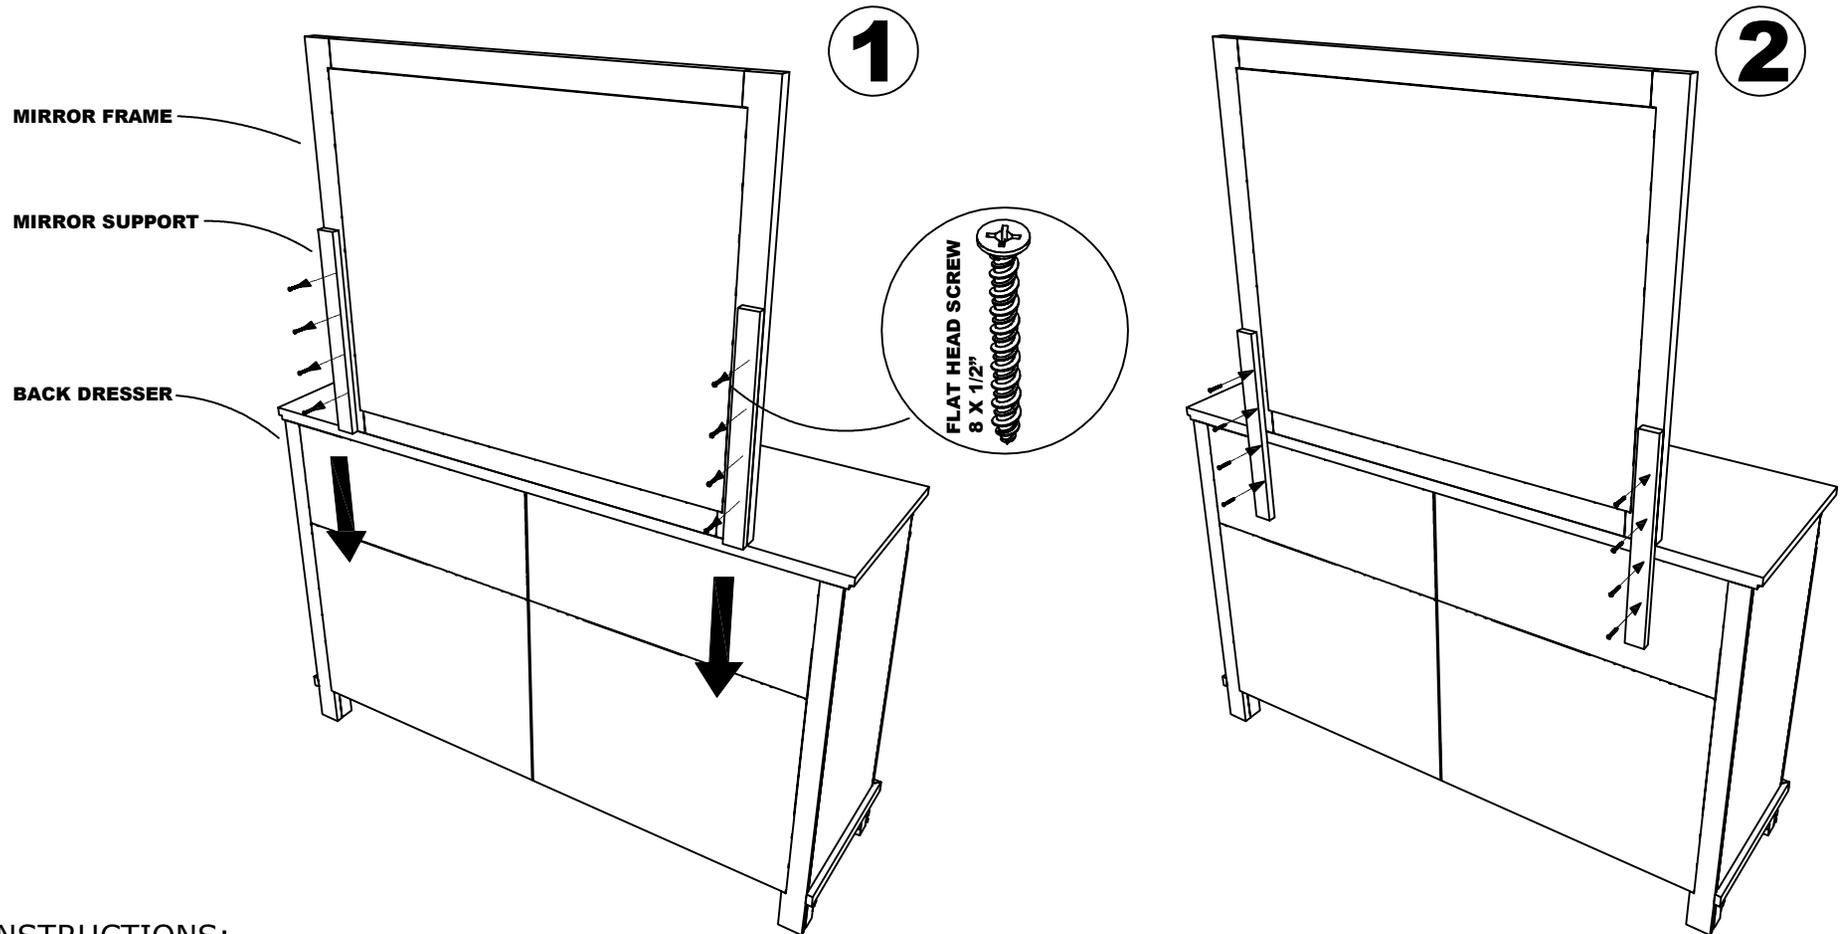

INSTRUCTIONS:

- 1.- UNSCREW ALL FOUR SCREWS. SLIDE SUPPORTS SO TWO PRE-DRILLED HOLES ATTACH TO MIRROR FRAME AND TWO PRE-DRILLED HOLES ATTACH TO DRESSER.
- 2.- SCREW BACK ON THE FRAME OF THE MIRROR AND TO DRESSER.

HARDWARE	
DESCRIPTION	# PCS
FLAT HEAD SCREW 8 x 1-1/2"	8

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT



ASSEMBLY INSTRUCTIONS

I-MIR-C001