

FIG.1

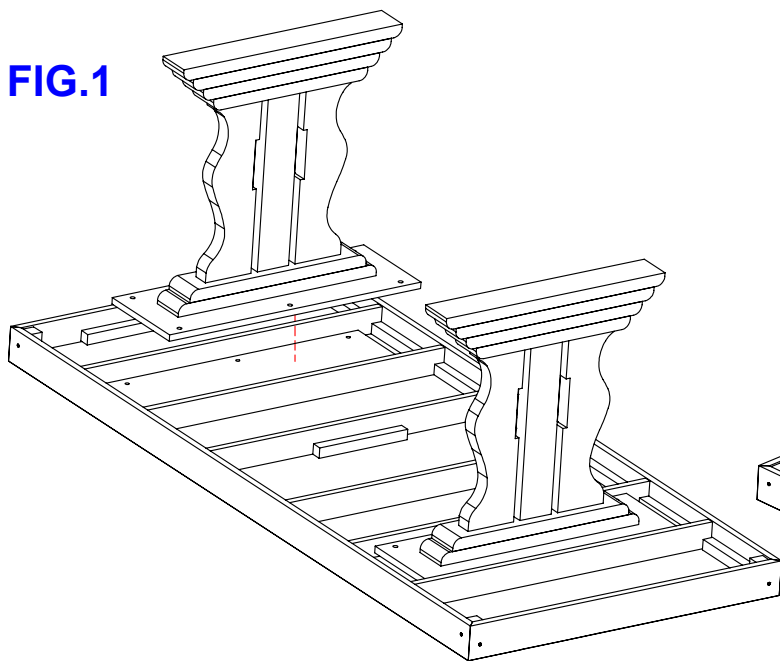


FIG.2

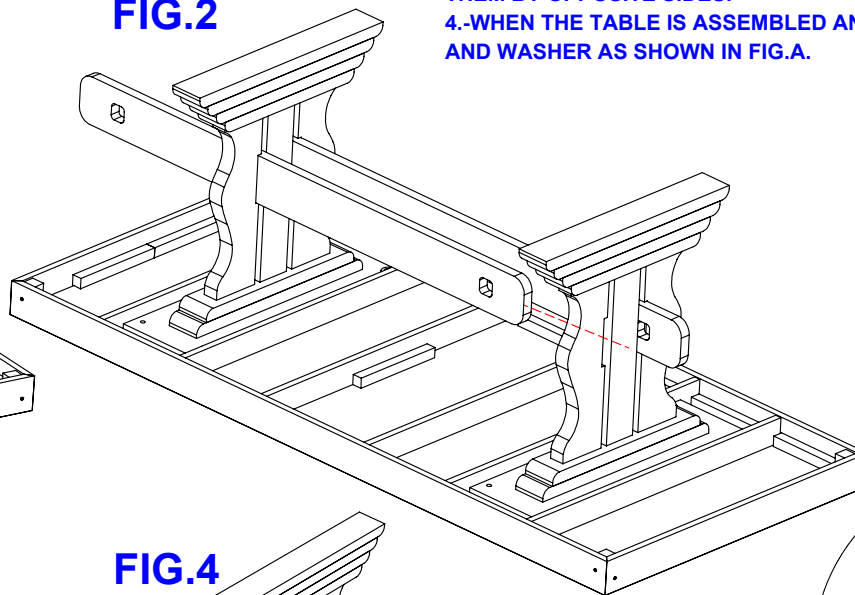


FIG.3



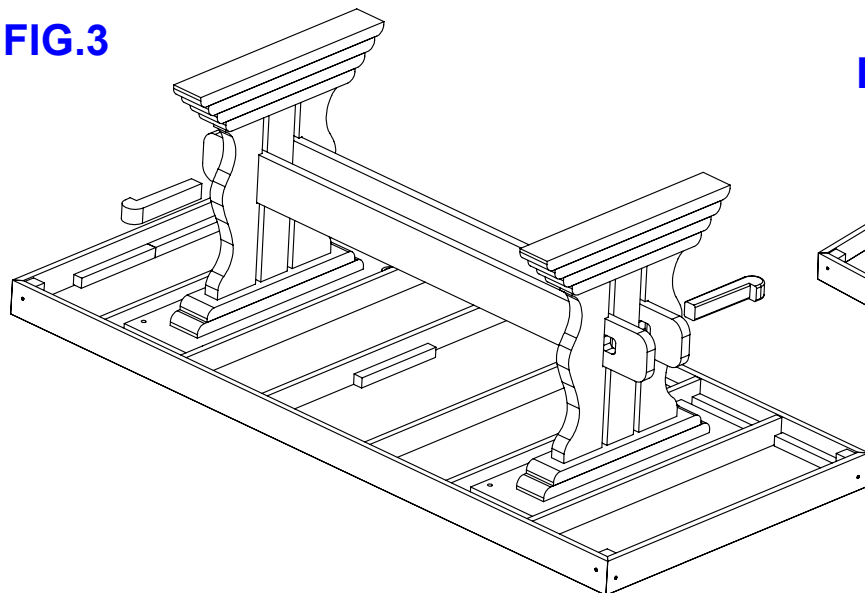


FIG.4

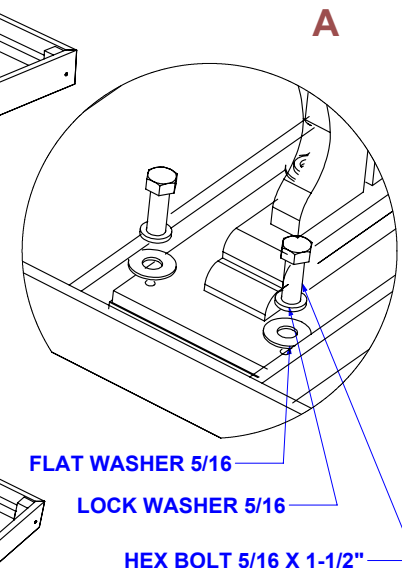

1. - PLACE THE TOP UPSIDE DOWN CAREFULLY ON A FLAT AND CLEAN SURFACE.
- 2.-PLACE THE LEGS IN THE TOP AND ALIGN WITH THE HOLES.
3. - THEN PLACE THE CROSSBAR IN THE MIDDLE TO THE LEGS AND INSERTING THE WEDGES AS SHOWN IN THE IMAGE, BY INSERTING THEM BY OPPOSITE SIDES.
- 4.-WHEN THE TABLE IS ASSEMBLED AND ALIGNED, INSERT THE BOLTS AND WASHER AS SHOWN IN FIG.A.

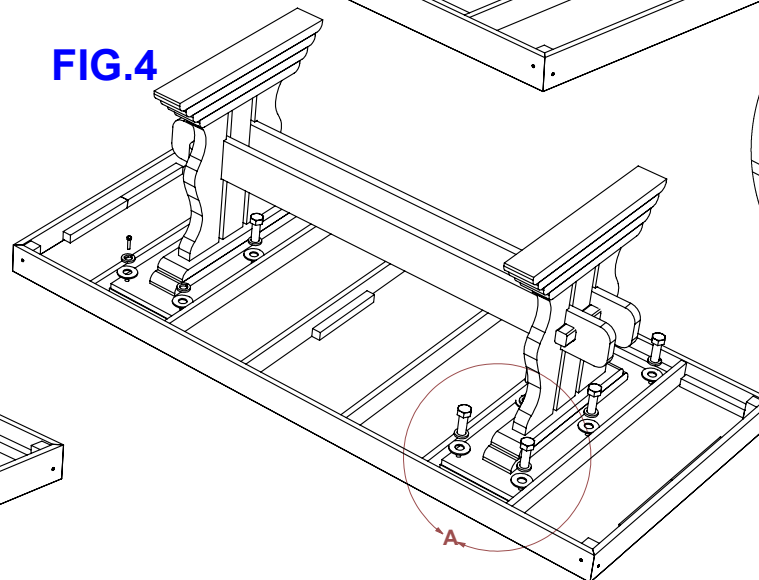

INTERNATIONAL
FURNITURE DIRECT, LLC

ASSEMBLY INSTRUCTION

I-MIX-E002

DESCRIPTION	#
FLAT WASHER 5/16	12
LOCK WASHER 5/16	12
HEX BOLT 5/16 X 1-1/2"	12

ITEM	DESCRIPTION	#
1RON003	RONDANA PLANA 5/16" X 1" GALV.	12
1RON011	RONDANA DE PRESION 5/16" NEGRA	12
1TOR022	TORNILLO HEXAGONAL 5/16" x 1-1/2" R/C GALV.	12



ASSEMBLY INSTRUCTION

435,4351

I-MIX-E002