


ASSEMBLY INSTRUCTIONS


I-MIX-E006

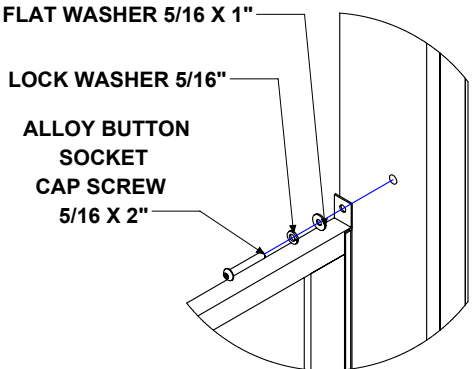

STEP 1: AJUSTE A CABECERA


WITH THE ASSISTANCE OF ANOTHER PERSON, ATTACH THE SIDE RAILS TO THE HEADBOARD USING THE HARDWARE SPECIFIED IN DETAIL (A). REPEAT THE PROCESS ON THE OPPOSITE SIDE.

DETAIL A
ESCALA 1 : 8

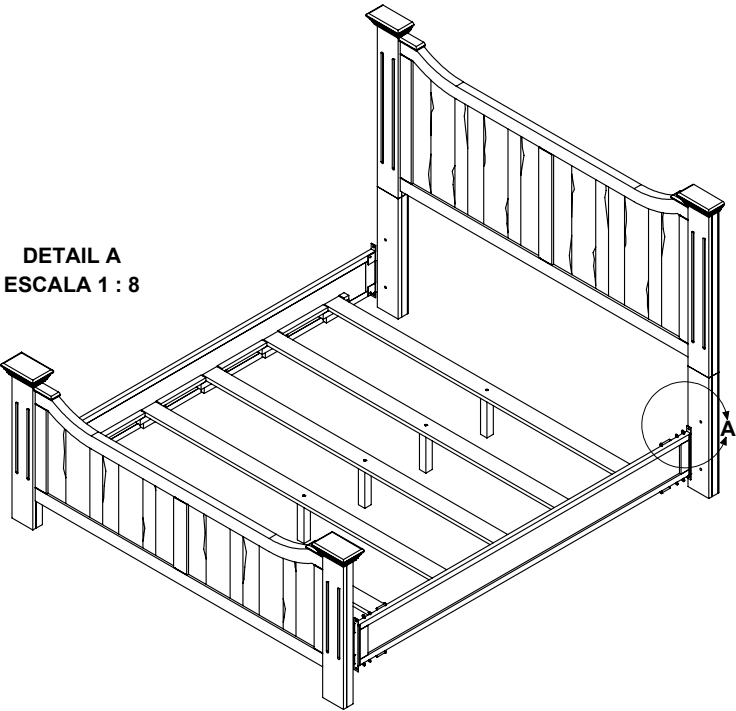


STEP 2: FOOTBOARD ASSEMBLY

ATTACH THE RAILS TO THE FOOTBOARD BY ALIGNING THE PRE-DRILLED HOLES AND SECURING THEM WITH THE HARDWARE INDICATED IN DETAIL (B). REPEAT THE SAME PROCEDURE ON THE OTHER SIDE.

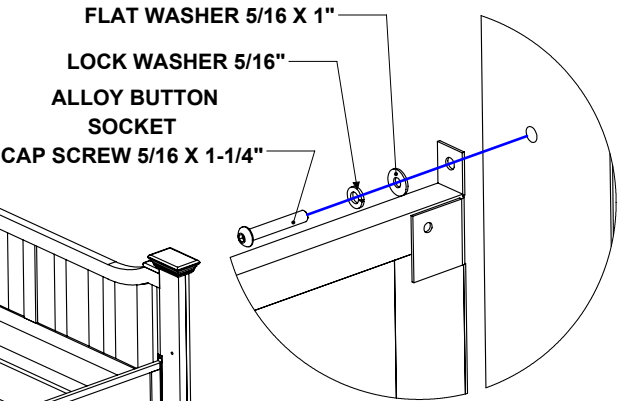

DETAIL B
ESCALA 1 : 5

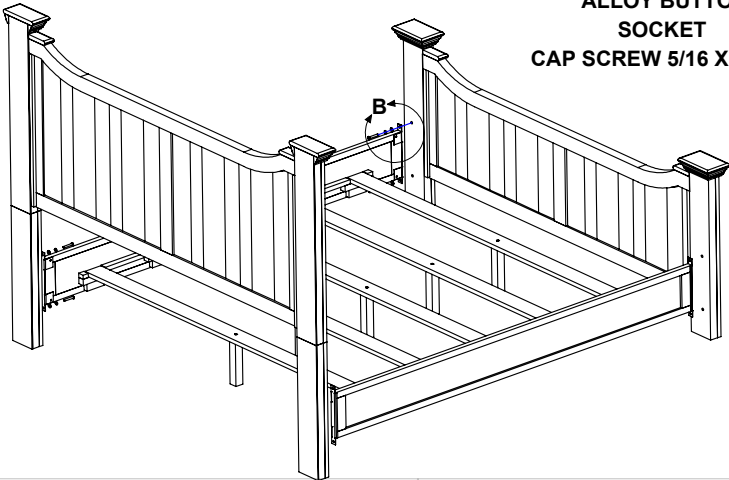


STEP 3: PLATFORM INSTALLATION

SECURE THE SUPPORT LEG TO THE PLATFORM BOARD USING SCREWS. ONCE ASSEMBLED, POSITION THE PLATFORM BOARDS INTO THE DESIGNATED SLOTS ON THE RAILS.

STEP 4: MATTRESS PLACEMENT

FINALLY, PLACE THE PREFERRED MATTRESS ON THE ASSEMBLED STRUCTURE.

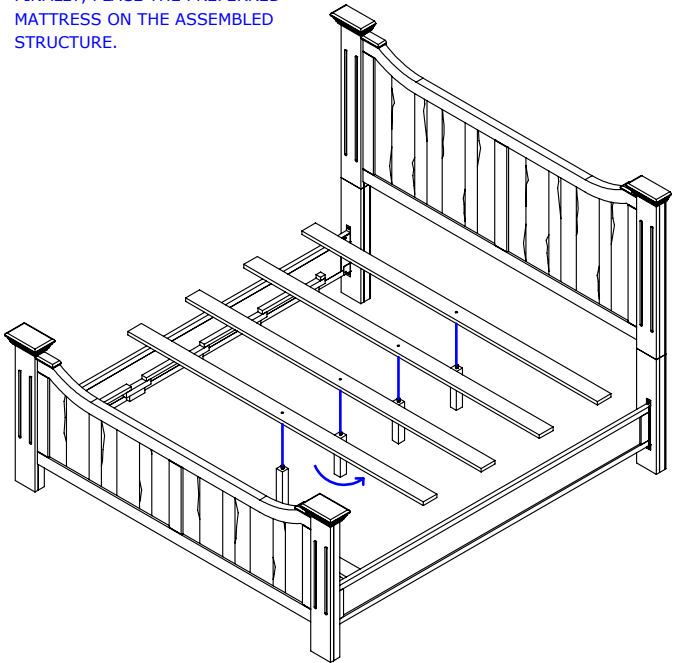

DESCRIPTION	#
ALLOY BUTTON SOCKET CAP SCREW 5/16 X 2"	4
ALLOY BUTTON SOCKET CAP SCREW 5/16 X 1-1/4"	4
LOCK WASHER 5/16"	8
FLAT WASHER 5/16 X 1"	8
HEX KEY 3/16"	1