



1)

1. ALIGN THE RAILS WITH THE HEADBOARD AND PLATFORM
2. FIRST INSERT THE SCREWS AS SHOWN IN FIG. A, AND MAKE SURE THAT THE PERFORATION ARE ALIGNED.

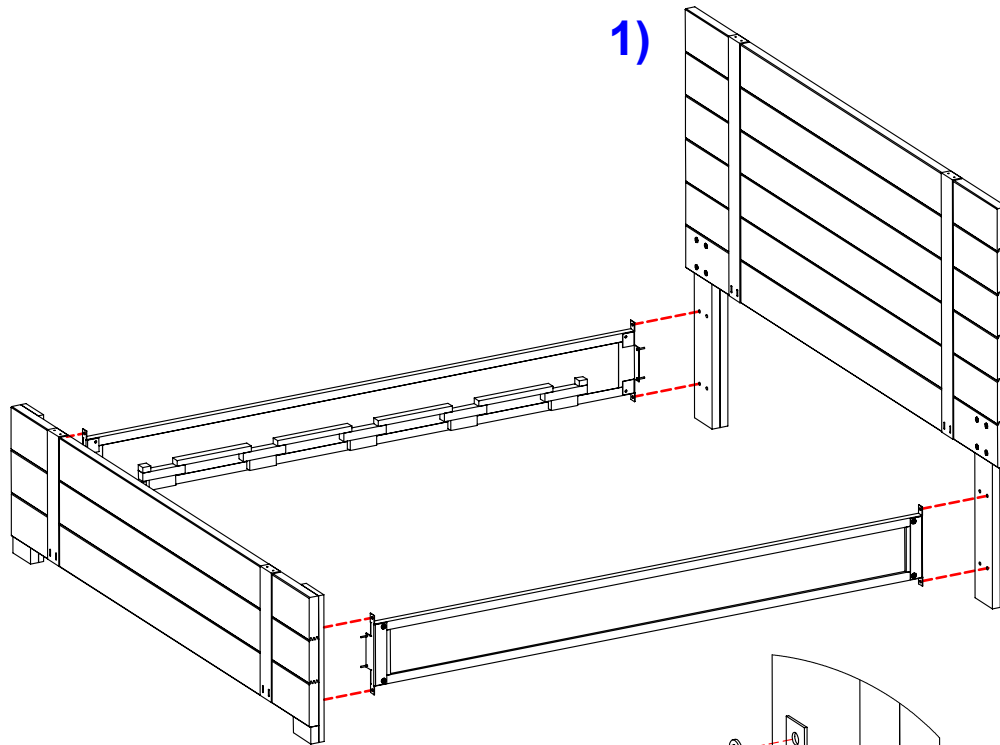

2)

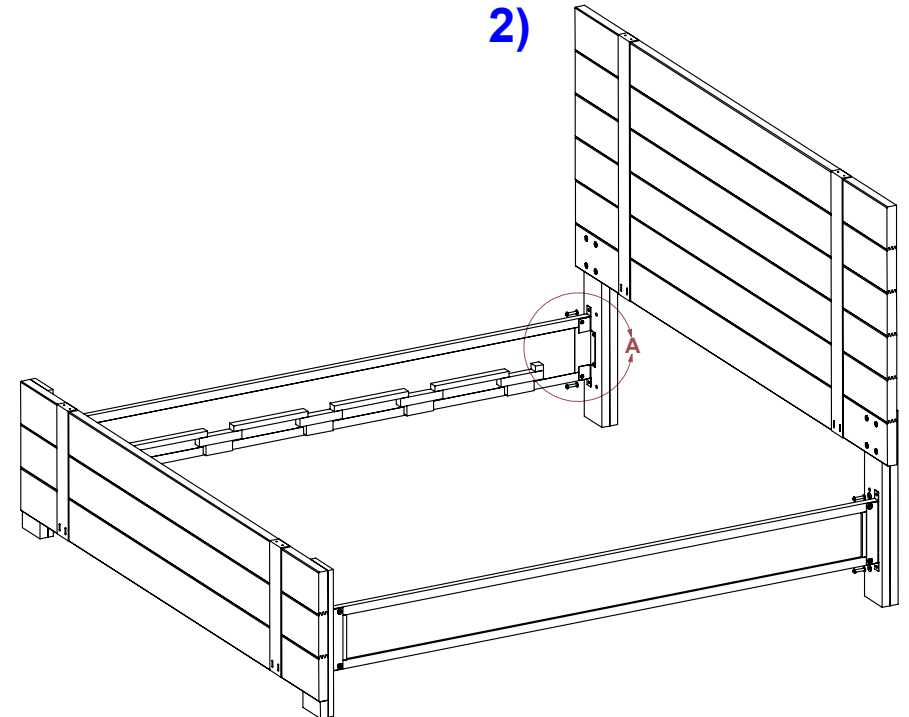


SOCKET BUTTON HEAD 5/16 X 1-1/2

SPLIT LOCK WASHER 5/16

PAN HEAD SCREWS 8 X 1"

A

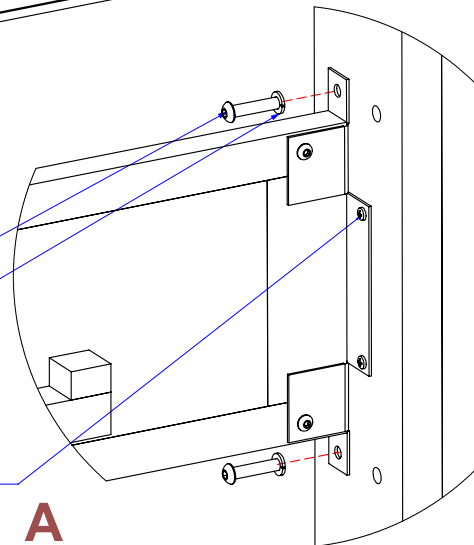

ASSEMBLING INSTRUCTIONS

I-PLT-E007

1/2

DESCRIPTION	#
SOCKET BUTTON HEAD 5/16 X 1-1/2"	4
SOCKET BUTTON HEAD 5/16 X 3/4"	4
PAN HEAD SCREWS 8 X 1"	8
SPLIT LOCK WASHER 5/16	8
ALLEN KEY 3/16	1

ifd



INTERNATIONAL
FURNITURE DIRECT, LLC

B

SPLIT LOCK WASHER 5/16

SOCKET BUTTON HEAD 5/16 X 3/4

PAN HEAD SCREWS 8 X1"

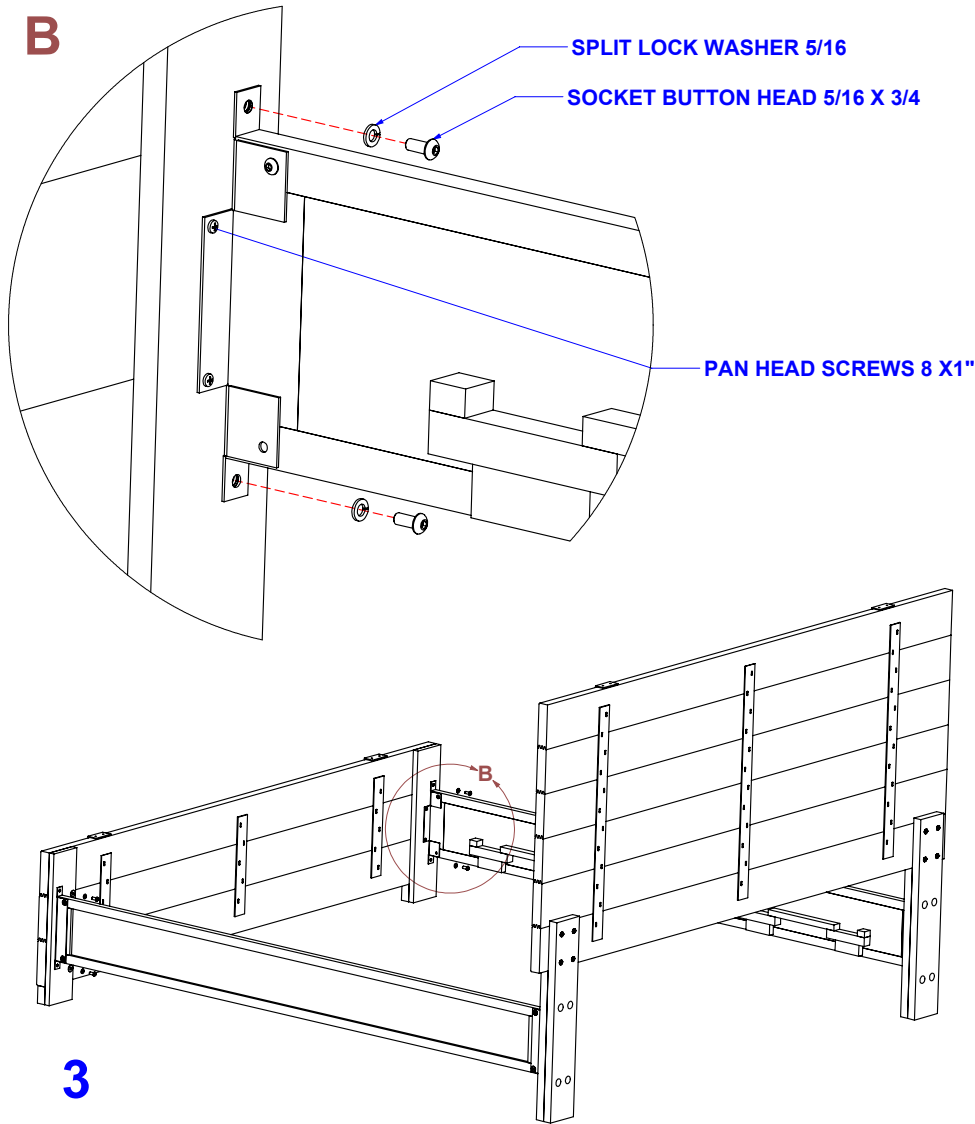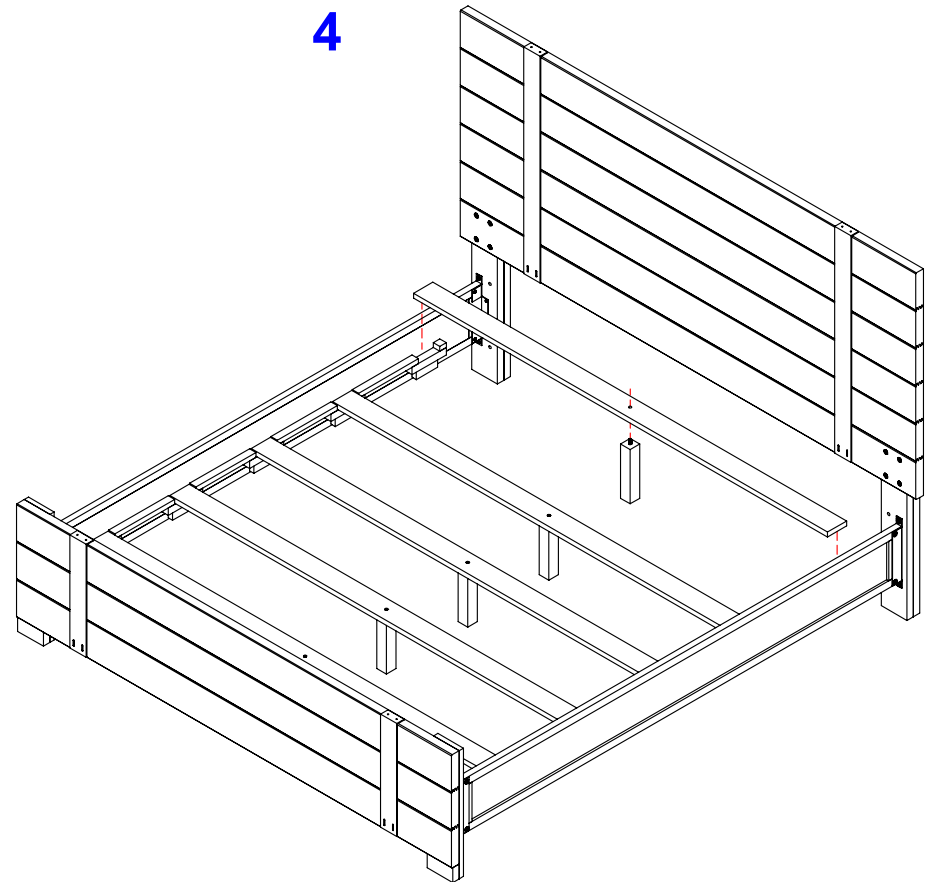**4**

3. AFTER TO INSERT THE HEADBOARD SCREWS, INSERT THE PLATFORM SCREWS AS SHOWN IN FIG.B

4. FOR THE END INSERT THE CENTER LEGS IN THE SLAT'S HOLES AND PLACE ALL THE SLATS AS SHOWN IN IMAGE 4.



INTERNATIONAL
FURNITURE DIRECT, LLC

ASSEMBLING INSTRUCTIONS

I-PLT-E007

2/2

ITEM	DESCRIPTION	#
1TOR009	TORNILLO ALLEN CABEZA BOLA 5/16 X 1-1/2"	4
1TOR003	TORNILLO ALLEN CABEZA BOLA 5/16 X 3/4"	4
1PIJ003	PIJA PAVONADA CABEZA SARTEN 8 X 1	8
1RON011	RONDANA DE PRESION 5/16	8
1HER251	LLAVE ALLEN 3/16	1



ASSEMBLING INSTRUCTIONS

I-MIX-E008