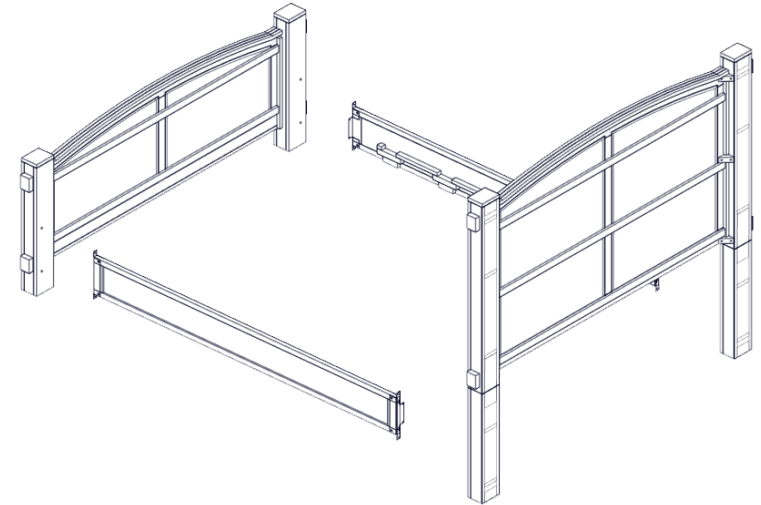
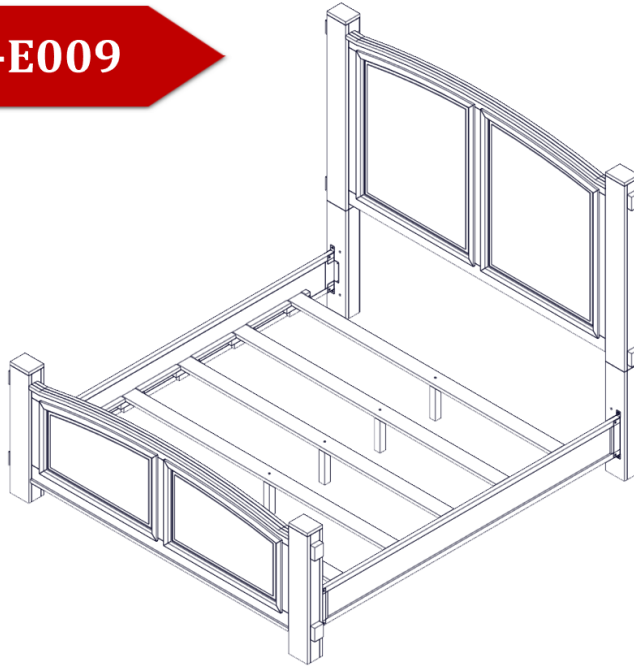
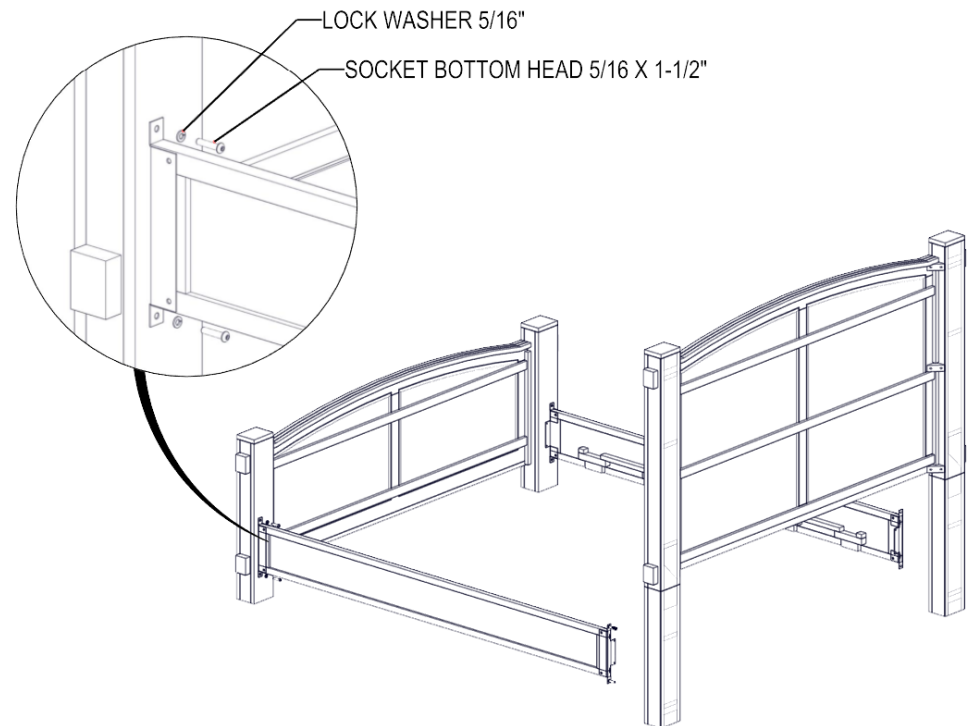


I-RLS-E009**STEP****1**

1.- ALIGN THE RAILS TO THE FOOTBOARD FIRST
2.- INSERT THE HARDWARE AS SHOWN IN FIG. 2,
THEN CONTINUE TO DO THE SAME WITH THE
HEADBOARD.


STEP**2**

LOCK WASHER 5/16"


SOCKET BOTTOM HEAD 5/16 X 1-1/2"

DESCRIPTION	#
SOCKET BUTTON HEAD 5/16 X 1-1/2	8
LOCK WASHER 5/16	8
PAN HEAD SCREWS 8 X 1"	8
HEX KEY 3/16	1


STEP
3

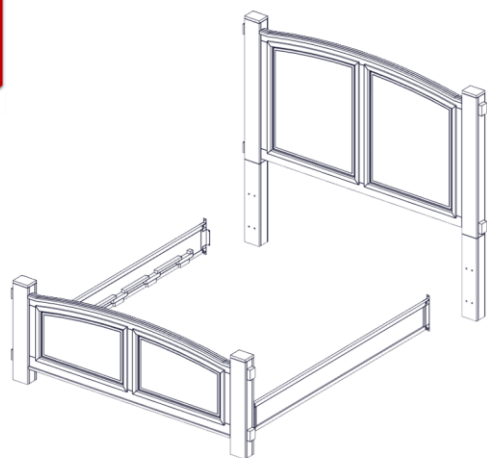

STEP
5


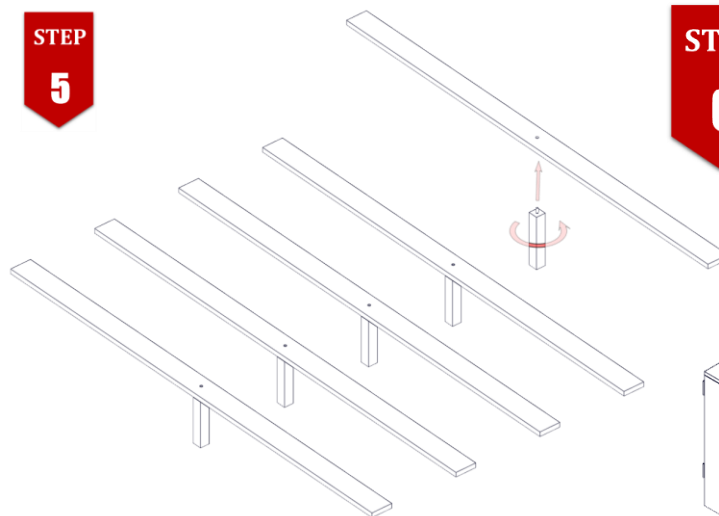


STEP
6

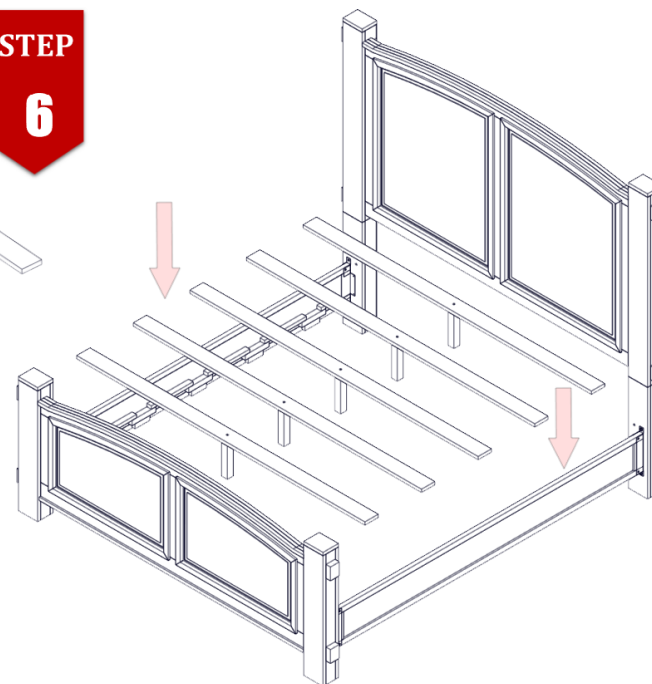

STEP
4

LOCK WASHER 5/16
SOCKET BOTTOM HEAD 5/16 X 1-1/2"

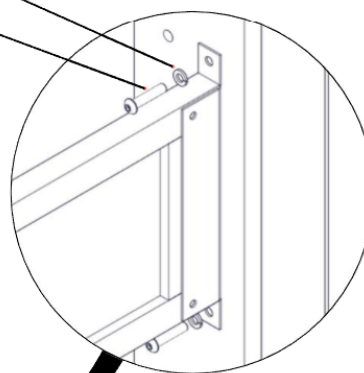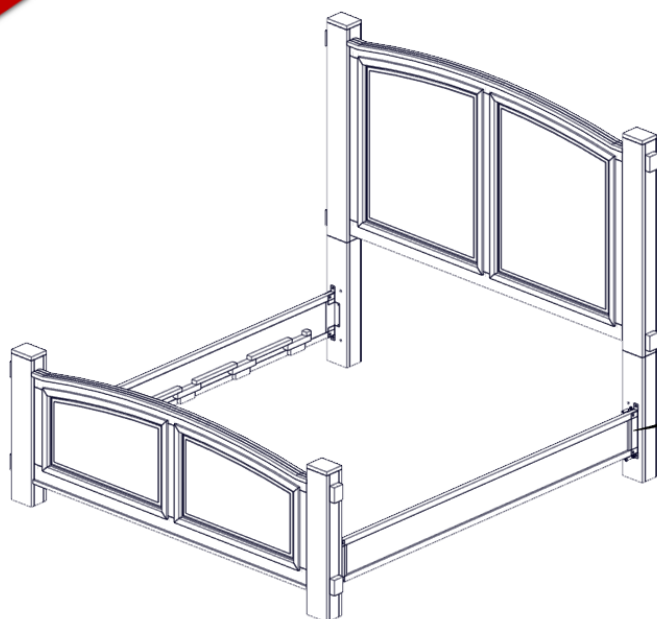

3.- ONCE THE RAILS ARE ATTACHED TO THE HEADBOARD AND FOOTBOARD, SECURE THEM BY INSERTING THE SCREWS INTERNALLY.

5.- LASTLY, INSERT THE LEGS IN THE SLATS AS SHOWN IN STEP 5 AND PLACE THEM OVER THE RAIL. SAME THAT STEP 6.

ifd | INTERNATIONAL
FURNITURE DIRECT, LLC

ITEM	DESCRIPTION	#
1TOR005	TORNILLO ALLEN CABEZA BOLA 5/16 X 1-1/2	8
1RON011	RONDANA DE PRESION 5/16	8
1PIJ003	PIJA CABEZA SARTEN CRUZ 8 X 1"	8
1HER251	LLAVE ALLEN 3/16	1