


STEP 1

WITH THE HELP OF SOMEONE TO PLACE,
THE COVER ON A FLAT SURFACE ON THE SIDE
OF THE HOLES


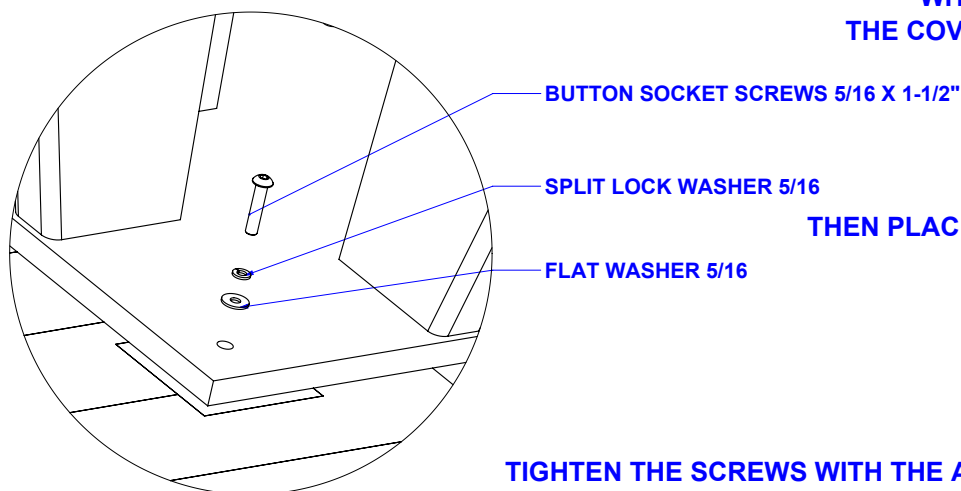


STEP 2

THEN PLACE THE BASE, MATCHING THE HOLES TO
THE HOLES TO PLACE THE SCREWS
SCREWS MENTIONED IN THE FIGURE A

STEP 3

TIGHTEN THE SCREWS WITH THE ALLEN WRENCH, AND THEN TURN THE
THEN TURN THE DINING ROOM OVER WITH THE HELP OF SOMEONE
AND PLACE IT IN THE DESIRED PLACE

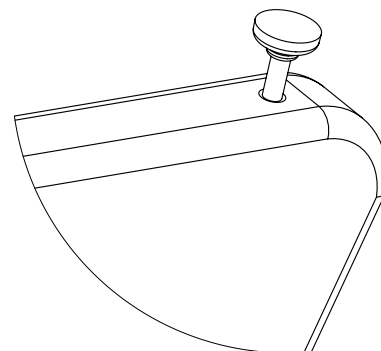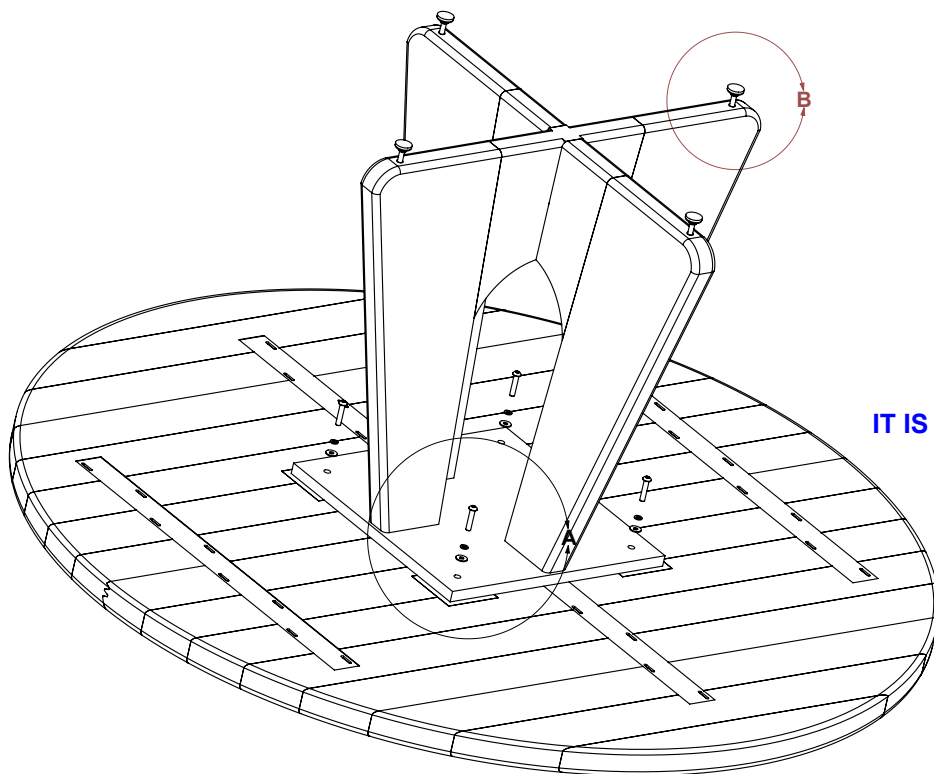

STEP 4

REMEMBER THAT IT HAS LEVELERS,
ONCE PLACED IN THE DESIRED LOCATION
IT IS NECESSARY TO LEVEL WITH THE SURFACE

DESCRIPTION	#
SOCKET BUTTOM HEAD 5/16 X 1-1/2"	4
FLAT WASHER 5/16	4
SPLIT LOCK WASHER 5/16	4
ALLEN KEY 3/16	1

ITEM	DESCRIPTION	#
1TOR005	TORNILLO ALLEN 5/16 X 1-1/2"	4
1RON011	RONDANA DE PRESION 5/16	4
1RON003	RONDANA PLANA 5/16	4
1HER251	ALLEN KEY 3/16	1
EL NIVELADOR SE VA CON LA BASE		



INTERNATIONAL
FURNITURE DIRECT, LLC

ASSEMBLING INSTRUCTIONS

I-RNDTP-E004