




# ASSEMBLY INSTRUCTIONS

I-SBT-C001-WT

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

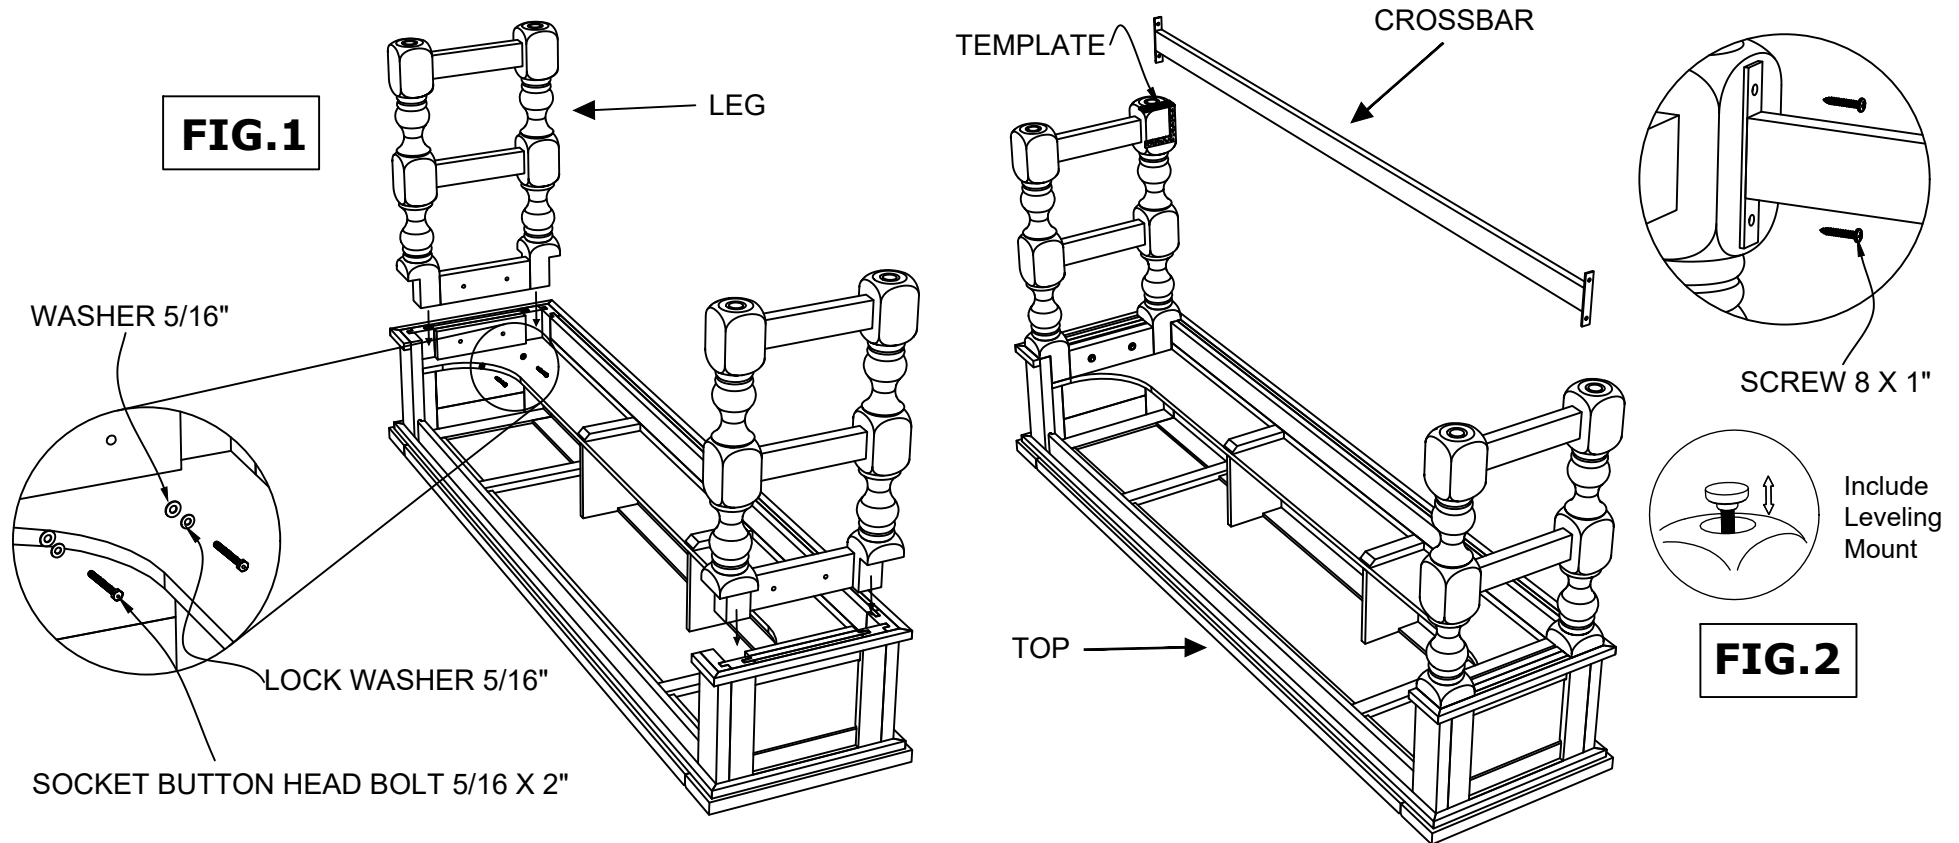

## INSTRUCTIONS:

- 1.- FOR ASSEMBLY PLACE THE TABLE TOP UPSIDE DOWN OVER A CLEAN CLOTH.
- 2.- ALIGN THE HOLES OF THE LEGS WITH THE TABLE TOP PRE-DRILLED HOLES AND SCREW AS SHOW IN FIG. 1.
- 3.- WITH HELP USE THE TEMPLATE ON THE BACK LEGS AND SCREW THE CROSSBAR BETWEEN THEM AS SHOWN IN FIG 2.

HARDWARE	
DESCRIPTION	# PCS
SOCKET BUTTON HEAD BOLT 5/16 X 2"	4
WASHER 5/16"	4
FLAT HEAD SCREW 8 X 1"	4
LEVELING MOUNT 5/16" X 1"	4
LOCK WASHER 5/16	4
ALLEN KEY 3/16	1