





# ASSEMBLY INSTRUCTIONS

I-SBT-C003



PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

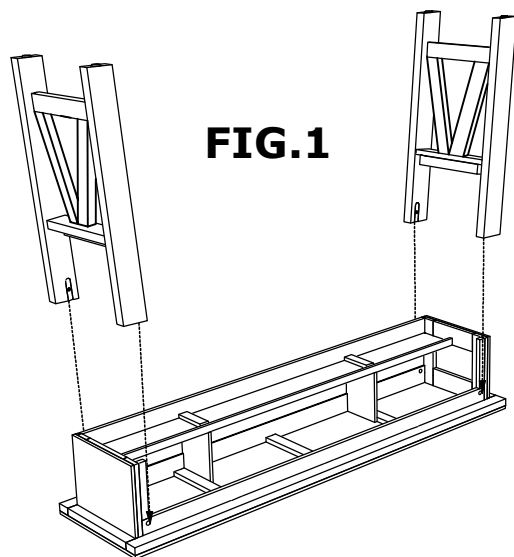



**FIG.1**

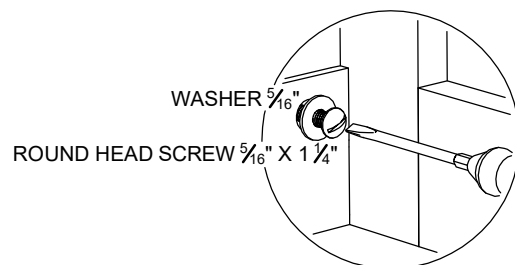

**FIG.2**

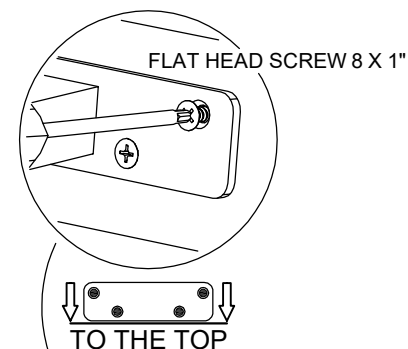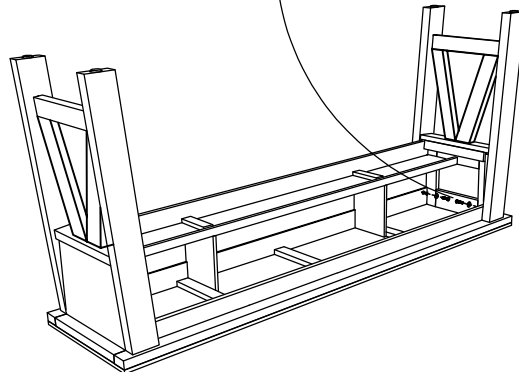

**FIG.3**

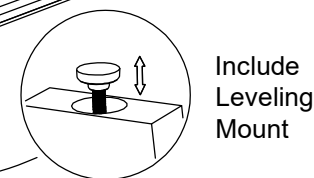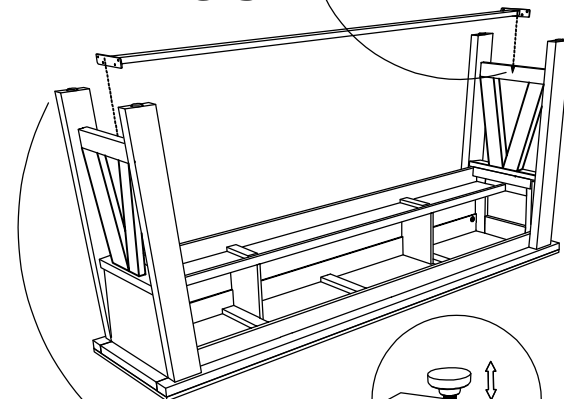

## INSTRUCTIONS:

- 1.- FOR ASSEMBLY PLACE THE TABLE TOP UPSIDE DOWN OVER A CLEAN CLOTH.
- 2.- ALIGN THE LEG HOLES WITH THE TABLE TOP PRE-DRILLED HOLES AS SHOWN IN FIG 1. AND SCREW THE LEGS AS SHOW IN FIG 2.
- 3.- PLACE THE CROSSBAR BETWEEN THE LEGS AND SCREW THEM AS SHOW IN FIG 3.
- 4.- TURN THE TABLE BACK TO STANDING POSITION

HARDWARE	
DESCRIPTION	# PCS
ROUND HEAD SCREW $\frac{5}{16}$ " X $1\frac{1}{4}$ "	4
WASHER $\frac{5}{16}$ "	4
FLAT HEAD SCREW 8 X 1"	8
LEVELING MOUNT $\frac{5}{16}$ " X 1"	4