


## STEP 1

WITH SOMEONE'S HELP, WE FLIP THE DECK OVER,  
LOOKING TO POSITION THE DECK, LOOKING TO POSITION  
THE HOLES WITH THE BASE, WHEN WE HAVE  
THEM IN THE POSITION OF THE HOLES,  
WE PLACE THE WE PLACE THE  
BOLT SHOWN IN FIGURE A.

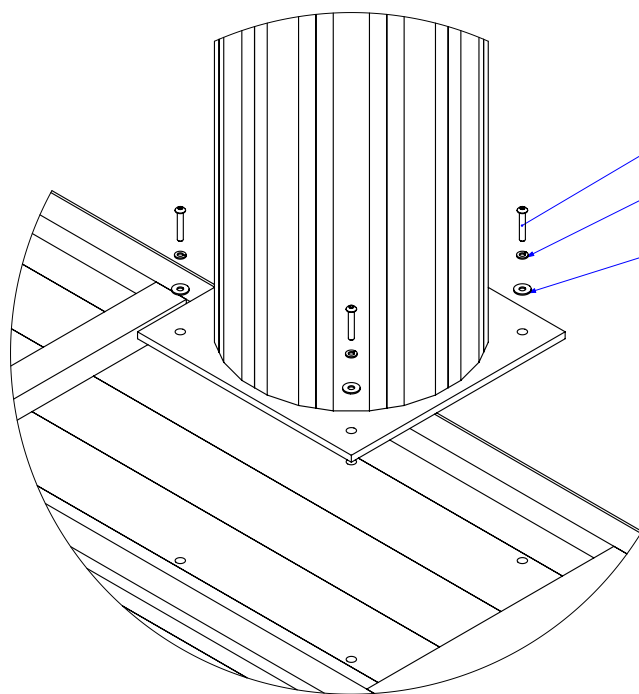

BUTTON SOCKET SCREW 5/16 X 1"

SPLIT LOCK WASHER 5/16


FLAT WASHER 5/16 X 1

POSITION

NOTE: PLACE THE BASES WITH THE  
SCREWS AS SHOWN IN FIGURE B.

POSITION

FIG B

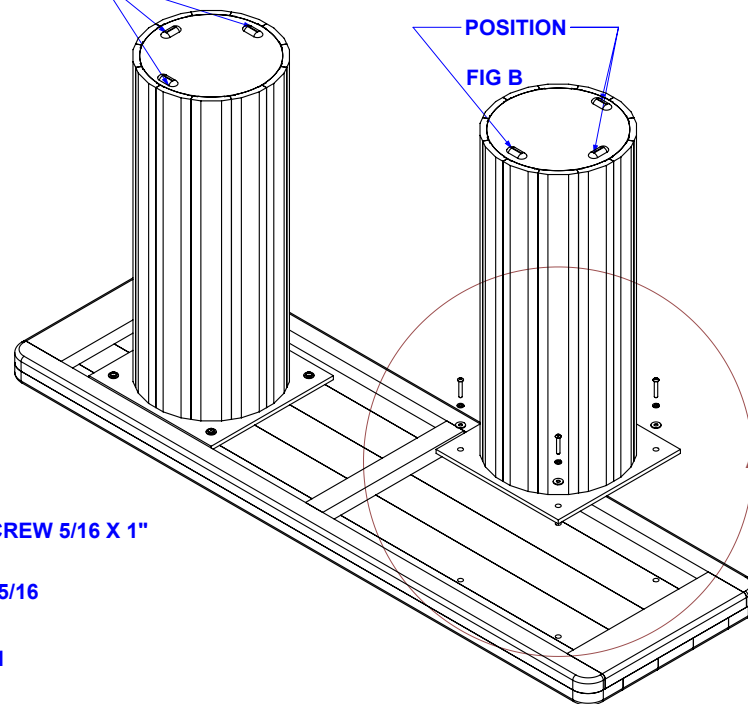

## STEP 2

ONCE THE BASES ARE SCREWED TOGETHER WITH THE COVER,  
WITH THE HELP OF SOMEONE WE FLIP THE FURNITURE AND  
PLACE IT IN THE DESIRED LOCATION

DESCRIPTION	#
BUTTON SOCKET SCREW 5/16 X 1"	8
SPLIT LOCK WASHER 5/16	8
FLAT WASHER 5/16 X 1	8
ALLEN KEY 3/16	1



INTERNATIONAL  
FURNITURE DIRECT, LLC

ITEM:

ASSEMBLING INSTRUCTIONS

I-SOF-E002

ITEM	DESCRIPTION	#PZ
1RON003	RONDANA PLANA 5/16 X 1" NEGRA	8
1RON011	RONDANA DE PRESION 5/16	8
1RON008	TORNILLO ALLEN CABEZA BOLA 5/16 X 1"	8
1HER251	LLAVE ALLEN 3/16	1



ITEM:

## ASSEMBLING INSTRUCTIONS

I-SOF-E002