



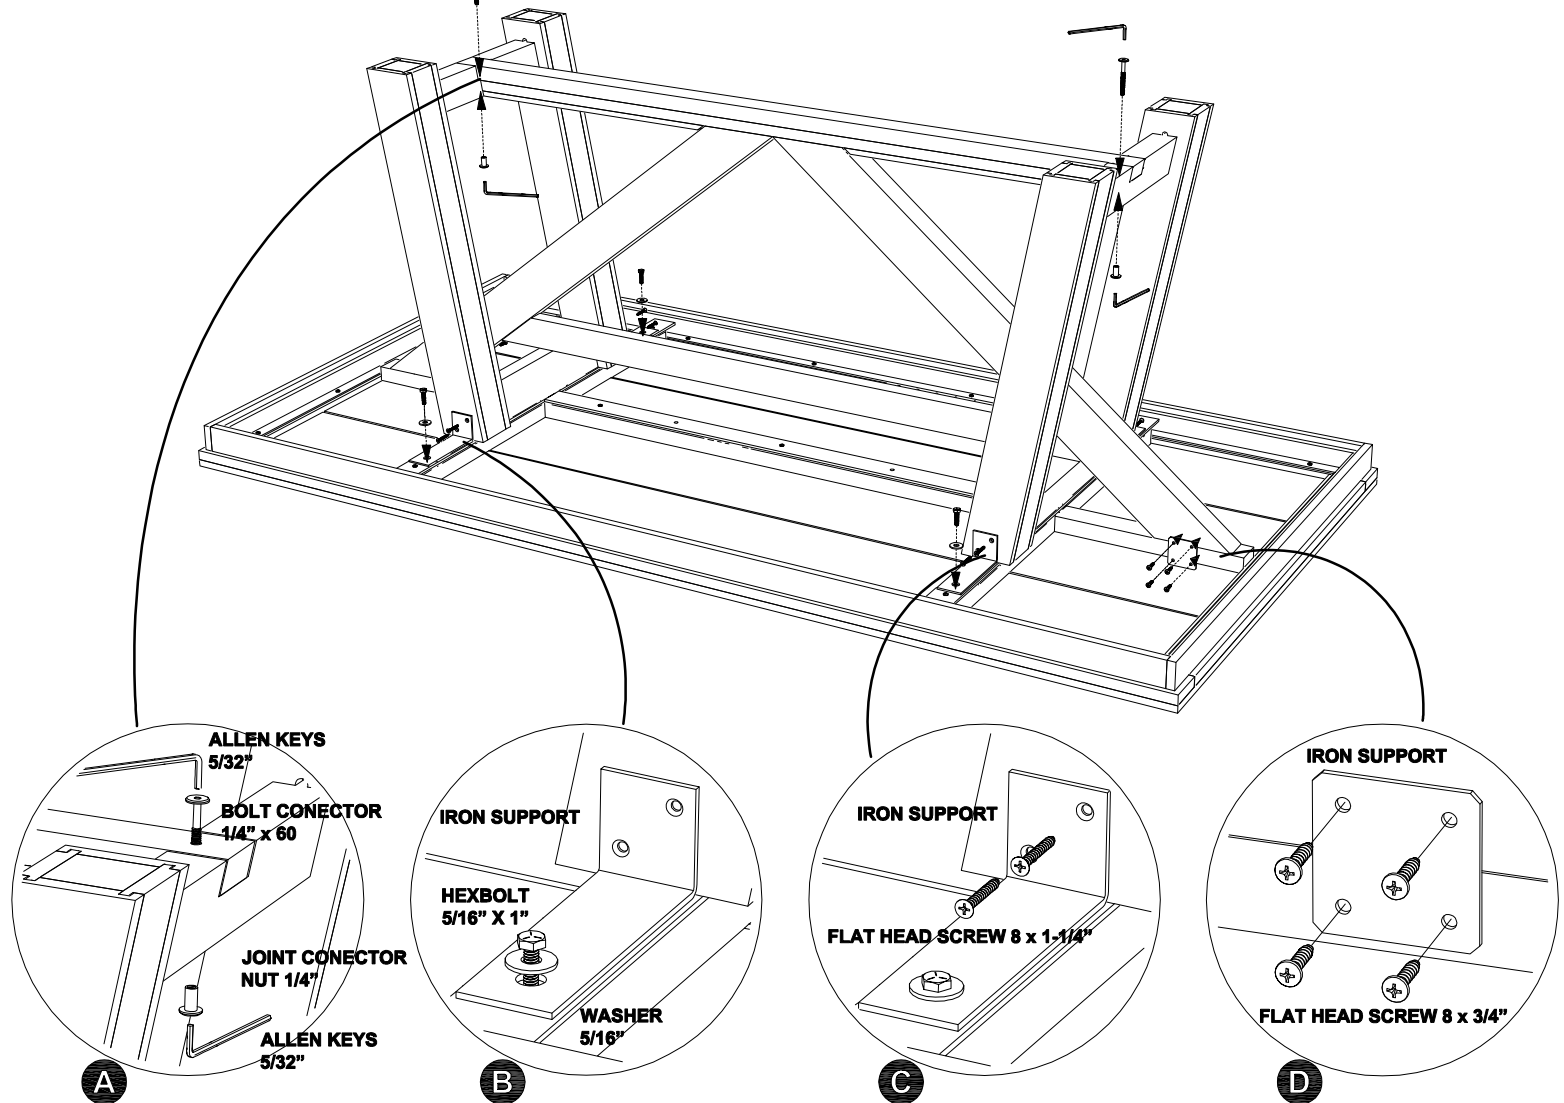

ASSEMBLY INSTRUCTIONS

I-TBL-C008-BK

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

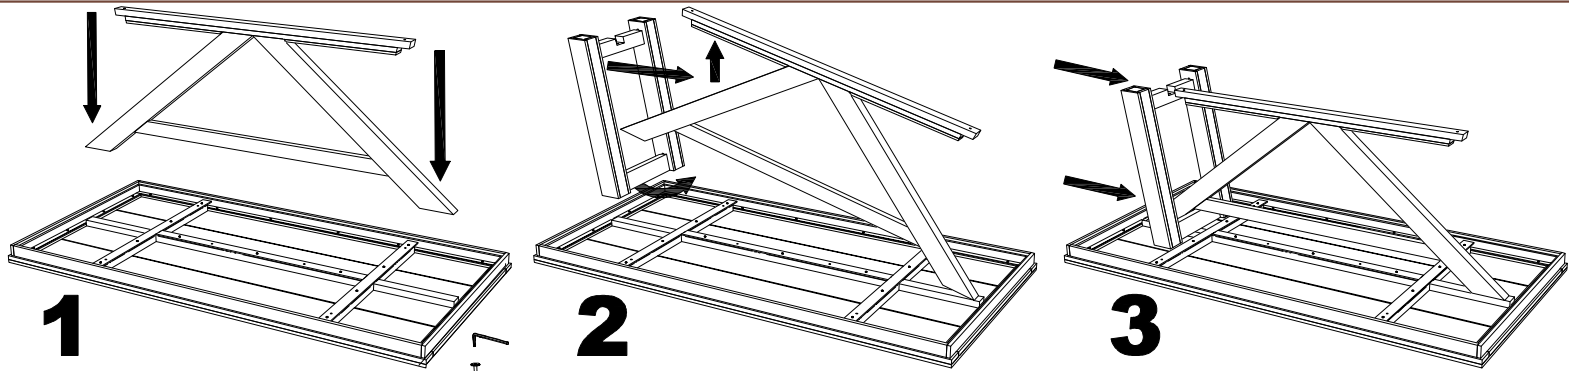

1. TURN DOWN THE TOP AND PLACE THE CROSSBAR OVER.
2. PLACE THE LEGS BETWEEN THE TOP AND CROSSBAR.
3. ALIGN THE HOLES OF THE LEGS IN THE CROSSBAR.
4. SCREW THE BOLTS AS SHOWN IN FIG. "A".
5. PLACE THE IRON SUPPORT, ALIGN THE HOLES AND SCREW THEM AS SHOWN IN FIG. "B" AND "C".

HARDWARE	
DESCRIPTION	# PCS
ALLEN KEY 5/32"	2
JOINT CONNECTOR ALLEN BOLT 1/4" x 60	2
JOINT CONNECTOR NUT 1/4"	2
HEX BOLT 5/16" X 1"	4
WASHER 5/16"	4
FLAT HEAD SCREW 8 x 3/4"	8
FLAT HEAD SCREW 8 x 1-1/4"	8
IRON SUPPORT 3HOLES	4
IRON SUPPORT 4HOLES	2