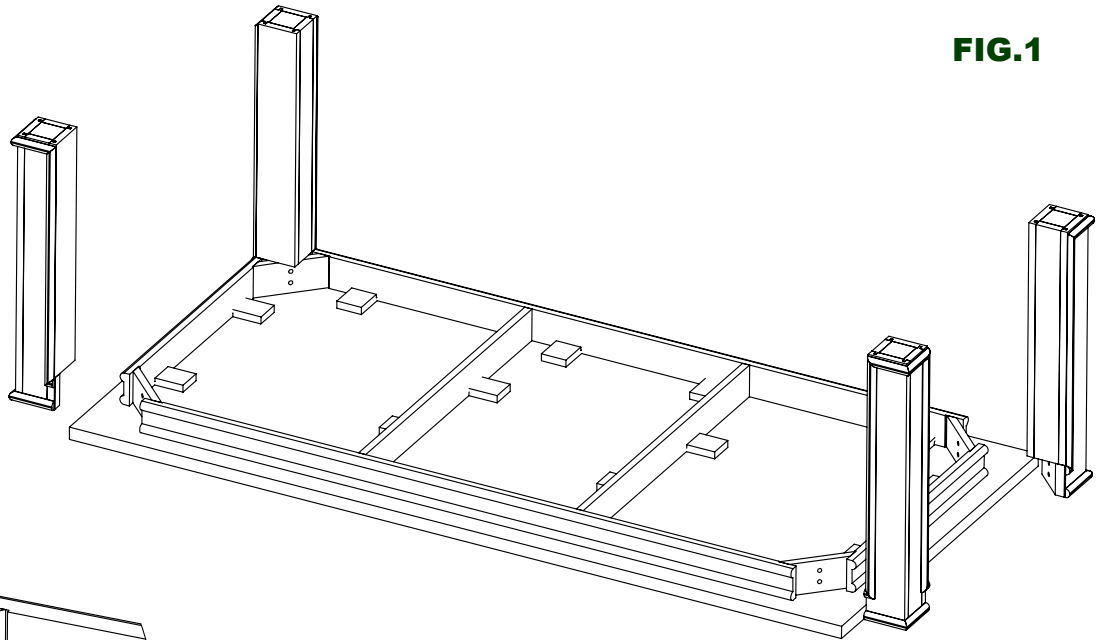
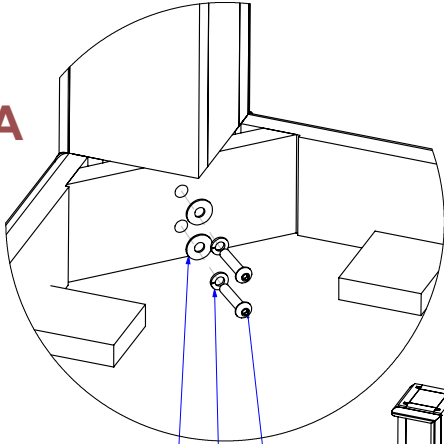


FIG.1**STEP 1**


1. WITH SOMEONE HELP PLACE THE TABLE IN TO THE FLAT AND CLEAN SURFACE, LATER PLACE THE LEGS IN THE CORNERS OF THE TABLE AND ALIGN WITH THE PERFORATIONS AS SHOWN IN FIG. 1

**A**


FLAT WASHER 5/16 X 1"

SPLIT LOCK WASHER 5/16

BUTTON SOCKET SCREW 5/16 x 1-1/2"

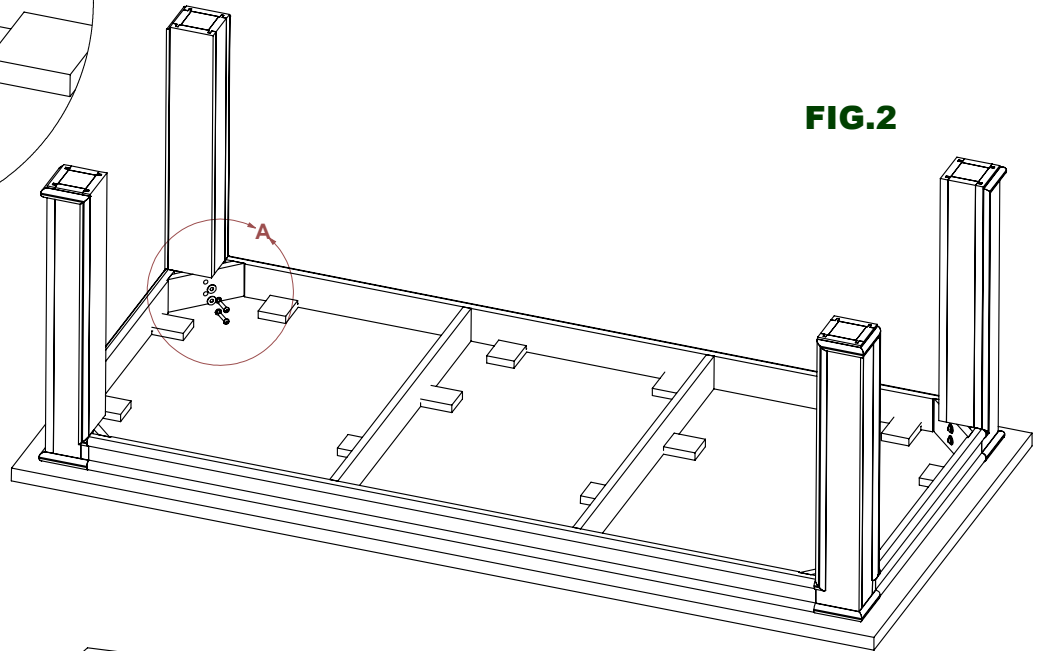FIG.2**STEP 2**

2. WHEN THE LEGS ARE IN THE CORRECT PLACE IS TIME TO INSERT THE SCRES AS SHOWN IN PICTURE A AND REPEAT THE STEPS IN THE 4 CORNERS.
3. FINALLY WITH THE SOMEONE HELP PLACE THE TABLE IN THE CORRECT POSITIONS.

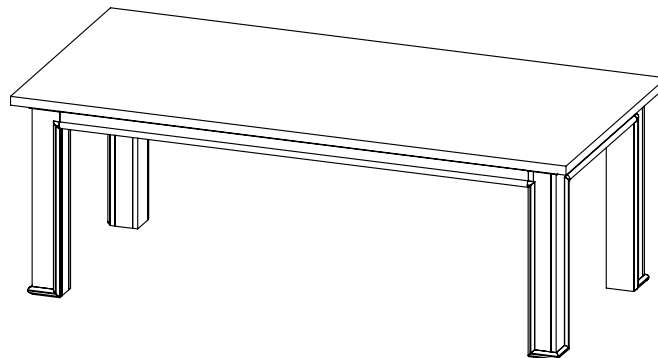

DESCRIPTION	#
FLAT WASHER 5/16 x 1"	8
SPLIT LOCK WASHER 5/16	8
BUTTON SOCKET SCREW 5/16 x1-1/2	8
ALLEN KEYS 3/16	1

ITEM	DESCRIPTION	#
1RON003	RONDANA PLANA 5/16 X 1	8
1RON011	RONDANA DE PRESION 5/16	8
1TOR005	TORNILLO ALLEN 5/16 x1-1/2	8
1HER251	LLAVE ALLEN 3/16	1



CODIGO:

COLECCION: