


NOTE: FOR BEST RESULTS, TIGHTEN THE SCREWS ALL THE WAY TO THE END OF THE DINETTE ASSEMBLY.


STEP 1

TAKE THE LATERAL BASES AND JOIN THEM TO THE CENTRAL LEGS WITH THE WITH THE HARDWARE SHOWN IN IN FIGURE A

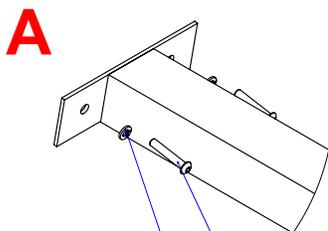


SPLIT LOCK WASHER 1/4"

BUTTON SOCKET SCREW 1/4" X 1"

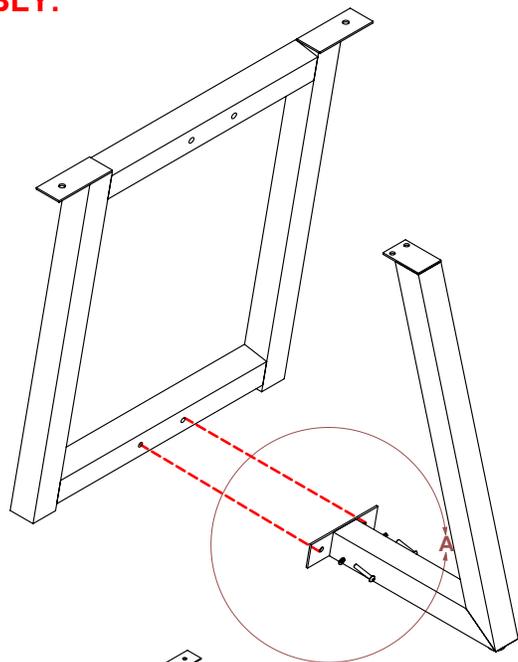


STEP 2

THEN TAKE AND ALIGN THE LATERAL BASES WITH THE CROSSBEAM AS SHOWN IN AS SHOWN IN FIGURE B.

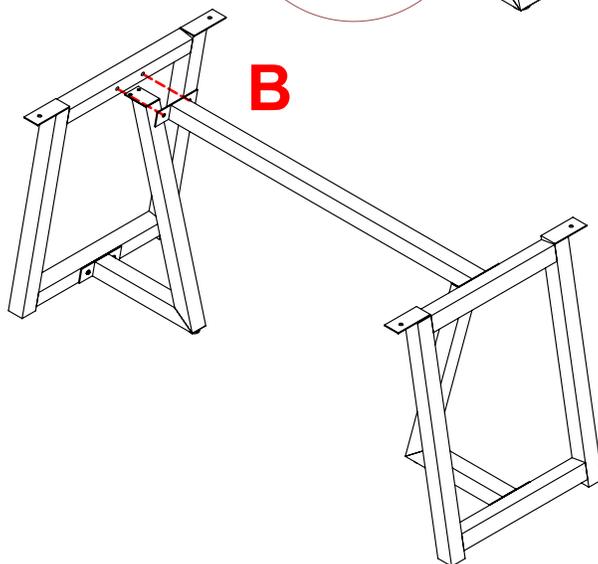


STEP 3

ONCE ALIGNED INSERT THE SCREWS SHOWN IN FIGURE C.

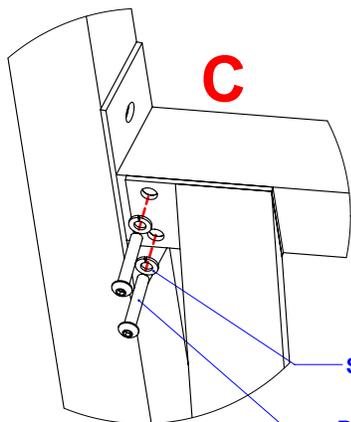

SPLIT LOCK WASHER 1/4"

BUTTON SOCKET SCREW 1/4" X 1"

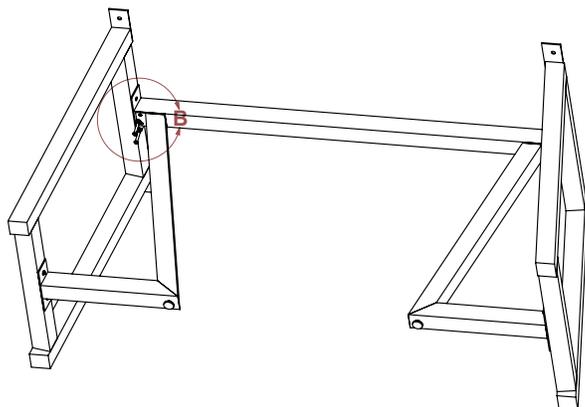

INTERNATIONAL FURNITURE DIRECT, LLC

ASSEMBLING INSTRUCTIONS


I-TBL-E019

| DESCRIPTION | # |
|-------------------------------|----|
| BUTTON SOCKET SCREW 5/16 X 1" | 4 |
| BUTTON SOCKET SCREW 1/4 X 1" | 12 |
| SPLIT LOCK WASHER 1/4" | 12 |
| SPLIT LOCK WASHER 5/16" | 4 |
| FLAT WASHER 5/16 X 1" | 4 |
| ALLEN KEY 3/16 | 1 |
| ALLEN KEY 5/32 | 1 |


NOTE: FOR BEST RESULTS, TIGHTEN THE SCREWS ALL THE WAY TO THE END OF THE DINETTE ASSEMBLY.

STEP 4

AS A FINAL STEP FOR THE IRONWORK, THE CROSSBEAM IS THE CROSSBAR IS ALIGNED WITH THE SIDE THE LATERAL BASE TO PLACE THE HARDWARE SHOWN IN FIGURE D

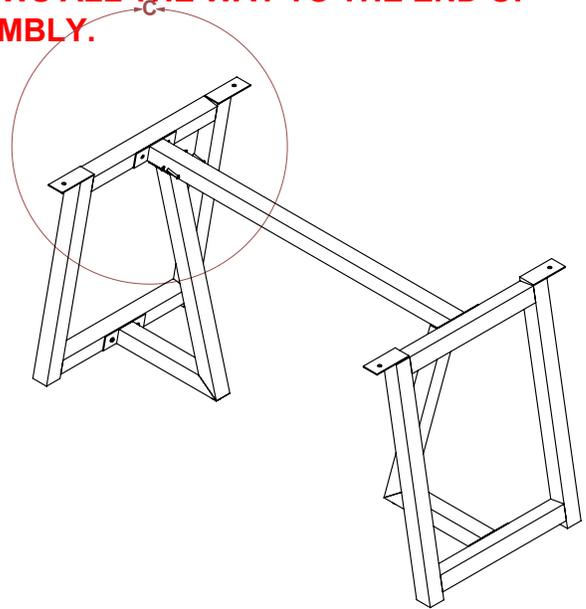

D


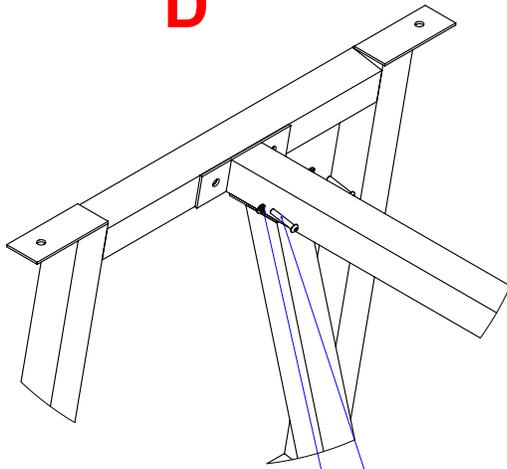


BUTTON SOCKET SCREW
1/4 X 1"

SPLIT LOCK WASHER 5/16

STEP 5

WITH SOMEONE'S HELP FLIP THE COVER TO MATCH THE THE BASE AND THE COVER, PLACE THE SCREWS THAT ARE THE COVER, PLACE THE SCREWS SHOWN IN THE SHOWN IN FIGURE E

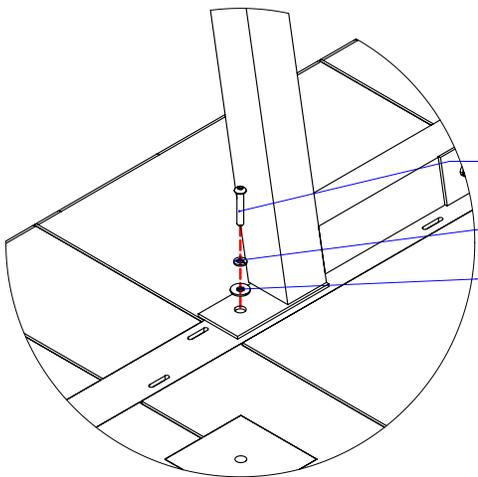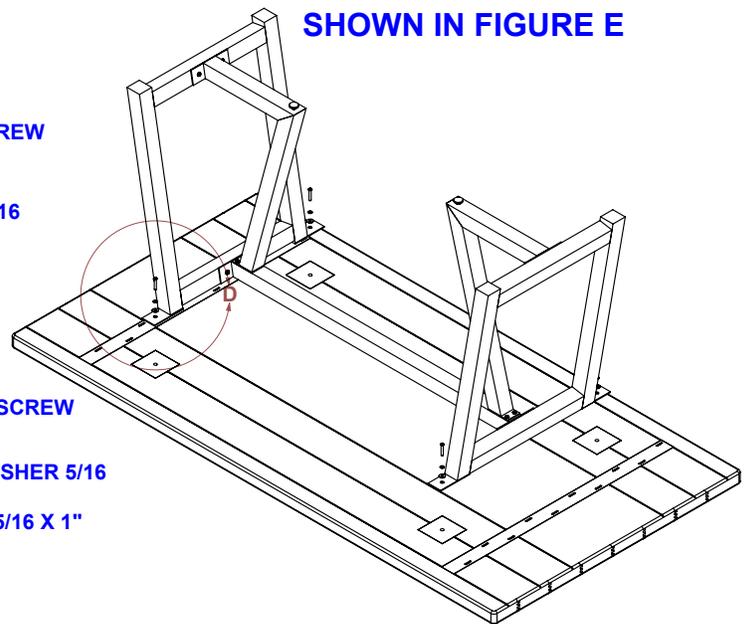

BUTTON SOCKET SCREW
5/16 X 1"

SPLIT LOCK WASHER 5/16

FLAT WASHER 5/16 X 1"



ASSEMBLING INSTRUCTIONS

I-TBL-E019

| DESCRIPTION | # |
|-------------------------------|----|
| BUTTON SOCKET SCREW 5/16 X 1" | 4 |
| BUTTON SOCKET SCREW 1/4 X 1" | 12 |
| SPLIT LOCK WASHER 1/4" | 12 |
| SPLIT LOCK WASHER 5/16" | 4 |
| FLAT WASHER 5/16 X 1" | 4 |
| ALLEN KEY 3/16 | 1 |
| ALLEN KEY 5/32 | 1 |