


STEP 1

WITH THE HELP OF SOMEONE ELSE TURN THE TABLE AND PLACE THE TOP ON A FLAT SURFACE. PLACE THE WOODEN BOLT INSIDE THE HOLES OF TOP AND THEN ALING THE LEGS HOLES WITH THE WOODEN BOLT AS SHOWN IN FIGURE "A"

THE IMAGES ARE FOR REFERENCE ONLY.

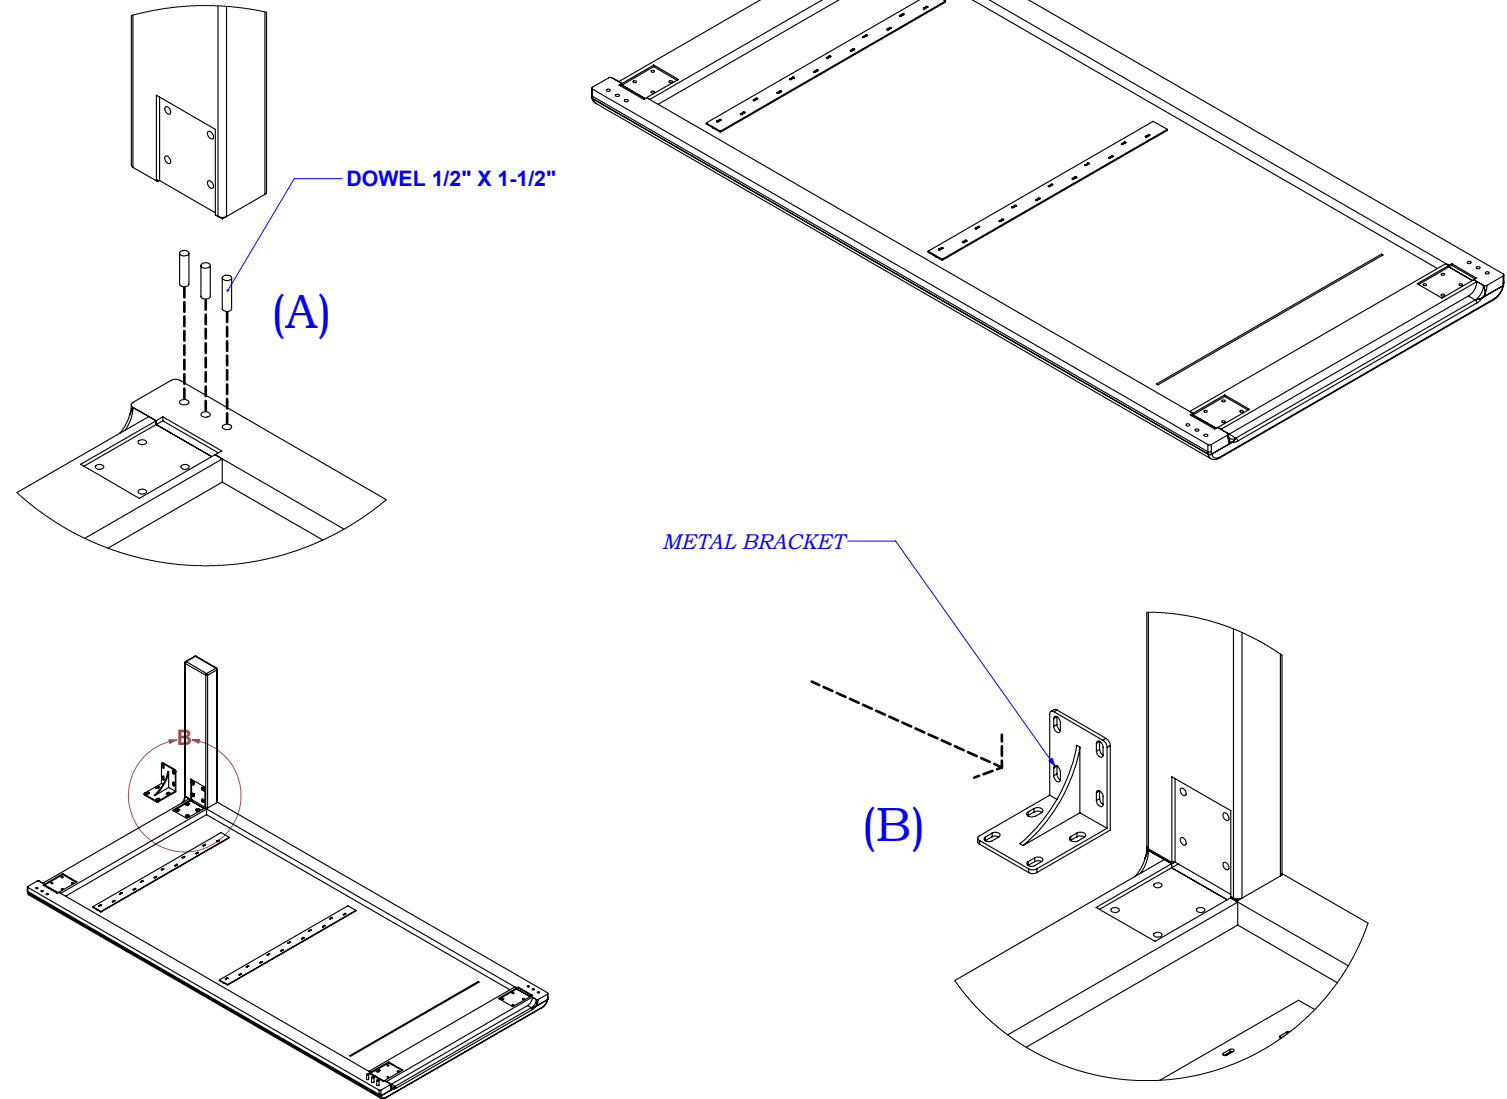

STEP 2

ONCE THE LEGS ARE IN THEIR PLACE, POSITION THE METAL BRACKET AS SHOWN IN FIG. "B"




ASSEMBLING
INSTRUCTIONS

I-TBL-E027

DESCRIPTION	#
DOWEL 1/2" X 1-1/2"	12
UNION SCREW 1/4" X 3/4"	32
ALLEN KEY 5/32"	1


STEP 3

ONCE THE HOLES HAVE BEEN MATCHED PLACE THE UNION SCREWS 1/4" X 3/4" AS SHOWN IN FIGURE "C" AND TIGHTEN THE SCREWS

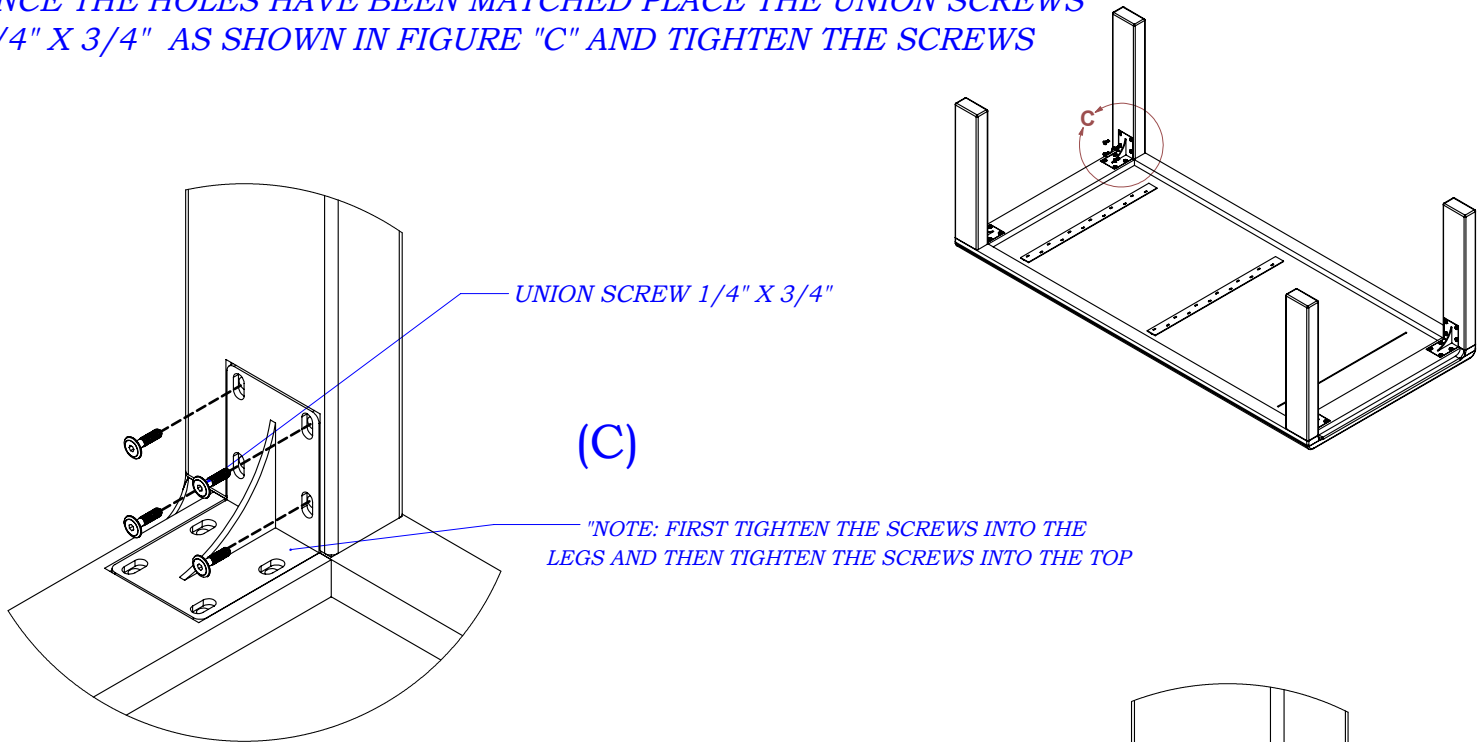

STEP 4

PLACE THE UNION SCREWS 1/4" X 3/4" INTO THE TOP AS SHOWN IN FIGURE "D" AND TIGHTEN THE SCREWS.

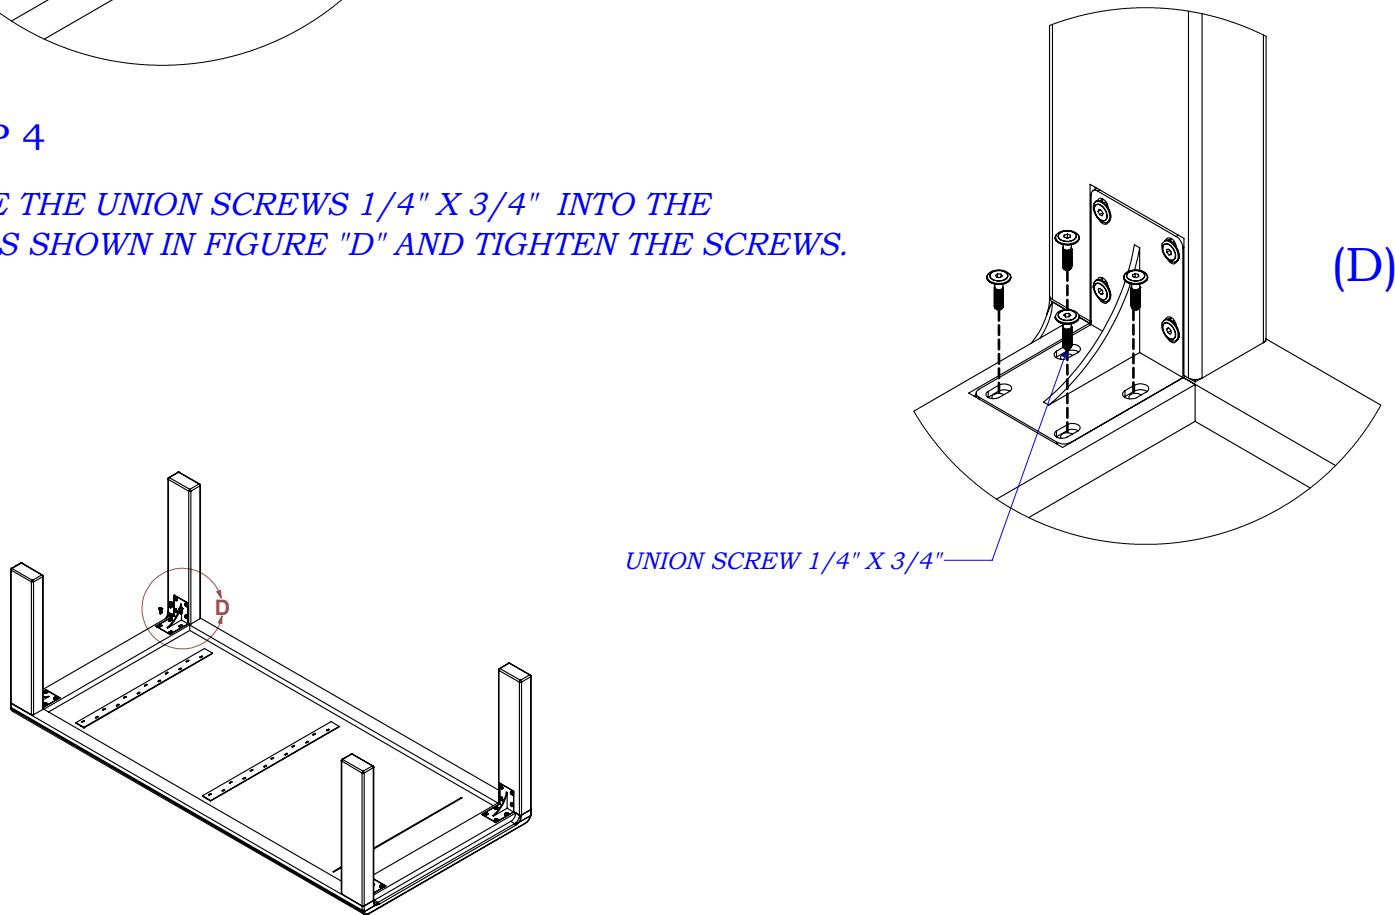

ASSEMBLING
INSTRUCTIONS

I-TBL-E027

DESCRIPTION	#
DOWEL 1/2" X 1-1/2"	12
UNION SCREW 1/4" X 3/4"	32
ALLEN KEY 5/32"	1

ITEM	DESCRIPTION	#
1PER012	TORNILLO DE MADERA 10 X 40 MM	12
1TOR038	TORNILLO PERNO UNION DE 1/4" X 19 MM	32
1HER250	LLAVE ALLEN 5/32"	1
RECUERDA QUE LOS TORNILLOS PERNO UNION SE PINTAN DE COLOR CAFE CAMELIA		



ASSEMBLING
INSTRUCTIONS

I-TBL-E027