



STEP 1

WITH SOMEONE'S HELP, PLACE THE COVER ON A FLAT SURFACE AND POSITION THE LEGS TO ALIGN WITH THE HOLES.

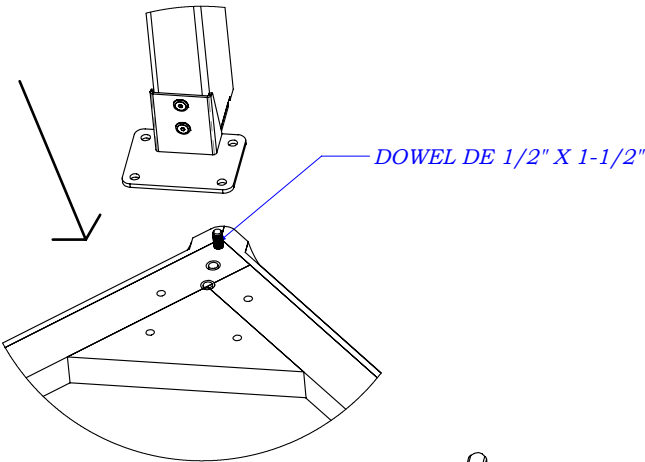


DETAIL A
SCALE 1 : 8

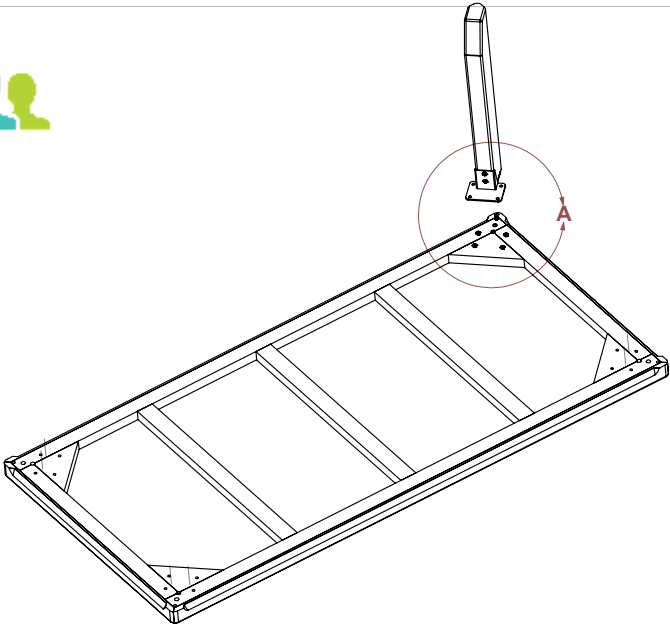


STEP 2

PLACE THE 1/2" X 1-1/2" BOLTS ON THE COVER AND ALIGN THE LEG WITH METALWORK IN THE HOLES SHOWN IN DETAIL [A].

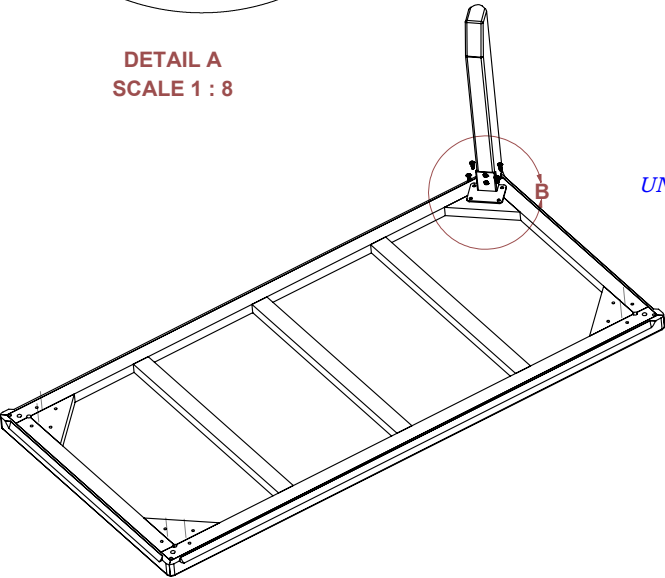

UNION SCREW 1/4" X 3/4"

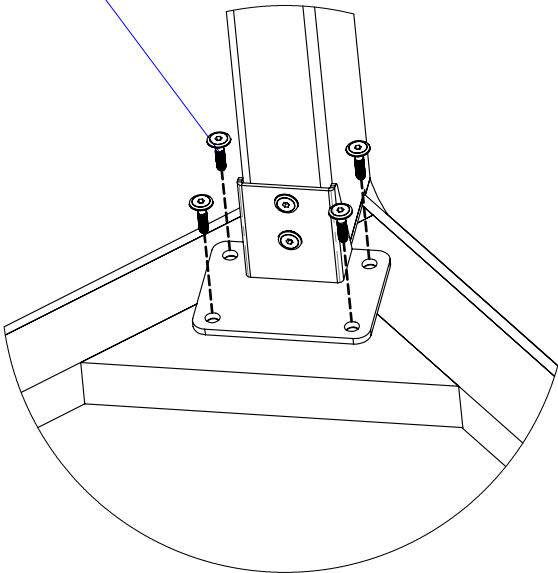

DETAIL B
SCALE 1 : 5

STEP 3

INSERT THE SCREWS, ALIGNING THE HOLES WITH THE SCREW AS SHOWN IN FIGURE B, THEN REPEAT THE PROCESS FOR THE OTHER 3 REMAINING LEGS

STEP 4

WITH SOMEONE'S HELP, TURN THE TABLE OVER AND PLACE IT IN THE DESIRED LOCATION, AND IT'S READY.



ASSEMBLING
INSTRUCTIONS

I-TBL-E028

DESCRIPTION	#
DOWEL 1/2" X 1-1/2"	4
UNION SCREW 1/4" X 3/4"	16
ALLEN KEY 5/32"	1

	DESCRIPTION	#
1PER012	PERNO DE MADERA DE 10 X40MM	4
1TOR038	TORNILLO PERNO UNION 1/4" X 19MM	16
1HER250	ALLEN KEY 5/32"	1
<p>RECUERDA QUE EL TORNILLO PERNO UNION VA PINTADO DE CAFE URBAN [OJO TODOS LOS 32 TORNILLOS]</p>		



ASSEMBLING INSTRUCTIONS

I-TBL-E028