

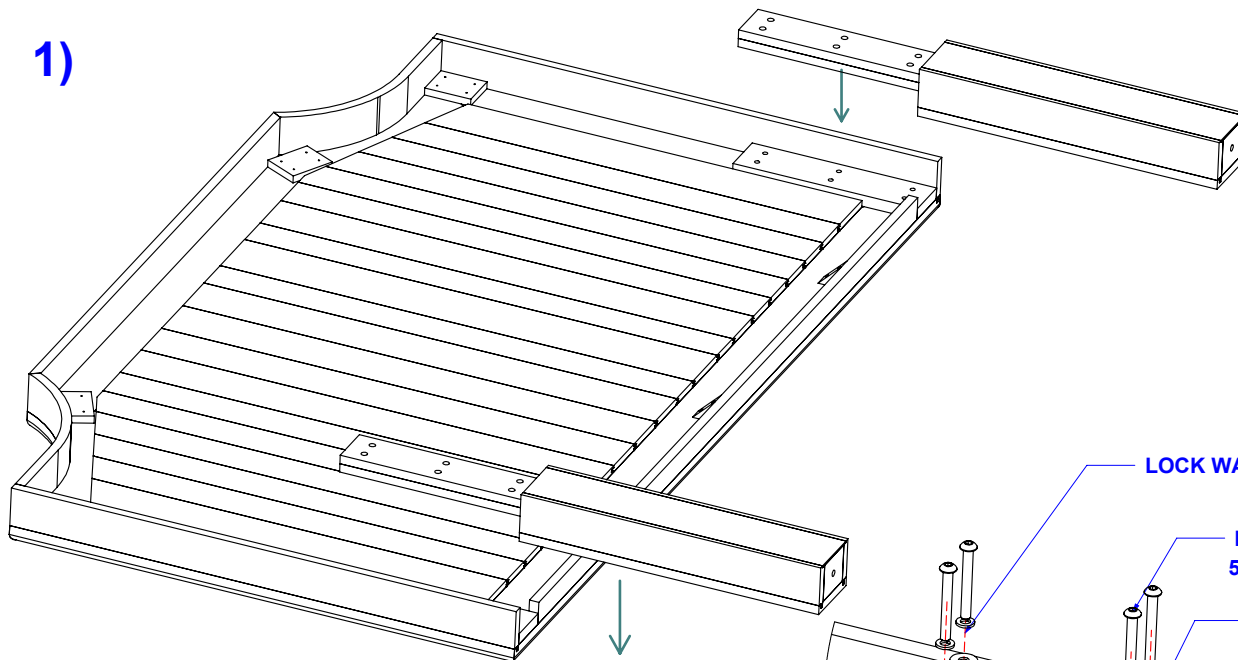



1)

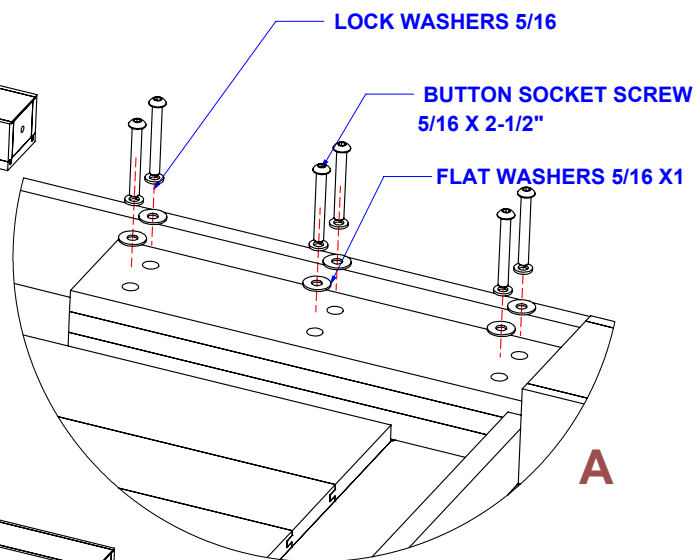

2)

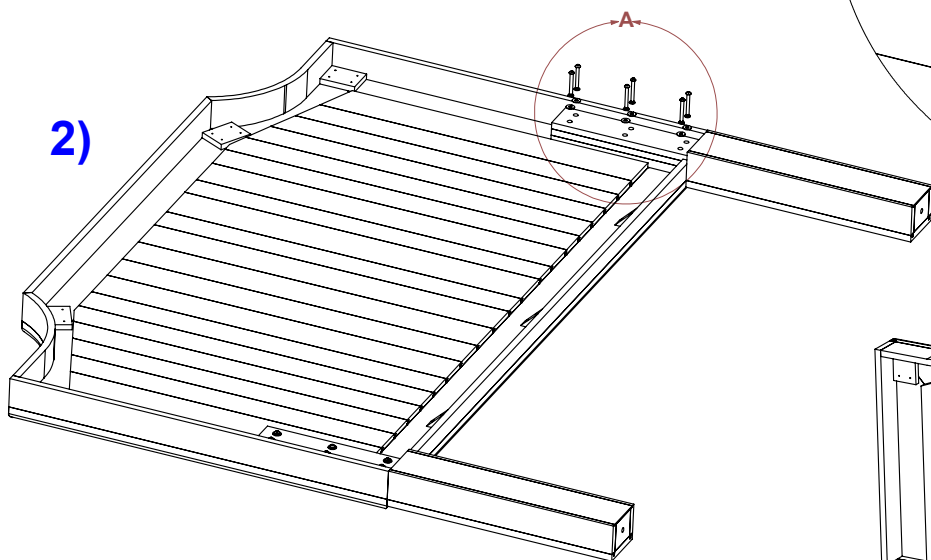

3)

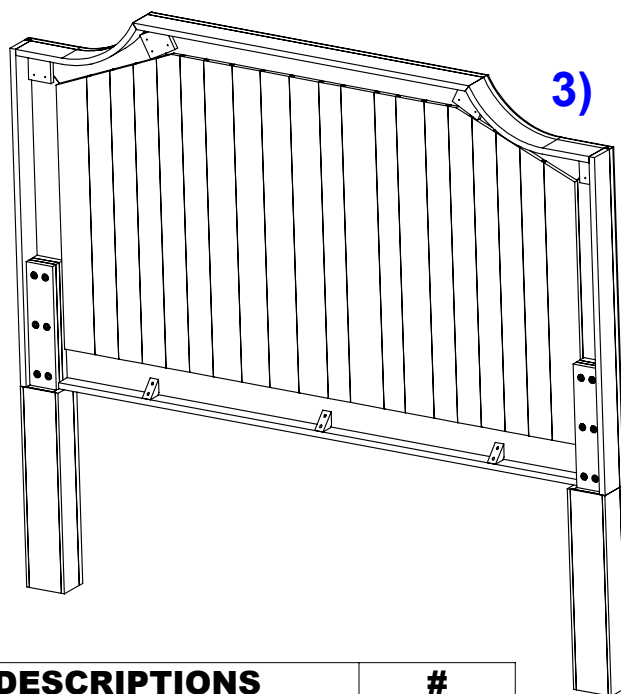

1. WITH THE SOMEONE'S HELP PLACE THE HEADBOARD IN TO FLAT AND CLEAN SURFACE AS SHOWN IN FIG.1

2. PLACE THE LEGS FROM THE BACK OF THE HEADBOARD ALIGN WITH THE HOLES AND INSERT THE SCREWS AS SHOWN IN FIG. A

3. FINALLY LIFTED THE HEADBOARD WITH SOMEONE'S HELP

ifd

INTERNATIONAL
FURNITURE DIRECT, LLC

ASSEMBLING INSTRUCTIONS

I-HBD-E009

DESCRIPTIONS

DESCRIPTIONS	#
BUTTON SOCKET SCREW 5/16 X 2-1/2"	12
FLAT WASHERS 5/16 X 1	12
LOCK WASHERS 5/16	12
ALLEN KEY 3/16	1

ITEM	DESCRIPTIONS	#
1TOR002	TORNILLO ALLEN CABEZA BOLA 5/16 X 2-1/2"	12
1RON003	RONDANA PLANA 5/16 X 1	12
1RON011	RONDANA DE PRESION 5/16 X 1	12
1HER251	LLAVE ALLEN 3/16	1



INTERNATIONAL
FURNITURE DIRECT, LLC

ASSEMBLING INSTRUCTIONS

I-HBD-E009