




STEP 1

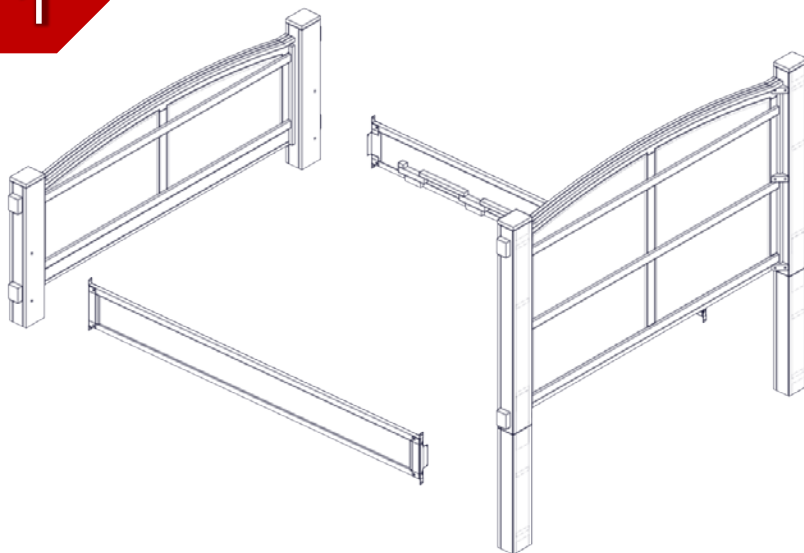


- 1.- ALIGN THE RAILS TO THE FOOTBOARD FIRST
- 2.- INSERT THE HARDWARE AS SHOWN IN FIG. 2, THEN CONTINUE TO DO THE SAME WITH THE HEADBOARD.

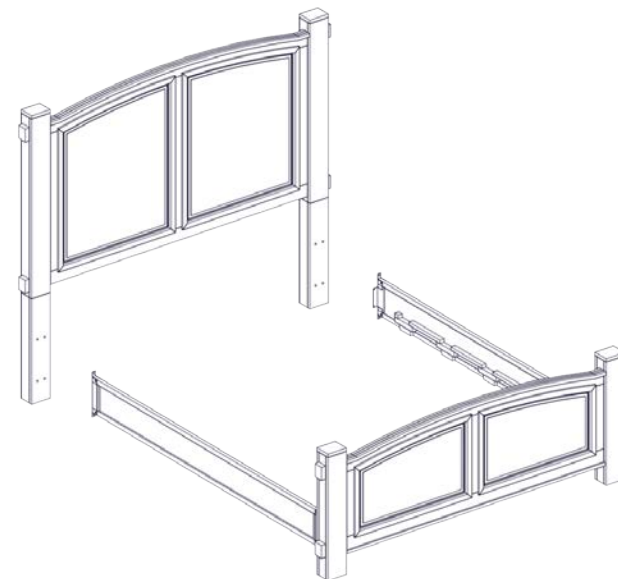

DESCRIPTION	#
SOCKET BUTTON HEAD 5/16 X 1-1/2	8
LOCK WASHER 5/16	8
PAN HEAD SCREWS 8 X 1"	8
HEX KEY 3/16	1

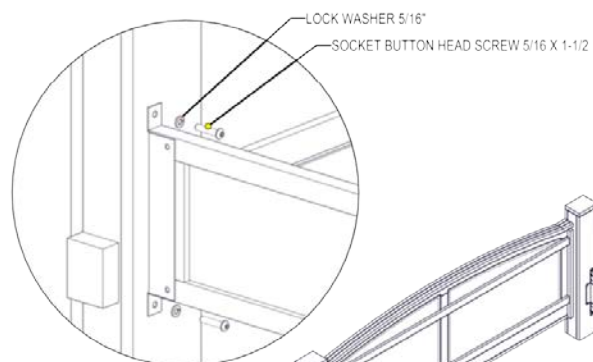

STEP 2

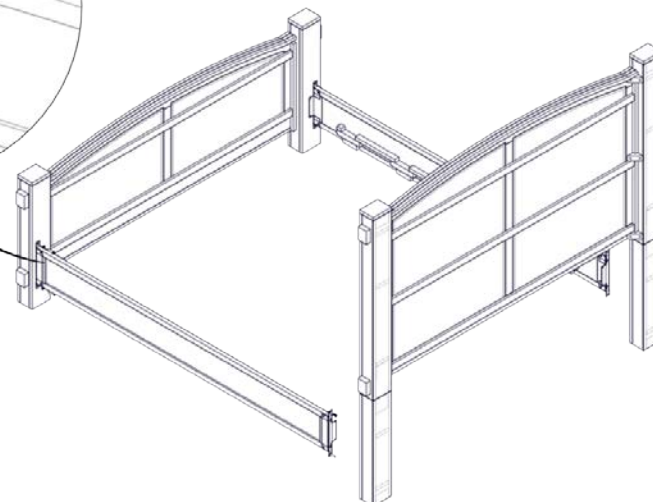


INTERNATIONAL
FURNITURE DIRECT, LLC

I-RLS-E001


STEP 3

SOCKET BUTTON HEAD SCREW 5/16 X 1-1/2"


LOCK WASHER 5/16

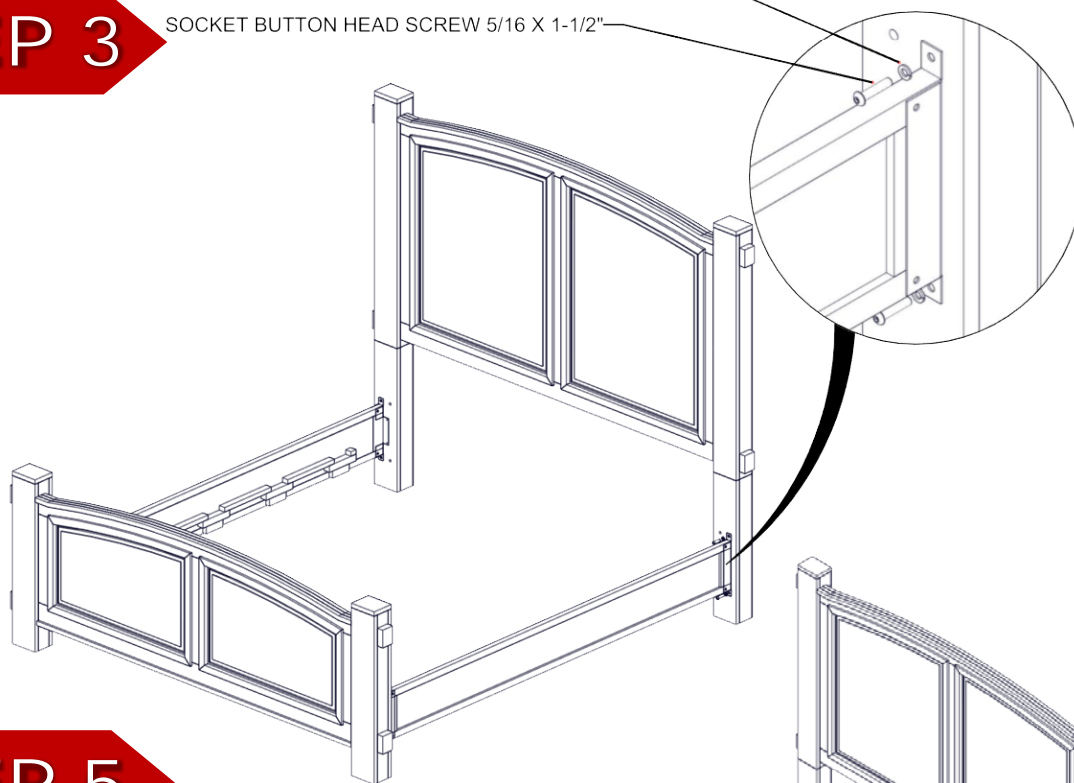

STEP 4

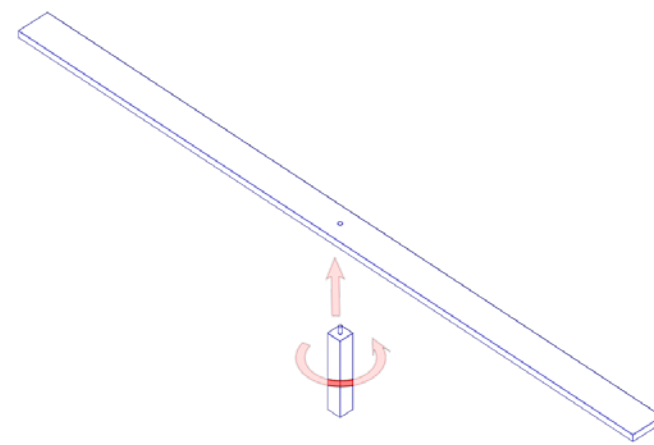

STEP 5

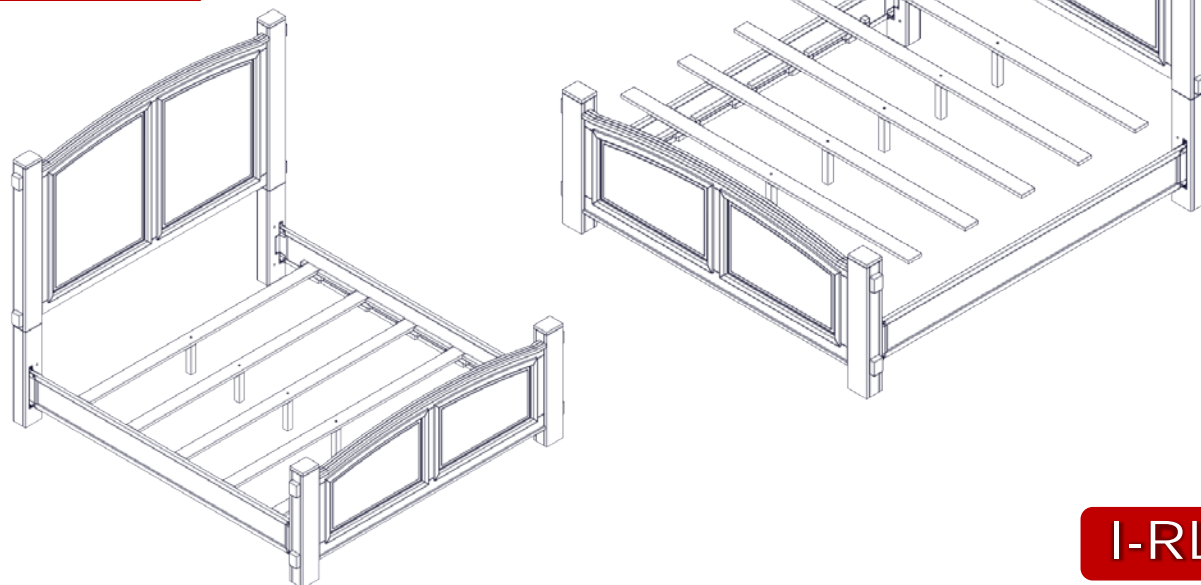

3.- ONCE THE RAILS ARE ATTACHED TO THE HEADBOARD AND FOOTBOARD, SECURE THEM BY INSERTING THE SCREWS INTERNALLY.
4.- LASTLY, INSERT THE LEGS IN THE SLATS AS SHOWN IN STEP 4 AND PLACE THEM OVER THE RAIL. SAME THAT STEP 5.

I-RLS-E001

ifd

INTERNATIONAL
FURNITURE DIRECT, LLC

ITEM	DESCRIPTION	#
1TOR005	TORNILLO ALLEN CABEZA BOLA 5/16 X 1-1/2	8
1RON011	RONDANA DE PRESION 5/16	8
1PIJ003	PIJA CABEZA SARTEN CRUZ 8 X 1"	8
1HER251	LLAVE ALLEN 3/16	1